

Clarity Matrix LCD Video Wall System with G2 Architecture Installation Guide



Copyright © 2017 by Planar Systems, Inc. All rights reserved.

Contents of this publication may not be reproduced in any form without permission of Planar Systems, Inc.

Trademark Credits

Clarity® Matrix® is a trademark of Planar Systems, Inc.

Planar® Big Picture™ is a trademark of Planar Systems, Inc.

Planar® EasyAxis™ is a trademark of Planar Systems, Inc.

Windows™ is a trademark of Microsoft Corp.

All other names are trademarks or registered trademarks of their respective companies.

Disclaimer

The information contained in this document is subject to change without notice. Planar Systems, Inc. makes no warranty of any kind with regard to this material. While every precaution has been taken in the preparation of this manual, the Company shall not be liable for errors or omissions contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

Warranty and Service Plans

Planar warranty and service plans will help you maximize your investment by providing great support, display uptime, and performance optimization. From post-sale technical support to a full suite of depot services, our services are performed by trained Planar employees. When you purchase a Planar product, you get more than a display, you get the service and support you need to maximize your investment. To find the latest warranty and service information regarding your Planar product, please visit <http://www.planar.com/support/>

ADA Compliance Statement

Some Clarity Matrix G2 models are compliant with the Americans with Disabilities Act Section 4

Manual Part Number: 020-1248-001

Contents

- Introduction 1
 - Safety Information2
 - Important Safety Instructions2
 - Important Waste Disposal Information4
 - Recommended Usage5
 - Burn-In Versus Temporary Image Retention5
 - Normal Use Thermal Guidelines6
 - Safe Handling6
 - Improper handling of the displays can cause problems like these:7
 - How **NOT** To Handle LCDs8
 - How to **SAFELY** Handle the LCDs9
 - How to Remove the Liner—Non-ERO Units 10
 - How to Remove the Liner—ERO Units 11
 - System Architecture 12
 - Planar EasyAxis Mounts, General Description 14
 - Clarity Matrix LCD Video Wall 14
 - LCD Modules 15
 - LCD Mounting Structure 17
 - Off-Board Equipment and Components 21
 - Quad Controller Module 21
 - Power Supply Module 22
 - Identifying your Power Supply Module Type 23
 - Planning for your Power Supply Configuration 23
- Installing a Clarity Matrix LCD Video Wall System with G2 Architecture 24
 - Before You Begin 24
 - Tools/Equipment List 24
 - Other Things You May Need 24
 - Safe Handling of the LCD Modules 24
 - Plan Your Installation 25
 - Calculating DC Power Requirements and Component Heat Load 26

Installation Checklist	30
Unpacking and Checking Accessories	30
Cabling and Installation of Power Supply Modules	30
Electronics Box	32
LCD Module Box	33
Accessory Box(es)	34
Accessory Kit	36
Optional Planar-Supplied Accessories	38
Wall Installation	39
Wall Installation Options	39
Installing the LCD Mount Structure	40
Mounting Brackets to a Wall	42
Installing Brackets on the First Row of a Fixed Wall	45
Installing Brackets on Subsequent Rows	47
Reconfiguring Mounts for Portrait Adjustment (Optional)	48
Installing MX46HDX Brackets on the First Row of a Fixed Wall	50
Installing MX46HDX Brackets on Subsequent Rows	52
Routing Cables	53
Routing Cables for the MX46HDX	55
Placing Off-Board Module Equipment	57
Plugging In Cables to the Off-Board Modules	57
Installation Considerations; Tips for Adjusting Walls	59
Installing the First or Bottom Row	61
Installing Second and Subsequent Rows	69
Installing the First or Bottom Row of MX46HDX Panels	70
Installing Second and Subsequent Rows of MX46HDX Panels	77
Mounting the IR Sensor	79
Connecting the IR Sensor	79
Mounting the Ambient Light Sensor	79
RS485 Quad Module Connections	79
Checking Your Connections	80
System Addresses	81
Setting the Address of Each Quad Controller Module	82
Connecting Sources	82
Quad Controller Status LEDs	83

Loop-Through	84
Configuring a Clarity Matrix Video Wall	85
Menu Settings.....	85
Basic Configuration Steps.....	85
Master vs. Slave Displays.....	85
Menus and the Remote.....	86
Navigational Menus	87
Global Menus	87
Status Menus.....	87
Local Menus.....	88
Display IDs	89
RS232 Communication	90
Connecting RS232 Cables.....	90
Matrix Layout Menu	91
Adjusting Color Balance	92
Understanding Color Temperature.....	92
Adjusting Color Temperature	92
Color Balancing Multiple Displays	93
Tips for Color Balancing.....	96
Advanced Options	98
Miscellaneous Options.....	99
Auto Color Space	100
Color Depth	100
Setting the Clock and Scheduling an Event	102
Setting the Clock	104
Scheduling an Event.....	104
Aspect Ratio Settings.....	107
Scale Mode Settings	107
Justify Settings	110
Overscan.....	110
Sharpness.....	110
Backlight Control.....	111
Auto Backlight On	112
Turn Backlight Off With No Source and (DPMS) Delay	112
Backlight Intensity.....	112
Dimmed Intensity (Backlight Control Mode is AUTO only).....	112

Ambient Threshold	112
Controlling EDID Behavior	114
Orbiter Control	116
Spreading Images Across the Wall	117
Using an External Video Processor	117
Using the Quick Configure Feature	117
Using the Matrix Layout	117
Using Planar's Big Picture	118
Zoom and Viewport	122
Zoom Menu Entries	122
Viewport Adjustment	123
Adjusting Position	125
Serial Port Settings and Diagnostics	126
Serial Port Settings	126
Serial Port Status	127
Controlling With RS232 Commands	127
Diagnostics	128
Checking Unit Status	128
Checking System Usage	129
Communicating via Network	131
Saving and Recalling Configurations	132
Advantages of Saving Configurations to Memory Slots	132
What the Memories Store	132
Global Storage	132
Memory: What Is Saved? And Where?	133
Saving Configurations	134
Changing the Name of the Memory Slot	135
Recalling Stored Configurations	136
Deleting a Configuration	138
Understanding Wall Configuration	140
Configuration Scenarios	141
Standard Cabling Scenarios	141
Standard Cabling with Restrictions on LCD Placement	149
DisplayPort Input Scenarios	154
Complex Configurations	157
Understanding the Quad Module Route Menu	159

Configuring High Resolution Inputs	161
Hardware Limitation.....	161
High Resolution Setup.....	161
Dual Link vs. Single Link	162
Cabling for High Resolution.....	163
Configuring a New High Resolution Input	163
Handling Vertical Resolutions Greater Than 2047 Pixels.....	164
Supported Resolution Summary	164
Commonly Used Big Picture resolutions	165
On-Screen Menus	166
Troubleshooting	178
Common Symptoms and How to Troubleshoot Them	182
Symptom: Black Screen	182
Symptom: Picture Is Not Displaying Correctly.....	185
Servicing.....	186
Servicing the MX46HDX	187
Specifications	189
LCD Module Specifications for MX46HDS, MX55HDS, MX46HDX	189
LCD Module Specifications for LX46HDX, MX46HDX, LX55HDX, MX55HDX	190
LCD Module Specifications for LX46HDS, LX55HDS	191
LCD Module Specifications for LX46S-3D, LX46HDX-3D	192
Quad Controller Module Specifications	193
Power Supply Module Specifications	193
LCD Optical Specifications	194
Environmental Specifications	196
Signal Compatibility	198
Input Minimum Sync and Blanking Specifications	202
Cleaning the ERO Clarity Matrix Wall	203
Required Materials	203
Silicone Removal	203

Cleaning the Glass.....	204
Matrix Drawings	205
MX46HDS Dimensions – Landscape.....	206
MX46HDS Front, Top, and Bottom Views – Landscape	206
MX46HDS Rear View – Landscape	207
MX46HDS Side View – Landscape	208
MX46HDS Dimensions – Portrait	209
MX46HDS Top and Bottom Views – Portrait.....	209
MX46HDS Front View – Portrait	210
MX46HDS Rear View – Portrait	211
MX46HDS Side View – Portrait	212
MX55HDS Dimensions – Landscape.....	213
MX55HDS Top, Front, and Bottom Views – Landscape	213
MX55HDS Rear View – Landscape	214
MX55HDS Side View – Landscape	215
MX55HDS Dimensions – Portrait	216
MX55HDS Top and Bottom – Portrait.....	216
MX55HDS Front View – Portrait	217
MX55HDS Rear View – Portrait	218
MX55HDS Side Views – Portrait	219
LX46HDS Dimensions – Landscape.....	220
LX46HDS Front, Top, and Bottom Views – Landscape	220
LX46HDS Rear View – Landscape.....	221
LX46HDS Side Views – Landscape	222
LX46HDS Dimensions – Portrait.....	223
LX46HDS Front and Side Views – Portrait	223
LX46HDS Rear View – Portrait	224
LX46HDS Side View – Portrait	225
LX55HDS Dimensions – Landscape.....	226
LX55HDS Front, Top, and Bottom Views – Landscape	226
LX55HDS Rear View – Landscape.....	227
LX55HDS Side View – Landscape	228
LX55HDS Dimensions – Portrait.....	229
LX55HDS Front View – Portrait	229
LX55HDS Rear View – Portrait	230
LX55HDS Side View – Portrait	231

LX46S-3D Dimensions Landscape (only).....	232
LX46S-3D Front, Top, and Bottom Views.....	232
LX46S-3D Rear View	233
LX46S-3D Side Views	234
LX/MX46HDU, LX46HDU-3D Dimensions – Landscape.....	235
LX/MX46HDU, LX46HDU-3D Top, Front, and Bottom Views – Landscape.....	235
LX/MX46HDU, LX 46HDU-3D Rear View – Landscape.....	236
LX/MX46HDU, LX46HDU-3D Side Views – Landscape	237
LX/MX46HDU Dimensions – Portrait	238
LX/MX46HDU Top and Bottom Views – Portrait.....	238
LX/MX46HDU Front View – Portrait.....	239
LX/MX46HDU Rear View – Portrait.....	240
LX/MX46HDU Side Views – Portrait.....	241
LX/MX55HDU Dimensions – Landscape	242
LX/MX55HDU Top, Front, and Bottom Views – Landscape.....	242
LX/MX55HDU Rear View – Landscape	243
LX/MX55HDU Side Views – Landscape	244
LX/MX55HDU Dimensions – Portrait	245
LX/MX55HDU Top and Bottom Views – Portrait.....	245
LX/MX55HDU Front View – Portrait.....	246
LX/MX55HDU Side Views – Portrait.....	247
LX/MX55HDU Rear View – Portrait.....	248
LX/MX55HDX Dimensions – Landscape	249
LX/MX55HDX Top, Front, and Bottom Views – Landscape.....	249
LX/MX55HDX Rear View – Landscape	250
LX/MX55HDX Side Views – Landscape.....	251
LX/MX55HDX Dimensions – Portrait	252
LX/MX55HDX Front View – Portrait.....	253
LX/MX55HDX Side Views – Portrait.....	254
LX/MX55HDX Rear View – Portrait.....	255
MX46HDX Dimensions – Landscape.....	256
MX46HDX Front, Top, and Bottom Views – Landscape	256
MX46HDX Rear View – Landscape.....	257
MX46HDX Side Views – Landscape	258
MX46HDX Dimensions – Portrait.....	259
MX46HDX Top and Bottom Views – Portrait	259
MX46HDX Front View – Portrait	260
MX46HDX Rear View – Portrait	261
MX46HDX Side View – Portrait	262

Drawings of Display Mounts	263
LX/MX55HDU, LX/MX55HDX, and LX55HDS – Landscape	264
LX/MX55HDU, LX/MX55HDX, and LX55HDS – Portrait.....	265
LX/MX46HDU, LX46HDU-3D, MX46HDS, and LX46HDS – Landscape.....	266
LX/MX46HDU, MX46HDS, and LX46HDS – Portrait	267
MX55HDS – Landscape	268
MX55HDS – Portrait	269
LX46S-3D – Landscape (only)	270
MX46HDX– Landscape.....	271
MX46HDX– Portrait.....	272
Dimensions of Electronic Components.....	273
Power Supply Module	273
CATX Cable.....	273
Quad Controller Module	274
Main DC Power Cable.....	275
Power Supply to Quad Power Cable.....	275
Installing Optional Accessories	276
Wall Adapter Bracket	276
Cosmetic Trim.....	278
Planar’s Technical Support Website.....	279
Downloading Additional Documentation and Firmware	279
Downloading Utility Software.....	279
Regulatory Information	280
Index	281

Introduction

The Clarity® Matrix® LCD Video Wall System with G2 Architecture uses cutting edge technology to provide a video wall solution using commercial-grade 46" and 55" full high definition (FHD) LCDs in a tiled application. The Clarity Matrix G2 utilizes cutting edge ultra-narrow bezel LCD with a combined bezel width as small as 1.7mm. The product can support up to full HD format with a 1920 x 1080 resolution per panel. All products have an aspect ratio of 1.77 (16:9). The Clarity Matrix G2 can be installed with the minimum install depth of 3.6". The system accepts a wide range of input digital signals.

The Planar® EasyAxis™ mounting system supports landscape and portrait orientation, free-standing wall deployment and flying wall applications. Because the panels are self-supporting, Clarity Matrix can support unlimited stacking height.



Caution: This manual is intended for use by qualified service persons and end users with experience installing LCD displays.

Safety Information

This display was designed with safety in mind. If you don't heed the safety warnings and cautions, you could be injured. There are safety warnings on stickers in various places in and on the display.



Important Safety Instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use any of the Clarity Matrix LCD Video Wall System with G2 Architecture products near water.
- 6 Clean the LCD screens with an LCD screen cleaner or LCD wipes.
- 7 Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- 8 Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.
- 9 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from any of the Clarity Matrix LCD Video Wall System with G2 Architecture products.
- 10 Only use the attachments/accessories specified by the manufacturer.
- 11 Unplug all Clarity Matrix LCD Video Wall System with G2 Architecture products during lightning storms or when unused for long periods of time.
- 12 In instances where a power surge has occurred and a display no longer has an image, the display power will need to be reset.

- 13** You must follow all National Electrical Code regulations. In addition, be aware of local codes and ordinances when installing your system.
- 14** Refer all servicing to qualified service personnel. Servicing is required when any of the Clarity Matrix LCD Video Wall System with G2 Architecture products have been damaged in any way, such as the AC power cord or plug is damaged, liquid has been spilled or objects have fallen into a product, the products have been exposed to rain or moisture, do not operate normally or have been dropped.
- 15** Keep the packing material in case the equipment should ever need to be shipped.
- 16** Wall mounts must be secure. The wall must be strong enough to hold all LCD modules, brackets and cables. (See "LCD Module Specifications for MX46HDS, MX55HDS, MX46HDX" on page 189.)
- 17** Slight pressure on the LCD will cause distortion of the image. Heavier pressure will cause permanent damage. Clarity Matrix LCD Video Walls should be mounted where viewers cannot touch the screen or insert small objects in the openings that will create hazards by contacting bare conductive parts.

Caution: The front polarizer is soft and subject to scratches from sharp objects.

- 18** The polarizer is a thin sheet of film laminated to the outside layer of glass on the LCD screen. Take care when handling items near the screen.

Caution: This product contains a lithium battery. There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of the battery according to the instructions on the next page.

- 19** The panels are meant to be installed electrically isolated from ground. Grounding to the building may cause issues with performance.

Important Waste Disposal Information

Please recycle or dispose of all electronic waste in accordance with local, state, and federal laws. Additional resources can be found online at <http://www.planar.com/about/green/>.

The crossed-out wheelee bin symbol is to notify consumers in areas subject to Waste Electrical and Electronic Equipment (WEEE) Directive 2012/19/EU that the product was placed on the market after August 13, 2005 and must not be disposed of with other waste. Separate collection and recycling of electronic waste at the time of disposal ensures that it is recycled in a manner that minimizes impacts to human health and the environment. For more information about the proper disposal of electronic waste, please contact your local authority, your household waste disposal service, or the seller from whom you purchased the product.



Recommended Usage

In order to get the most out of your LCD modules, use the following recommended guidelines to optimize the display.

Burn-In Versus Temporary Image Retention

Burn-in causes the screen to retain an image essentially forever, with little or no way to correct the problem. Under normal use, an LCD module will not experience burn-in, as plasma displays do, nor will it retain images in any way.

Normal use of an LCD module is defined as displaying continuously changing video patterns or images. However, LCD modules can experience *temporary* image retention when recommended usage guidelines are not followed.

What is Temporary Image Retention?

Temporary image retention (TIR) can occur when a static image is displayed continuously for extended periods of time. An electrical charge differential may build up between the electrodes of the liquid crystal, which causes a negative-color video image (color-inverted and brightness-inverted version of the previous image) to be retained when a new image is displayed. This behavior is true for any LCD device from any LCD manufacturer.

TIR is not covered under warranty. See standard warranty terms and conditions for details. Here are some guidelines to help you avoid TIR:

- Use the LCD module to show a screen saver, moving images or still pictures that change regularly. When using high-contrast images, reposition the images frequently.
- Turn off the LCD module when it is not in use. There are a few ways to do this automatically:
 - To use the LCD module's real-time clock, see "Setting the Address of Each Quad Controller Module" on page 82.
 - To use your source computer's Power Options Properties, set up your computer to turn off the display when not in use. You also need to check the DPMS checkbox and set the DPMS DELAY box in the BACKLIGHT SETTINGS menu (MAIN MENU > ADVANCED OPTIONS > BACKLIGHT SETTINGS).
 - To use RS232 commands, see "RS232 Communication" on page 90.
 - Use a remote switch connected to the power supply.

Caution: For optimal performance, we suggest turning off the power to the Clarity Matrix panels for four hours per day.

Normal Use Thermal Guidelines

Normal use of the LCD module, Quad controller module and power supply module are defined as **operating in the open air** to prevent heat buildup, and without direct or indirect heat sources such as lighting fixtures, heating ducts, or direct sunlight that can cause the modules to experience high operating temperatures. For all modules, do not block fans or ventilation openings. If the LCD module will be installed in a recessed area with an LCD surround or enclosed system, ensure adequate openings are applied for proper air flow and ventilation.


At 2000 meters or below, the maximum ambient operating temperature for the LCD module cannot be above 35° C nor below the minimum ambient operating temperature of 5° C (as measured at the surface of the screen). For the Quad controller module and power supply module, the maximum ambient operating temperature cannot be above 40° C nor below the minimum ambient operating temperature of 10° C. If one of these conditions is exceeded, it is up to the installer to ensure that module placement is changed, thermal shielding is provided, and/or additional ventilation is provided to keep the system within its nominal operating parameters. (See "Environmental Specifications" on page 196)

Cooling Requirements

For optimal performance, active cooling by the installer should be planned for when the ambient temperature of the wall is predicted to be above the specified ambient temperature for the panel. Cooling may be done behind the displays and depending on the wall configuration, it may be helpful to place air ducts (AC) at every third display tall.

Safe Handling


WARNING There are special ways to handle the Matrix displays. *Safe handling*, in this instance, means **not damaging the displays**. See below.

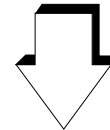

Improper handling of the displays can cause problems like these:



Line/Column defect

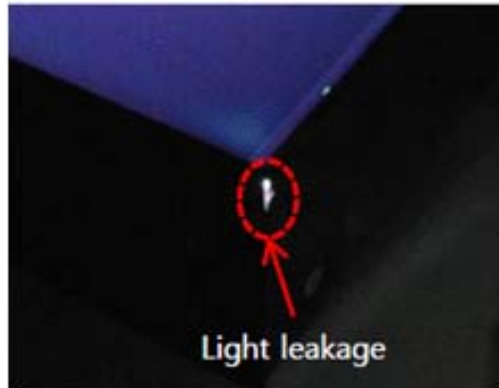


Light leakage caused by damaged corner tape



Light leakage caused by bent chassis



Million peeling away from bezel (ERO units only)

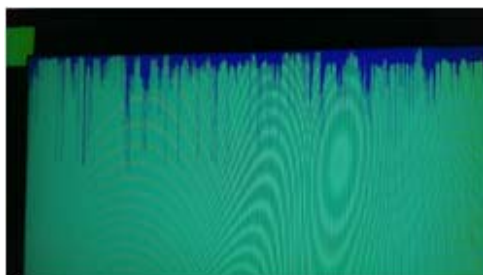

Screen bleeding caused by chipped LCD



Silicone pulling out of seams (ERO units only)

How **NOT** To Handle LCDs




Caution: Do NOT lift the display by its bag. The bag tears easily, and it might drop.



Caution: If the display must be temporarily stored out of the original packaging, do not let it stand at an angle of more than 10°.



Caution: Do not apply force to the LCD.

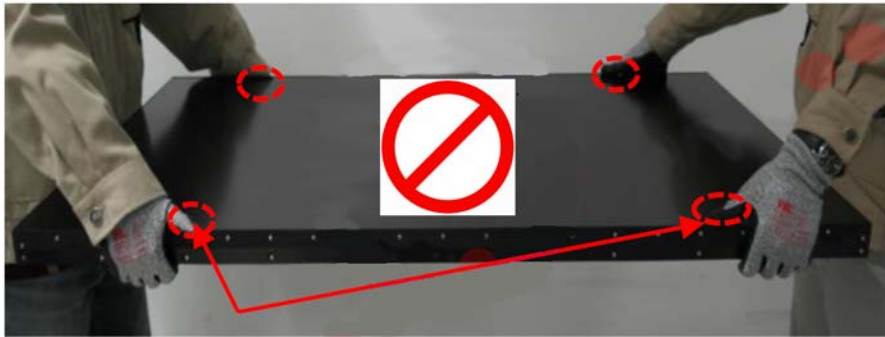

Caution: Do not carry flat. Do not put pressure on the active bezel.

Note: Models LX55HDU, MX55HDX and MX55HDU are more fragile than the other models and should be handled very carefully.

Caution: Follow these guidelines. Failure to do so can result in damage to the LCD.

- ALWAYS carry the LCD vertically by the handles (see below).
- Do NOT grip the LCD around the bezel edges.
- ALWAYS have **2** people to carry the displays. NEVER carry it alone.


How to **SAFELY** Handle the LCDs



Landscape shown


The displays should always be vertical.

Lift the units with **two (2)** people using the handles shown here. Handling the unit in any other way could cause damage to the LCD or the top chassis.

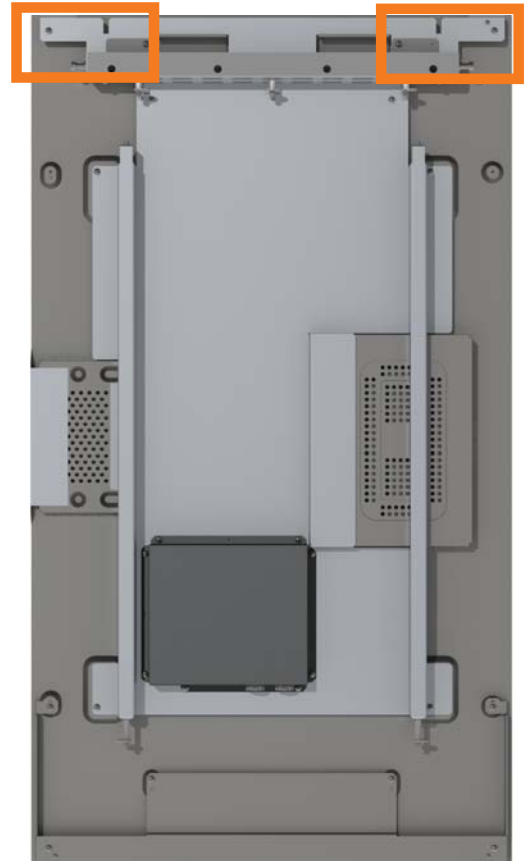


Portrait shown

How to Remove the Liner—Non-ERO Units

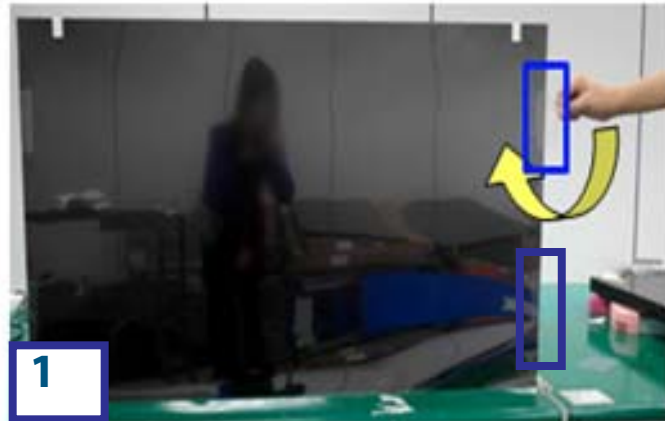

- 1 Gently peel back the clear tape from the *right* side bezel edge.

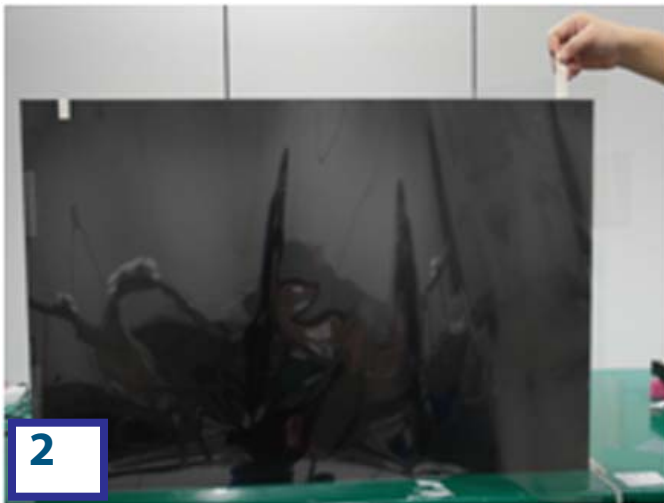


- 2 Peel back the masking tape from the *top* edge of the unit.



- 3 Gently peel back the clear tape from the other bezel edge and remove the Mylar liner.

How to Remove the Liner—ERO Units

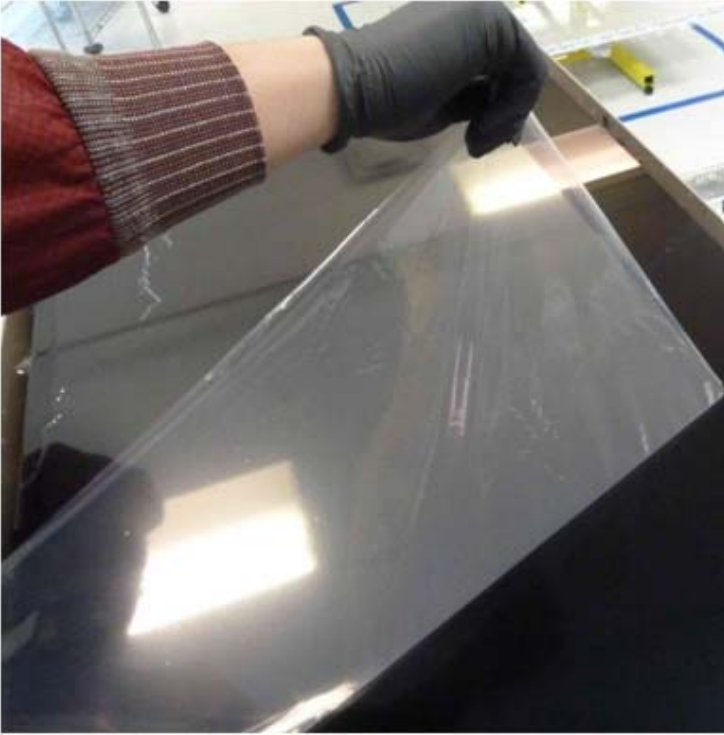


While wearing nitrile/latex gloves (which are included in the accessories kit) slowly peel the liner back over itself and off the display.

Note: A static charge is released when the liner is removed. Slow liner release reduces this charge and reduces the risk of damage to the electronics.


System Architecture

Clarity Matrix has three main electronic components: the LCD module, power supply module and the Quad controller module. The LCD module has a removable interface board, which connects to the off-board power supply and Quad controller modules. Using external modules produces less heat and allows for reduced and/or easier service of the LCD module itself.

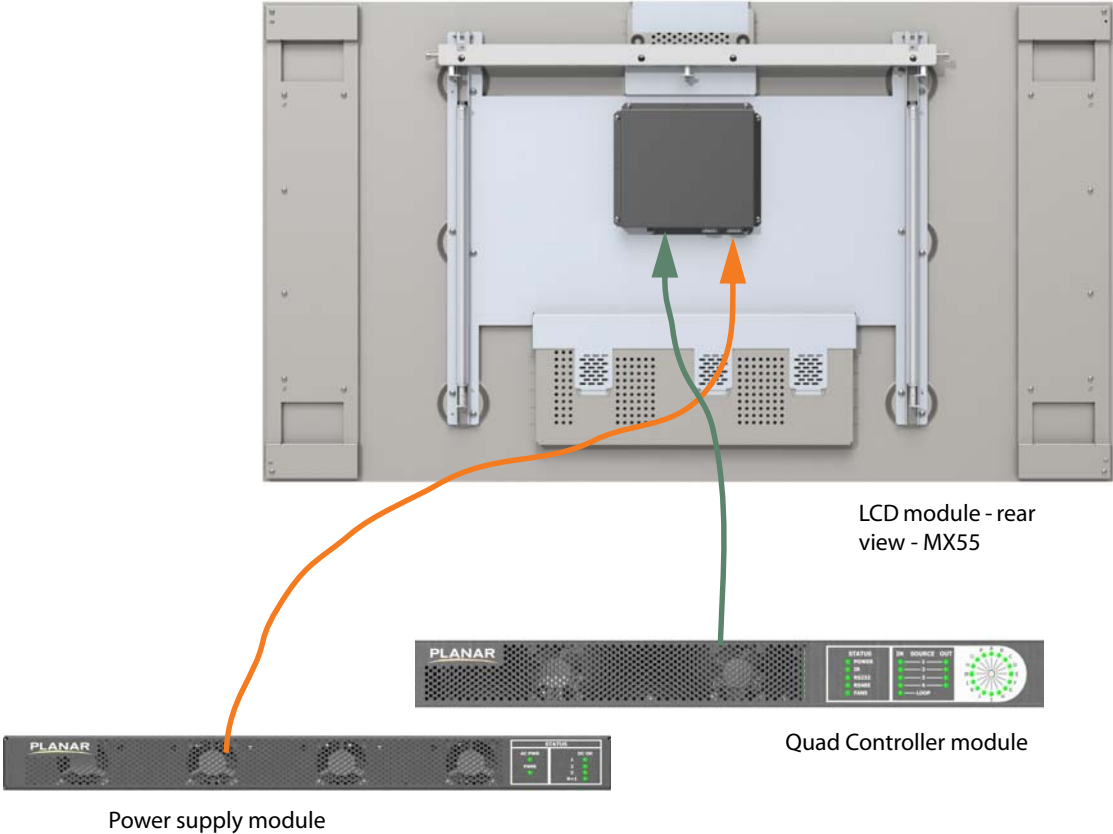

Some basic points to keep in mind:

- Each Quad controller module controls up to four LCDs
- Modules are linked together by RS485 cables
- The first processor in the A Quad controller module (A1) is the master processor
- The master processor takes in the input from the IR remote sensor and/or the host RS232 commands
- The total number of power supply modules is dependent on the different models and cable length between the rack mount components and the LCD modules.

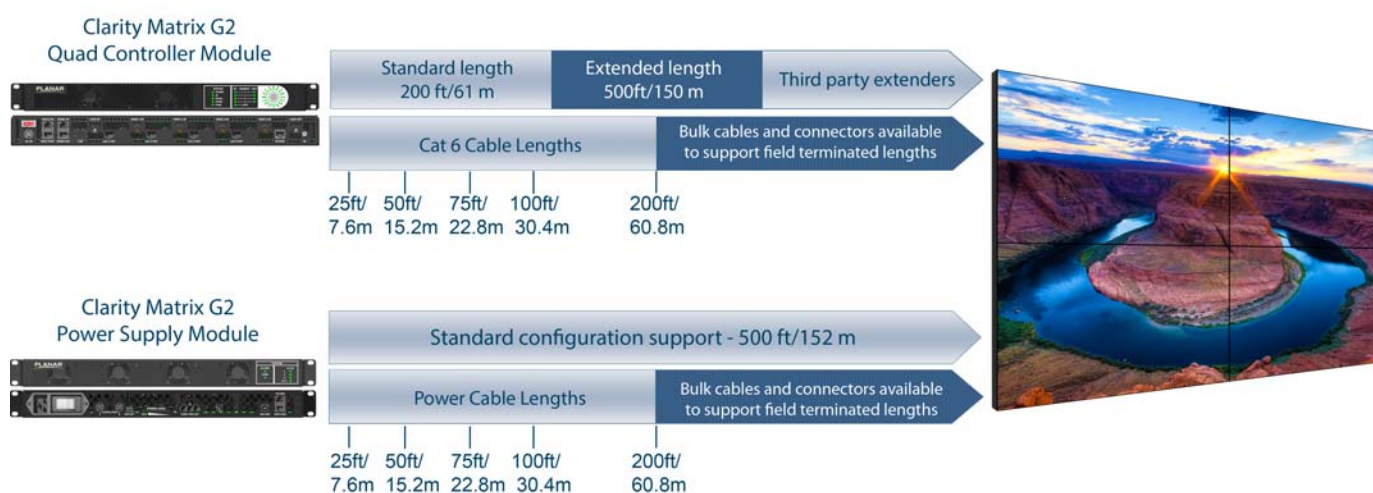


Planar recommends these cable types:

- 22-24AWG STP Cat 6A certified cables for remote data connection to displays.
- 2-conductor 10AWG wire with a measured maximum resistance of 1.07ohms/1000feet for power connections to displays.

See page 273 for the data cable drawing, and see page 275 for the power cable wiring.

The following example shows the connections for a basic video wall.

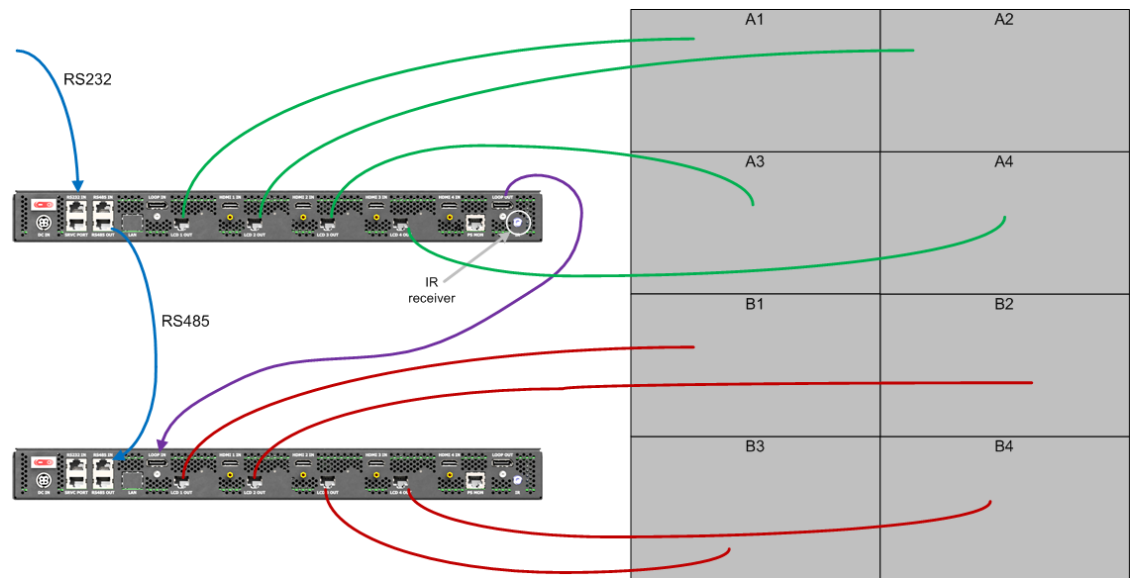

Planar EasyAxis Mounts, General Description

Planar EasyAxis mounts are included with most models and are used to secure the Clarity Matrix for display. Follow these instructions carefully.

Keep in mind the following general installation guidelines:

- Prior to installation, make sure you know where all of the mounting points are located.
- Follow all safety precautions outlined in this manual.
- Verify the parts received with the list shown in this manual.


Clarity Matrix LCD Video Wall

The Clarity Matrix can be ordered as either landscape or portrait. For customers wanting to use a third-party VESA mount, most Clarity Matrix models can be ordered without the Planar EasyAxis mount and includes a VESA standard hole pattern.


The Clarity Matrix LCD Video Wall System with G2 Architecture consists of several different modules. These are described in more detail on the following pages.

LCD Modules

The LCD module is composed of a basic LCD without a cosmetic enclosure but with a mechanical subframe for mounting. It incorporates a simple interface board designed to distribute off-board power, video and control signals to the LCD module, keeping depth, weight, heat and points of potential failure to a minimum. Most LCD modules are available with Planar® ERO™ protective glass for added protection in public spaces or for use as a touch surface. The LCD blade-style module incorporates a bracket that is perfectly paired with the Planar EasyAxis mount. The LCD module includes Planar EasyAxis adjustment cams that facilitate precise six-axis alignment ensuring uniform, minimized image-to-image gap.

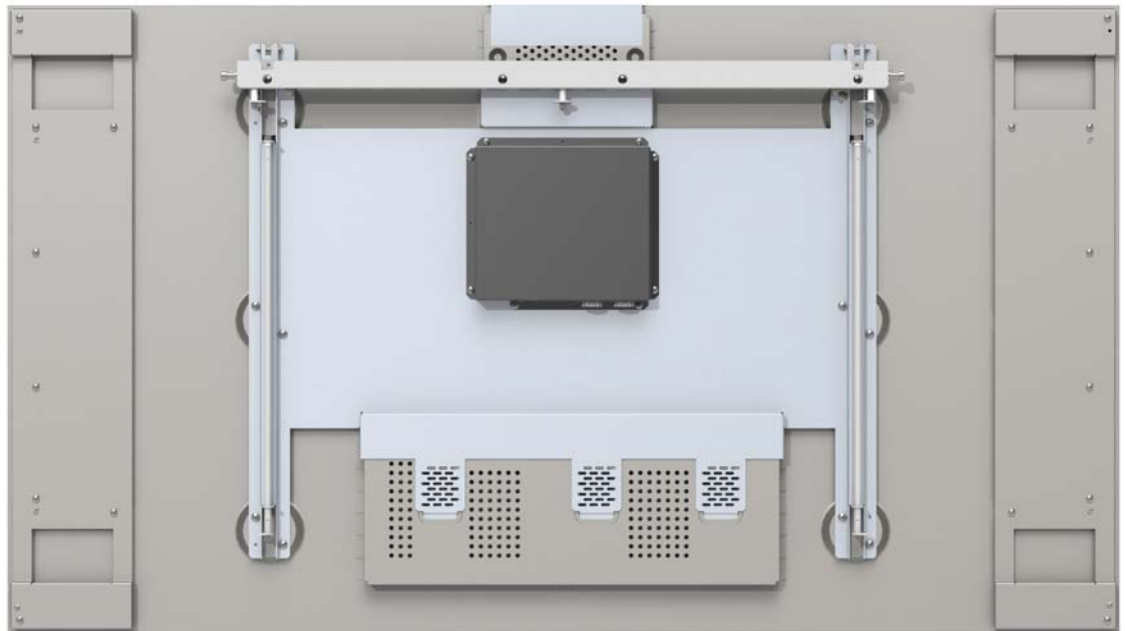

Note: This shows a rear picture of the LX/MX55.

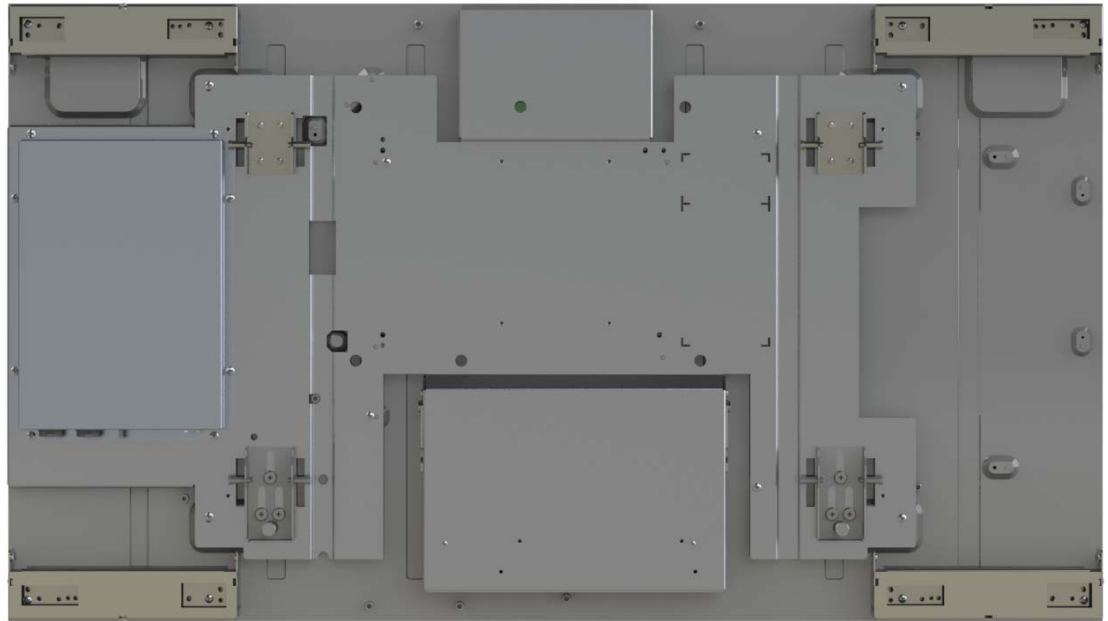


Note: This shows a rear picture of the MX46HDX.


LCD Mounting Structure

The Planar EasyAxis mounting system simplifies the task of installing and aligning the LCD modules while allowing for efficient in-wall service. Planar EasyAxis is designed to be attached to a wall, used with optional free-standing bases, or secured overhead. When assembled, horizontal and vertical connection brackets ensure that each mount is perfectly spaced from its neighbor in the video wall. The mount system also incorporates a service mode to accommodate front and rear in-wall repair of any LCD module in the video wall.


Planar EasyAxis mounts are designed to facilitate the thinnest profile LCD video wall. The combination of the mount plus the Clarity Matrix LCD module's "blade" design results in video walls that can measure 3.6 inches (91mm) in depth, screen to wall.

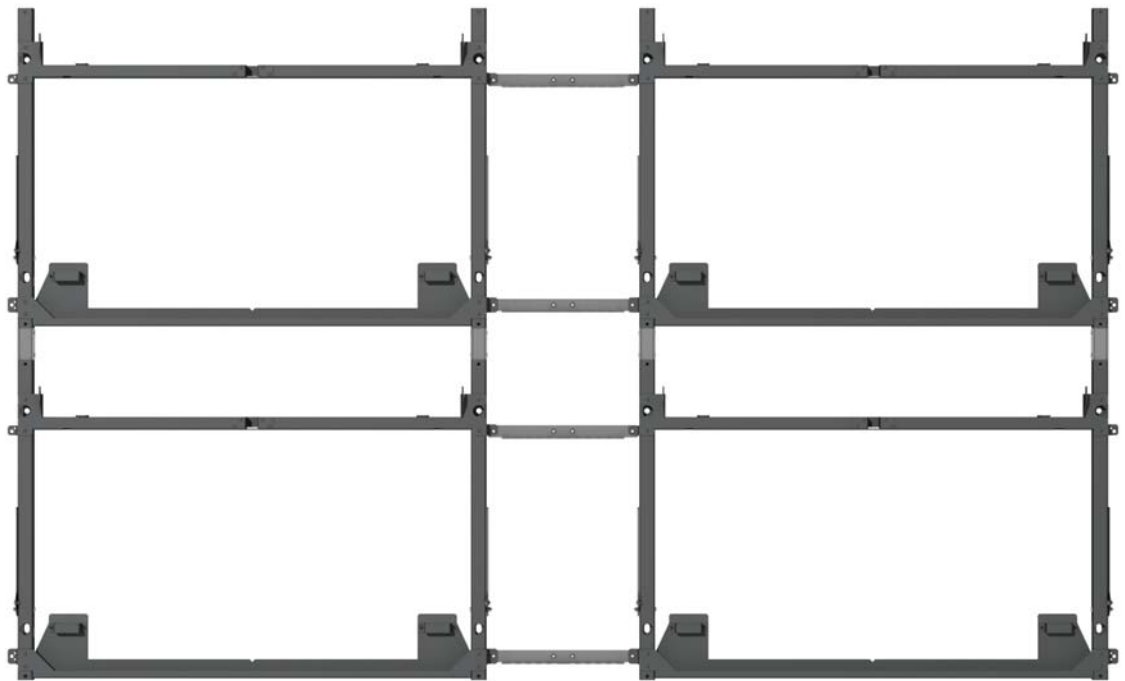


Note: This image is an example of a landscape mount 2x2 configuration.

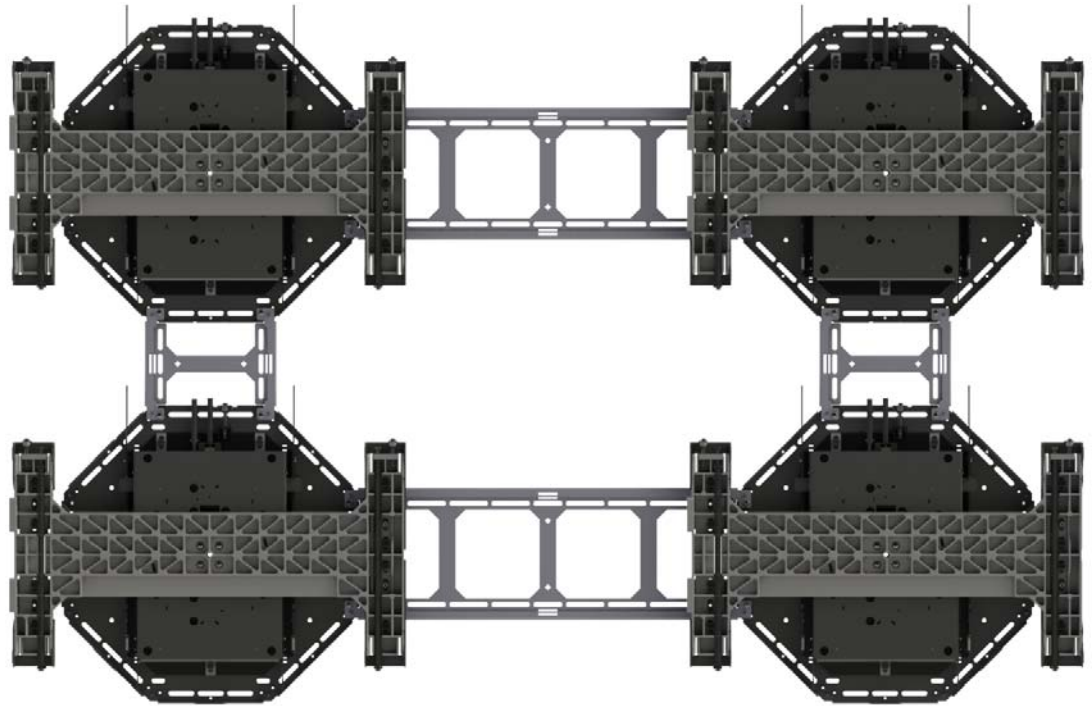

Note: This image is an example of a MX46HDX landscape mount 2x2 configuration.

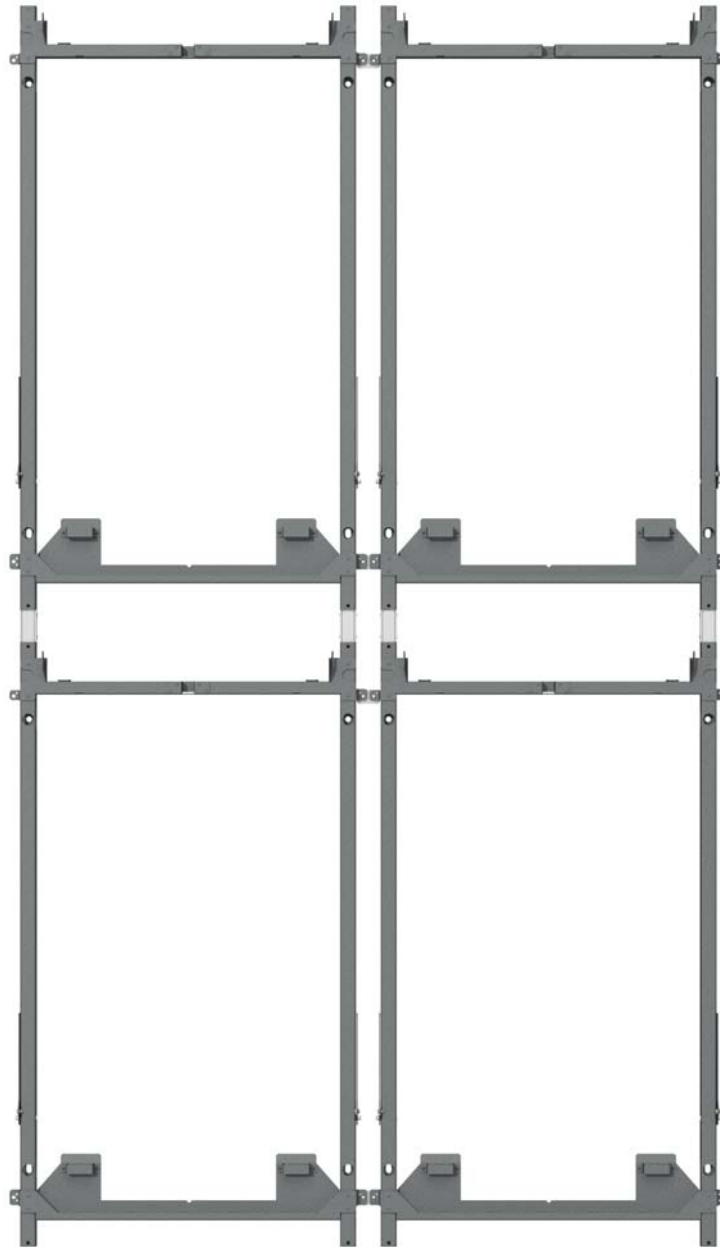

Note: This image is an example of a portrait mount 2x2 configuration.

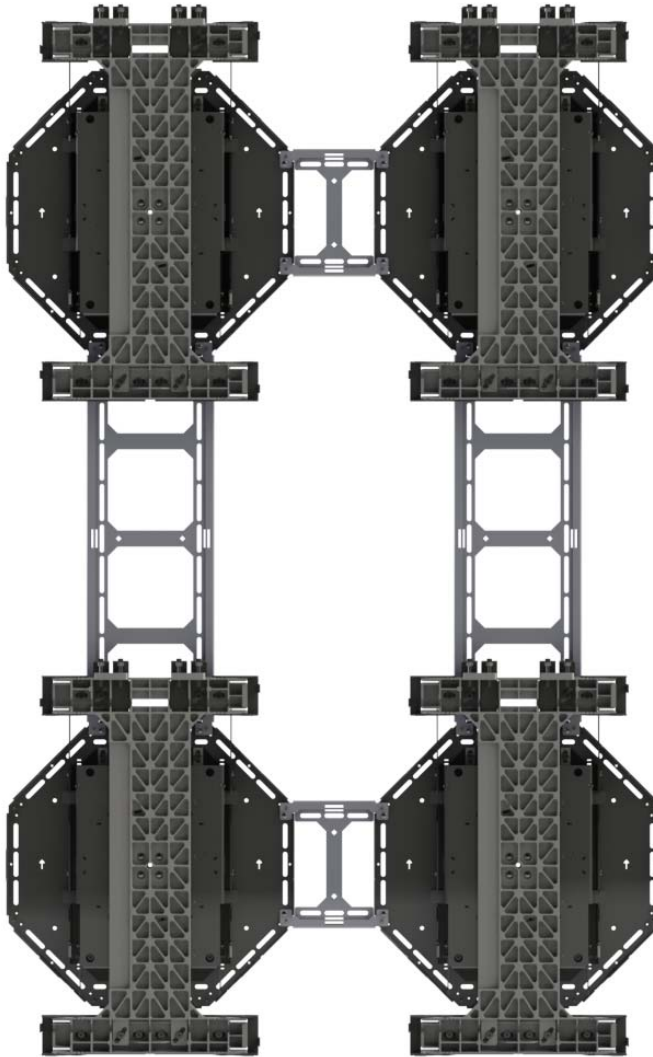

Note: This image is an example of a MX46HDX portrait mount 2x2 configuration.

Off-Board Equipment and Components

To reduce heat issues and to make servicing of the video wall easier, there are two main Clarity Matrix components that are separate from the LCD module itself. The Quad controller modules and power supply modules can be housed in an equipment rack that is typically situated away from the video wall itself.


Quad Controller Module

The Quad controller module contains four microprocessors, each of which manages the video information flowing to one LCD module. The Quad controller module routes up to five digital source inputs to the LCDs. For more information about what the different LEDs on the front of the Quad Controller module mean, see "Quad Controller Status LEDs" on page 83.

Front View




Rear View

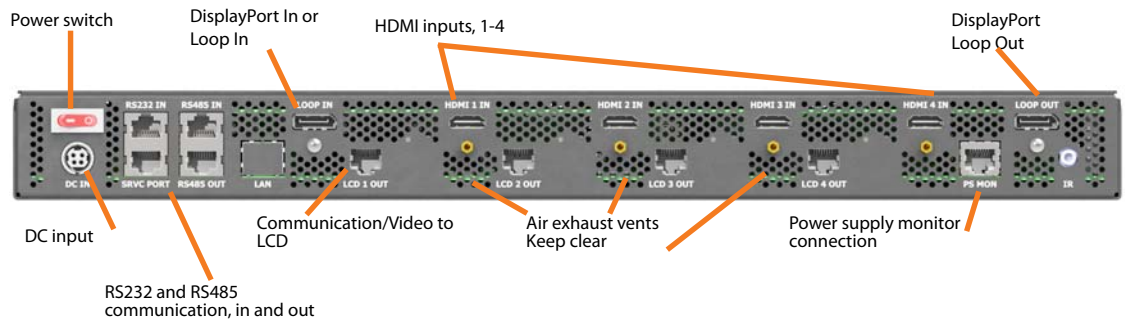


Power Supply Module

Front View

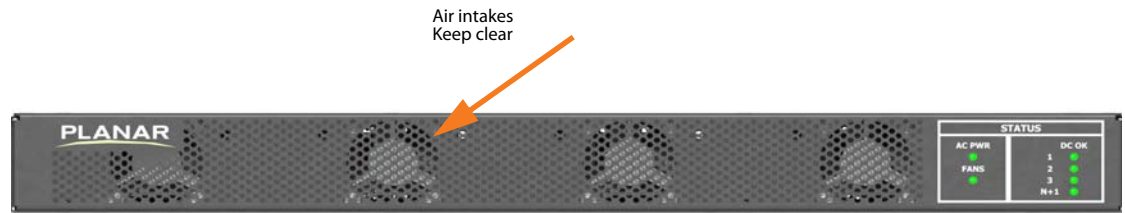

Rear View

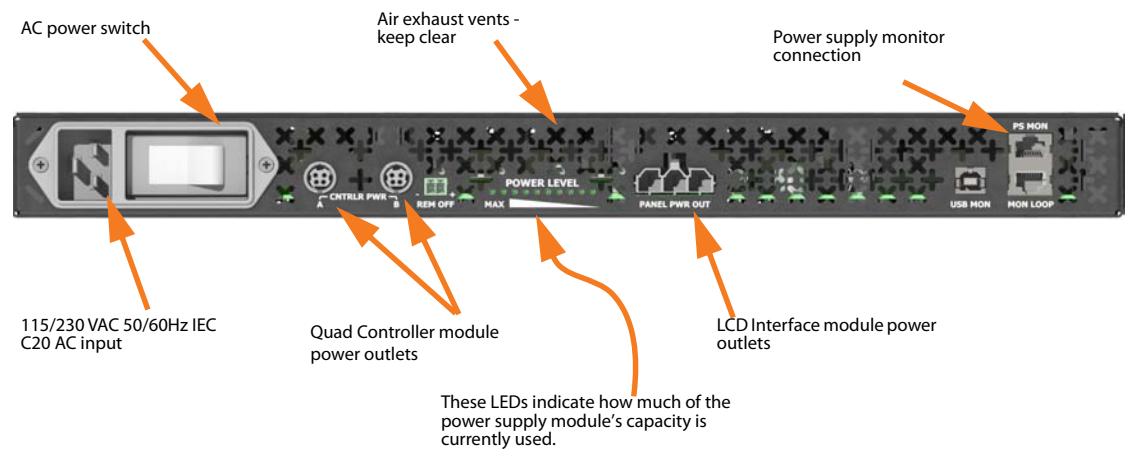

The Clarity Matrix utilizes a unique off-board power supply module. This power supply module can be conveniently placed up to 500 ft. away from the Matrix LCD module. It can power up to 2 quad controller modules and up to 8 panels with a single cable from the power supply module. The number of panels that can be driven off of a single power supply module will vary depending on the panel type and the distance in which you are running the primary power cable. The power can then be daisy chained to the number of panels specified by the configuration. The Clarity Matrix power module can be ordered to provide optional redundant power so that in the case of an internal power supply failure you will maintain operation with zero downtime.

Identifying your Power Supply Module Type

There are 2 different configurations of the Matrix G2 Power Supply Module.

Model	Description
MG2-PS3	Fully populated power supply module
MG2-PS3R	Fully populated power supply module with Redundant Option

The label located on the Power supply module will tell you which model of power supply module(s) you have. You can also determine by the LED's on the front of the power supply module.

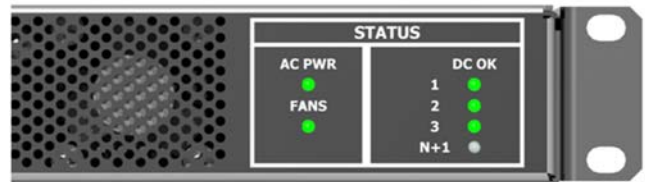
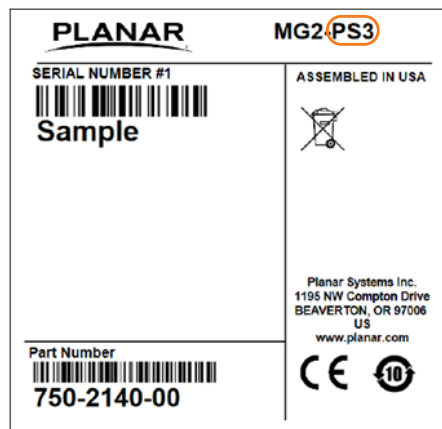


Image shows indicators for an MG2-PS3

Planning for your Power Supply Configuration

Planar has an online calculator <http://matrixcalculator.planar.com> that you should use to calculate exactly how many power supply modules you will receive for your particular configuration.

Installing a Clarity Matrix LCD Video Wall System with G2 Architecture

This section explains how to install a Clarity Matrix LCD Video Wall. We suggest that you read this entire section before you attempt to install the wall.

Before You Begin

Make sure you have all the items in the following lists before you begin unpacking and installing your Clarity Matrix LCD Video Wall(s).

Tools/Equipment List

Depending on your installation, you may need one or more of the following items:

- Drill and bits
- 8mm nut driver
- Nut drivers
- Pencil
- 3mm hex key
- M6 (#1/4-20) wrench
- String/string level
- Digital/laser level
- Ladders/lift
- Back brace
- Stud finder (if hanging LCD modules on a wall)
- Quad controller module address adjustment tool (included in your accessory kit)

Other Things You May Need

- LCD screen cleaner or LCD wipes - available at most electronics stores
- At least two capable people to lift LCD modules into place

Safe Handling of the LCD Modules

Very important notes below:

All Clarity Matrix panels are susceptible to damage through improper handling. It is important to take great care in how the units are unpacked, staged and installed. The packaging has been specifically designed to protect your LCD during the installation of the mounting system, so **they should be left in the package** until it is time for their installation.

Note: See "How NOT To Handle LCDs" on page 8 and "[How to SAFELY Handle the LCDs](#)" on page 9.

Use the handles provided to lift the units from the package. Using areas other than these features may lead to panel damage. You may support the bottom of the unit with your free hand, but most lifting should be done by the handles.

If you do *not* have an ERO enabled unit *do not* apply pressure to the front of the LCD, this pinching could break the glass or cause the glass to dislodge from the bezel.

If you must put the panel down, place it vertical to slightly tilting toward the back of the unit on one of the edges that has the narrower front bezel. Be sure the surface you are resting the panel on is flat and clear of any debris. *Concentrated points of contact will damage the LCD.* Resting on the thicker edge of the bezel will cause damage to the LCD.

If you must rotate the unit, *do not allow any weight to rest on the corner* of the LCD as this can cause damage. The corner where the two narrow front bezels meet is the most susceptible to damage. Tilting a unit toward the front may cause damage to the structure holding the glass in place.

Most LCD bezels are smooth, however some have features that can get caught on various objects and be damaged. Avoid clothing or other items which can snag on corners or edges.

Caution: *Do not* lay the panel on its face or back. This may cause the glass to become dislodged from the bezel and make it susceptible to falling out.

Plan Your Installation

You should have a detailed plan of how the Clarity Matrix LCD Video Wall is to be configured. Planar has an online calculator that can help estimate the architectural impact of your Clarity Matrix LCD Video Wall. It can calculate how many rack mount components you will receive, power consumption, heat load, dimensions, etc. You can find it online at <http://matrixcalculator.planar.com>.

Your plan should include calculations for the following:

- Floor/wall load. Make sure the floor/wall is strong enough to support the weight of the whole Clarity Matrix system.
- For passive cooling, we recommend a minimum of 8-10" of top clearance. This can be reduced if the LCD array is actively cooled.
- Ventilation and cooling requirements. Although most of the heating elements are not in the LCD itself, it is still important that you have proper cooling and ventilation for the entire Clarity Matrix LCD Video Wall and its off-board power supply modules.
- Plan your building power appropriately for your wall power consumption. See "Calculating DC Power Requirements and Component Heat Load" below for more information.
- To help your installation run more smoothly, it is highly recommended that you create a cabling diagram prior to installation.
- Cable runs - Account for how long cable runs need to be and where they will be routed. The following table shows the maximum length allowed for power and video cables.

Cable Type	Maximum Length
Power Cable	152m (500ft) Max (depends on wall configuration)
Video Cable	60m (200ft) standard 100m (330ft) optional 152m (500ft) optional at reduced resolution

Caution: For a properly functioning system, the wall structure, panels and the mounts must be electrically isolated from building installation electrical earth ground.

Calculating DC Power Requirements and Component Heat Load

The Clarity Matrix LCD Video Wall uses power loop through management for the LCD components. The power supply modules convert AC power to $48V_{DC}$ that is distributed to the basic components of the system. There are 2 different power supply modules offered for use with the Clarity Matrix LCD Video Wall.

Model	Total Output V_{DC}
PS3 / PS3R ¹	1200W

¹The "R" denotes a redundant power supply module.

Note: Each power supply module is physically capable of powering up to 2 Quad Controller modules. (See also ["Planning for your Power Supply Configuration" on page 23.](#))

One of the most important points to consider is to determine the total power consumption for the LCDs and the necessary number of power supply modules to run the configuration. We recommend that you use the online calculator at <http://matrixcalculator.planar.com> for best results. You may use the table below and the calculation examples to help determine total power consumption, if you don't have access to the link above.

Component	Model	Typical Power Consumption (W)	Maximum Power Consumption (W)	Max Heat Load at Component (BTUs/hr)
Power supply module	PS3 / PS3R		190	649.8
Quad Module	All		65	205.2
LCD	MX46HDS	163	170	581.4
	MX46HDU	153	170	581.4
	MX46HDX	124	141	522
	MX55HDS	234	240	820.8
	MX55HDU	211	230	786.6
	LX46HDS	134	140	478.8
	LX55HDS	211	230	786.6
	LX46S-3D	223	230	786.6
	LX55HDU	152	165	563.5
	LX46HDU	110	130	444.0
	MX55HDX	193	210	717.2
	LX55HDX	121	149	507
	LX46HDU-3D	153	170	581.4

When a wall configuration is ordered, the correct number and type of power modules are defined. It is important to understand the power supply capabilities and how LCD type and quantity, cable distance, Quad modules and backlight setting can affect the overall performance. The power modules have been designed to provide a complete power solution to the Clarity Matrix product, however in some cases it may make sense to isolate the Quad module power to optional power bricks that can be provided by Planar. Below are some examples of power configurations.

Example

The original parameters below were provided to Planar and the system was configured appropriately where a 1200W power supply was specified to drive the required six MX46HDS panels.

Example MX46HDS	Original Specified Configuration		Onsite Required Configuration		Planar Recommended Configuration #1		Planar Recommended Configuration #2		Possible Option (Not Recommended)	
Backlight Settings	100	PWR(W)	100	PWR(W)	100	PWR(W)	100	PWR(W)	80	PWR(W)
Panel Quantity	6	924.8	6	924.8	5	770.6	6	924.8	6	828.7
Quad Modules	2	130	2	130	2	130	2	0 (Note 2 below)	2	130
Cable Length (ft)	260	108.1	360	145.3	360	101.9	360	101.9	360	118.7
Total Power		1162.9		1200.1		1002.6		872.6		1077.5

During the planning/install it was determined that the actual power cable run needed was going to be 360ft instead of the previously thought 260ft. As you can see the total power required for the onsite configuration the power output exceeds the 1200W power supply capability driven by the 2x power load the cable places on the system compared to before. There are a few options that can be followed to alleviate the problem with going over the specified 1200W that this extra 100ft will cause.

- 1 Reducing the number of panels on the power supply removes a significant amount of power load. The last panel in this case would be powered by a purchase of an 820W power supply and an additional cable run. A new electrical outlet may be required at the install site.
- 2 Removing the load the Quad modules place on the power supply will suffice in this instance as well. Purchased power bricks can be used independently to power the Quad modules allowing the 1200W power supply to handle the cable run and panels alone. A new electrical outlet may be required at the install site.

- 3 Reducing the backlight setting to an acceptable level is another option. This requires further consultation with the factory to determine a proper value. Additionally, since the backlight setting is not locked and can be changed at any time there is a risk the value may be changed causing stress on the system and reduced lifetime or a non-functional system.

The cable power load is calculated using the following equation. Note: The cable resistance number is for Planar supplied power cables, if customer supplied cables are used, this number will need to be updated and may cause previous power calculations to be void. LCD power is the total panel power connected to the cable and is backlight dependent.

$$P_{(cable)} = (P_{(LCD)}/48)^2 * .00214_{(cable\ resistance)} * \text{desired cable length in feet}$$

The power supply comes with some added features to help installation and maintenance of the system.

- 4 During the installation, you can use the power meter located on the back of the power supply module to verify that you have correctly cabled the video wall. The backlight intensity setting will affect the overall power load so make sure that you have adequate head room if adjusting the backlight intensity to near Max brightness. Conversely, you can lower the power level by reducing the backlight. If the Power level LED's are flashing that means that the system load is too much and needs to be re-cabled.



Power level is good and can add more panels.

Power level is good, but approaching limit

Power level at limit; lifetime may be affected.

- 5 There is a PS monitor and PS monitor loop input/output connectors. These are used to remotely monitor the power supply health through a system connected to the master Quad module RS232 port. The power supplies should be connected as described in Placing Off-Board Module Equipment on page 57.
- 6 The power supply also comes with a remote on/off trigger that can be connected to a control system or a simple ON/OFF switch. This trigger will put the power modules in a standby mode and shut down all connected equipment. If more than one supply is in the system, it is required that the PS monitor cables are connected to all the power supplies in order for this function to work properly.

Installation Checklist

Use this quick checklist as a guide to ensure you have performed the installation steps in the correct order.


- 1 Unpack and install the LCD mount brackets.
- 2 Install Quad controller modules and power supply modules.
- 3 Run cables between LCD mount and brackets.
- 4 Install LCD modules.

Unpacking and Checking Accessories

Cabling and Installation of Power Supply Modules



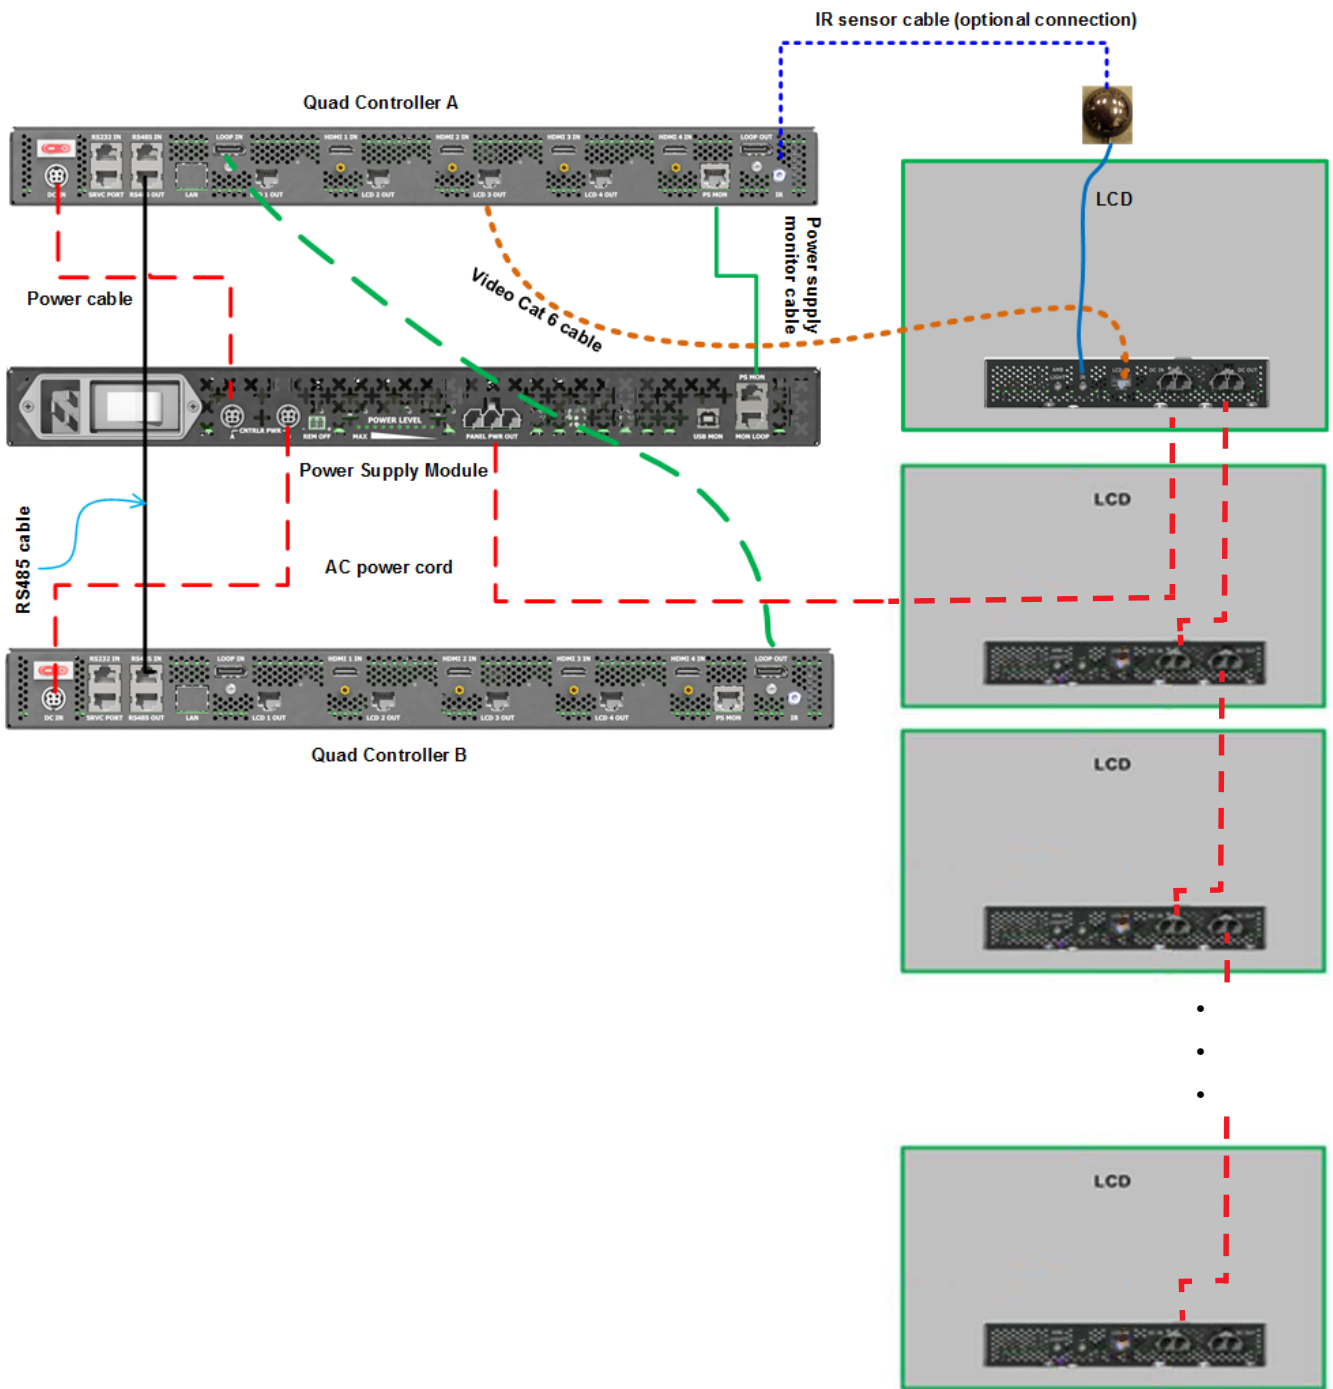

Proper system cable connection is paramount to ensuring optimum output from your configuration. Below is a typical connection scenario.

Note: Proper system cable connection is paramount to ensuring optimum output from your configuration. Below is a typical connection scenario.



Electronics Box

The following items are included in the electronics box.

Part	Description	Per Quad/Power Supply	Picture
Quad controller module	Routes up to five (5) digital source images to the LCDs.	1	
Power supply module	Supplies power for up to eight (8) LCDs and two (2) Quad controller modules. Number of panel depends on model type and cable lengths.	1	
RJ45 to RJ45 patch cable (1m)	One cable connects the Quad controller module to the power supply module. The other cable connects one Quad controller module to another.	2	
Power cable (4ft)	Connects the power supply module to the Quad controller module.	1	

Note: It is highly recommended that you use the cable label maker to identify each cable before it is installed.

LCD Module Box





The following items are included in the LCD module box.

Part	Description	Picture
LCD module	1 or 2 per box depending on your order. Caution: Do not remove the LCD from its case yet.	
LCD mount	1 or 2 per box depending on your order.	

When it is time to remove the LCD module, see "How to SAFELY Handle the LCDs" on page 9.

Accessory Box(es)




The following items are provided in the larger accessory box, which also contains the accessory kit box. The contents of this box are described below.








Part	Description	Number	Picture
Vertical bracket	Secures the LCD mount.	Depends on configuration requirements.	
Horizontal bracket (landscape)	Secures the landscape LCD mount.	Depends on configuration requirements.	
Horizontal bracket (portrait)	Secures the portrait LCD mount.	Depends on configuration requirements.	
Long bracket (MX46HDX only)	Secures the LCD mount.	Depends on configuration requirements.	

Part	Description	Number	Picture
Short bracket (MX46HDX only)	Secures the LCD mount.	Depends on configuration requirements.	
AC power cable (3m)	Depending on your order, the cable will be for use in North America or Europe.	1 per power supply module	
Power cable (various lengths depending on order); standard cable may be replaced by optional self-terminated cable	Connects the power supply to a display. (These are plenum rated.)  PS end  LCD end	1 per power supply	
Power cable (8ft); standard cable may be replaced by optional self-terminated cable	Loop-thru for power from one display to another.  Same at both ends	1 LCD	
DisplayPort cable (3ft)	Connects between Quad Controller and LCD module	1 per Quad Controller	

Accessory Kit

The following items are included in the accessory kit, which is inside the larger accessory box.

Part	Description	Number Included	Picture
Gloves	Used to handle LCDs.	2 pairs	
Remote Control	<p>Note: To use the remote, you must aim it at the IR Sensor, not the LCD screen.</p>	2	
Installation manual (on a USB drive)	Provides detailed setup and configuration information. (You are reading it now.)	1	

Part	Description	Number Included	Picture
IR sensor	<p>Connects to Quad controller module A or LCD Module A1. Mount in a convenient location near your wall. Typically, this might be near the master (A1) display.</p> <p>Length is 3m; can be extended up to 30m</p> <p>Note: Keep in mind that you need to point the remote control <i>at the IR sensor</i>, not the display.</p>	1	
Remote switch	Plugs into Power Supply; add your wiring to turn on/off all Power Supply Modules.	1 per wall	
Cable labels	Used to help you identify each cable.	1 dispenser of 150 labels	
150mm assembly and alignment tool	Used to align modules. Not in MX46HDX accessory kits.	2	
270mm assembly and alignment tool	Used to align modules. Not in MX46HDX accessory kits.	2	
150mm assembly and alignment tool (MX46HDX only)	Used to align modules.	2	
Quad controller module address adjustment tool	Used to set addresses of Quad controller modules.	2	

Optional Planar-Supplied Accessories

Make sure you have the following optional Planar-supplied items as needed to complete your installation:

- Curved brackets
- WallNet (Integrated WallNet is an option for the Quad Controller)
- Wall adapter bracket (see "Wall Adapter Bracket" on page 276)
- Floor stand
- Outer edge/rear cosmetic trim (see "Cosmetic Trim" on page 278)
- RS232 cables to link an external controller to the Quad controller module
- Cat 6 – (STP video cables) Length varies per wall depending on configuration requirements and your sales order.
- Power cable - Connects the power supply module to the LCD. Length varies per wall depending on configuration requirements and your sales order.
- Bulk cables for on-site termination. See "Matrix Drawings" on page 205 for detailed terminal information.
- Separate AC power supply to power the Quad Controllers directly.
- Ambient light sensor
- Clarity® Matrix® MultiTouch LCD Video Wall System (information can be found in the *Clarity Matrix MultiTouch LCD Video Wall System User Guide*)
- Clarity® Matrix® Fiber Video Extension (information can be found in the *Clarity Matrix Fiber Video Extension User Guide*)

See "Installing Optional Accessories" on page 276, if you have these.

Note: For Clarity Matrix MultiTouch systems, it is highly recommended that the wall installation guidelines for flatness be followed for best performance.

Wall Installation

Before you start building your wall, keep the following points in mind:

- A structure that is plumb and flat will greatly reduce issues with mounting and alignment of the Clarity Matrix system.
- Brackets are to be installed first - do not remove LCDs from their boxes until the entire wall of brackets is installed, level and plumb.
- When hanging the mounting bracket and displays, start with the center and work out and up.
- After each row of brackets and displays is built, check it for level and plumb.
- All brackets in a row should be level with the bracket next to it within $\pm 0.1^\circ$. Each bracket should be square with the level surface by $\pm 0.05^\circ$. Bracket wall planarity should not exceed $\pm 0.5\text{mm}$. For larger walls, we recommend you assure that the accumulation of tolerances will not prevent you from positioning the LCD panels.
- It is important that you check communication between the LCD modules as you build each row! This will help minimize changes once your wall is fully installed.
- For optimal product performance, maintain components within temperature specifications. Occasional temperatures out of specification are acceptable for a short period of time.
- For touch walls, ensuring the wall is flat will greatly improve performance.


Wall Installation Options

There are three main types of Matrix installations:


- Standard installation - mounted to a wall (see "Mounting Brackets to a Wall" on page 42)
- Column floor stand - maximum of 2.15m (7 feet) without additional support
- 2 x 2 free-standing mount (46L only)

Installing the LCD Mount Structure


Planar EasyAxis mounts are designed to facilitate the thinnest profile LCD video wall. The combination of the mount plus the Clarity Matrix LCD module's "blade" design results in video walls that can measure 3.6 inches installed depth, screen to wall.

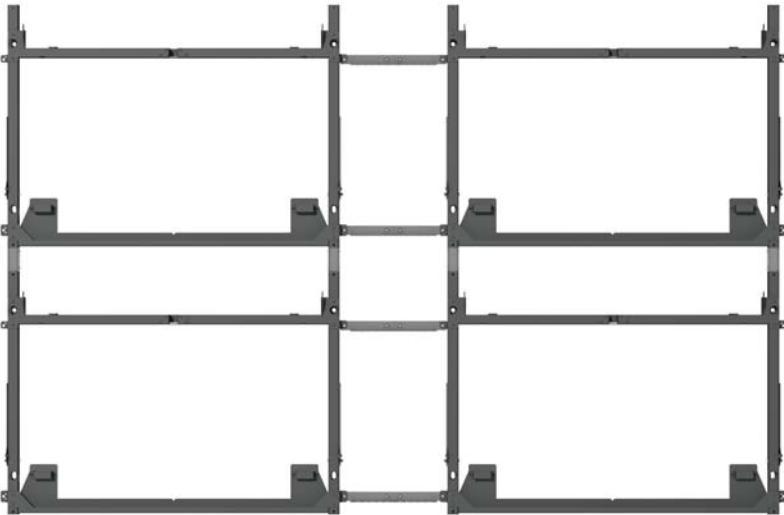


Landscape Mounting

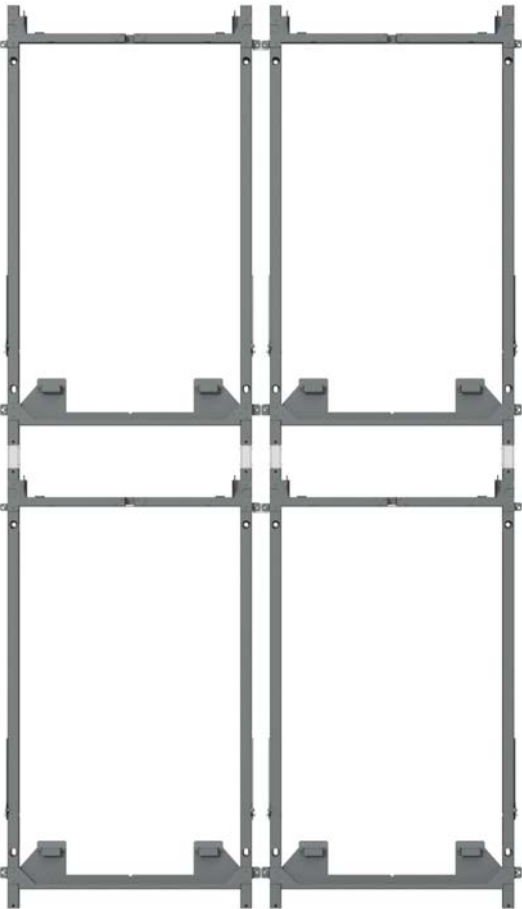

Portrait Mounting

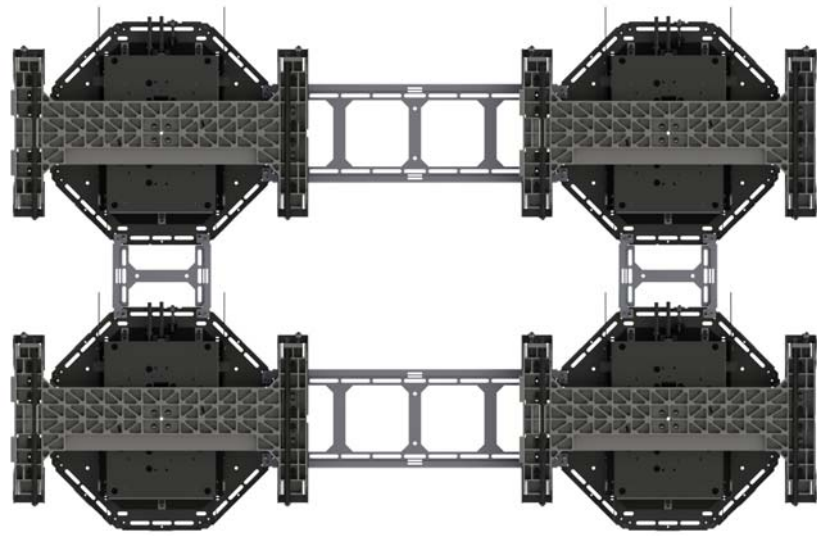

Landscape Mounting (MX46HDX)

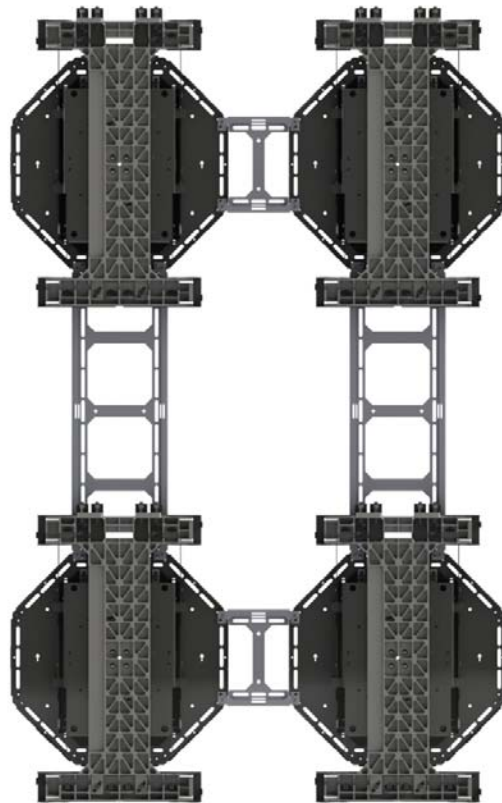


Portrait Mounting (MX46HDX)





Mounting Brackets to a Wall

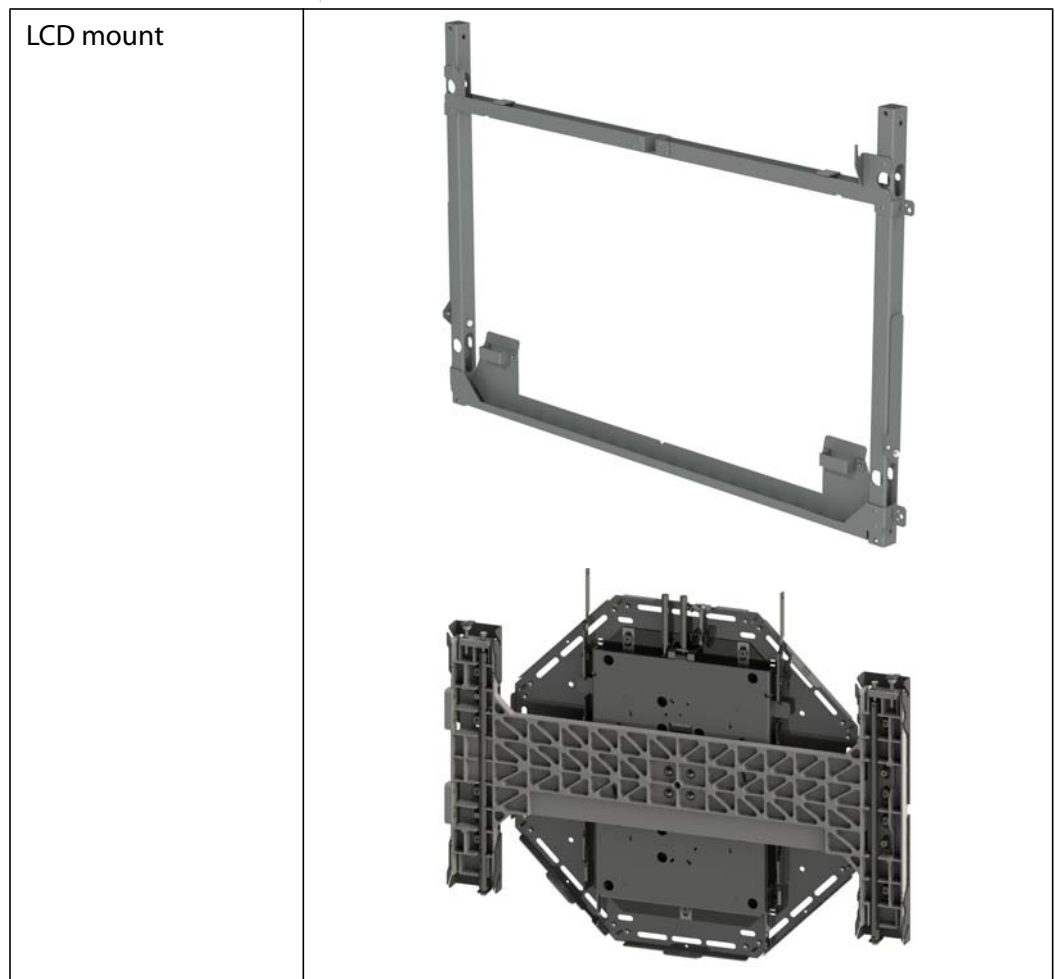

The basic concept of mounting brackets to a wall is to start from the center of the wall and build out the first row. It is recommended that the wall is a flat surface. If the wall is not flat, you will need to insert shims in between the LCD mounts and the wall.

Caution: For whatever structure is used to mount the LCD wall, be sure that it is sufficiently engineered to handle the weight of the LCDs.

There are three standard brackets that are used for wall installation. An optional stud adapter bracket (landscape only) can also be used if you are not mounting to plywood and want to mount to studs in a wall. The stud adapter bracket is not necessary for MX46HDX installations.




<p>Horizontal bracket (landscape)</p>	 <p>Note: If you have protective optically bonded glass, the brackets used will be yellow.</p>
<p>Horizontal bracket (portrait)</p>	 <p>Note: If you have protective optically bonded glass, the brackets used will be yellow.</p>
<p>Vertical bracket</p>	 <p>Note: If you have protective optically bonded glass, the brackets used will be yellow.</p>
<p>Long bracket (MX46HDX only)</p>	 <p>Note: If you have protective optically bonded glass, the brackets used will be yellow.</p>

<p>Short bracket (MX46HDX only)</p>	 <p>Note: If you have protective optically bonded glass, the brackets used will be yellow.</p>
<p>Wall stud adapter bracket (optional)</p>	

Installing Brackets on the First Row of a Fixed Wall

- 1 Remove the LCD mounts from the LCD module boxes. Set aside the boxes with the LCD modules still in them for later installation. Unpack the horizontal/vertical brackets and hardware from the wall accessory box(es).
- 2 Use the drawings that correspond to your product. (See "[Matrix Drawings](#)" on [page 205](#).)
The LCD mounts are designed to mount with either four M6 or #1/4-20 hardware and a washer.
- 3 Determine the vertical center of your wall and then find the location of the closest display to this position.
- 4 Mark on the wall vertically where the center of that display will be. Using a pencil, make horizontal line where the bottom center bracket will be. Use a string or laser level to continue the line for the rest of the desired wall. This will help maintain a level row as you progress installing the LCD mounts.
- 5 To pre-determine the proper mount points for the LCD mount, measure out or use a template. Then loosely attach the LCD mount.
- 6 Using a level (a digital one is highly recommended), level the bracket as you keep in mind the string or laser level at the bottom.
- 7 Align the v-shaped notch on the LCD mount with the desired center of the LCD (this is done for the first bracket only).

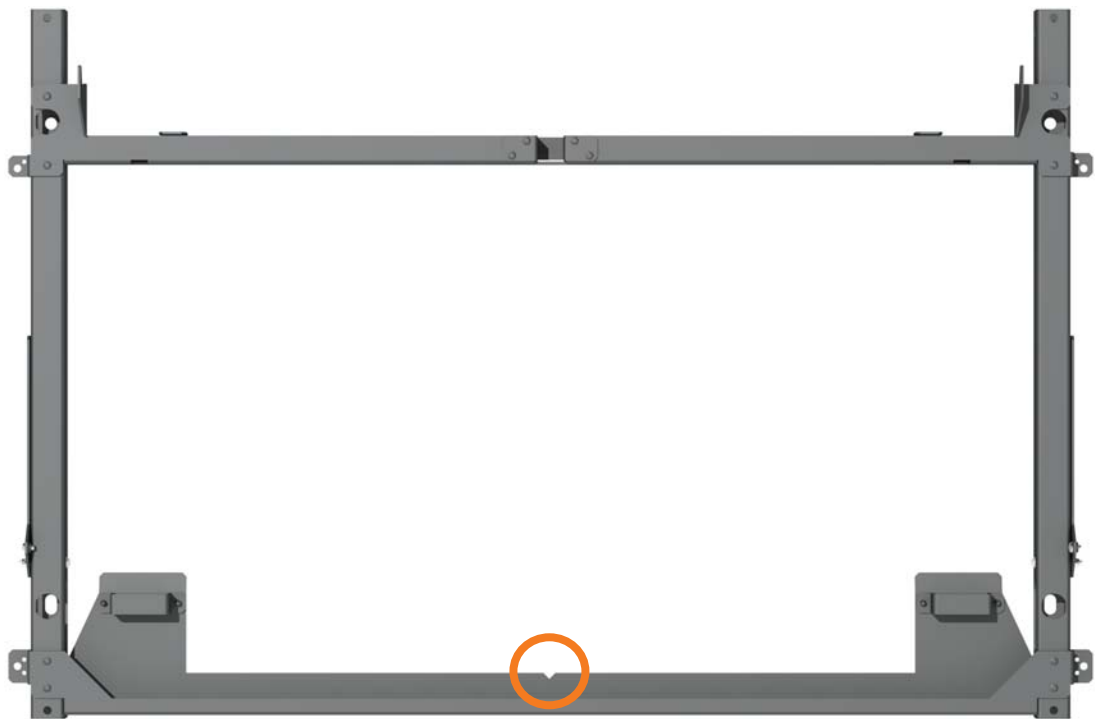

Note: The mount shown is for a Landscape installation.



Note: The mount shown is for a Portrait installation.


8 Tighten the screws as necessary.

Note: Be sure that as you tighten the screws, the mount is flat. If it is not, use shims near the mounting points as necessary.

- 9** Attach horizontal brackets to the LCD mount that will attach to the next LCD mount you want to install.
- 10** Repeat steps **5-9** for the first row. Be sure to level all brackets with respect to the first mounted bracket.
- 11** Using a digital level, make sure the first row is level. All brackets in a row should be level with the bracket next to it within $\pm 0.1^\circ$.

Installing Brackets on Subsequent Rows

- 1 Starting again in the middle of the wall, use two screws to mount vertical brackets to each LCD mount in the first row.

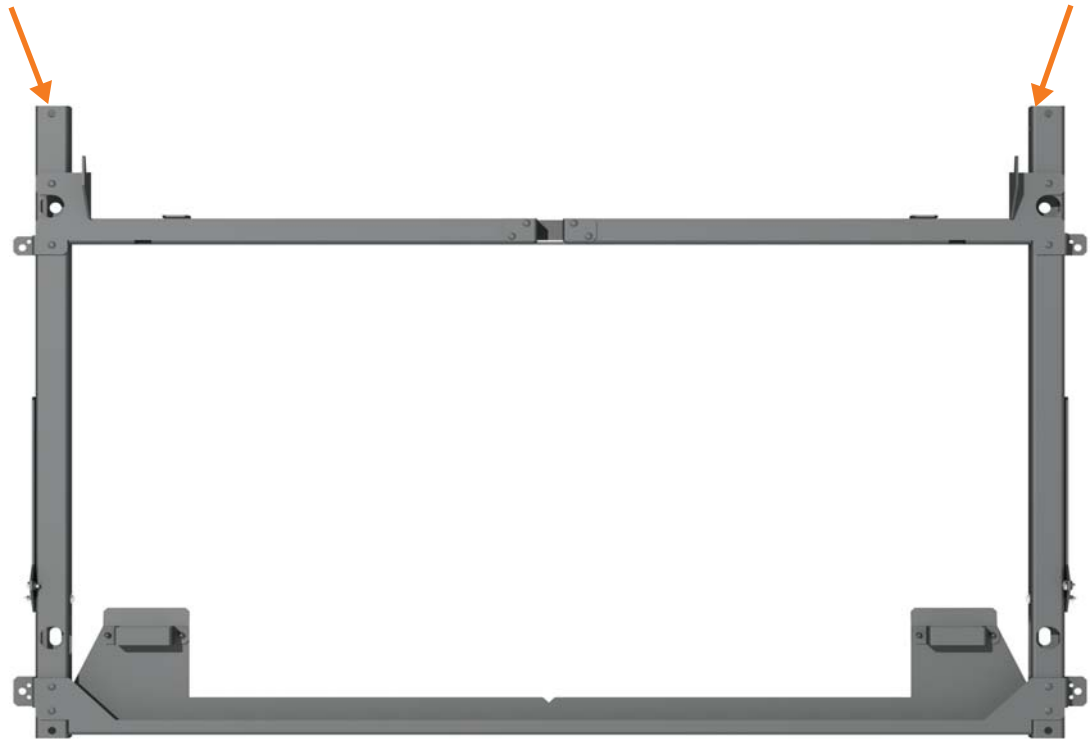


- 2 Install all the LCD mounts in this row and attach them with the two screws to the vertical brackets.
- 3 Loosely attach LCD mounts to the wall.
- 4 Install the horizontal brackets. As you add each new set of brackets, make sure the row continues to be level and plumb. Tighten the screws that attach the LCD mount to the wall. Repeat this process for all of the LCD mounts and horizontal brackets in this row.

Note: Be sure that as you tighten the screws, the mount is flat. If it is not, use shims near the mounting points.


- 5 Using a digital level, make sure the row is level and the columns are plumb.
- 6 Repeat steps 1-5 for each row that you add.

Reconfiguring Mounts for Portrait Adjustment (Optional)


The Portrait Adjustment Kit allows you to reconfigure the mount, moving the Z-axis adjustments to the top when in portrait mode. This kit is optional; it is still possible to make all adjustments to the panel in portrait mode without this kit. However, you will need access on the right edge of the panel as well as the top to make all adjustments.

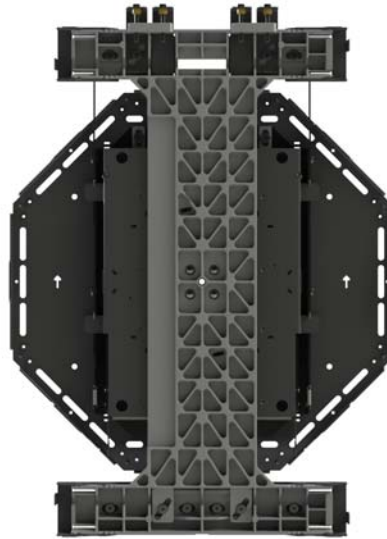

- 1 Use a 1.5mm hex key to remove the two sets of screws from the top and bottom of each hex rod (circled in orange).
- 2 Remove the screw from each of the two collars on the top Z-axis bolts (circled in red), unscrew the bolt using an 8mm driver, and discard.

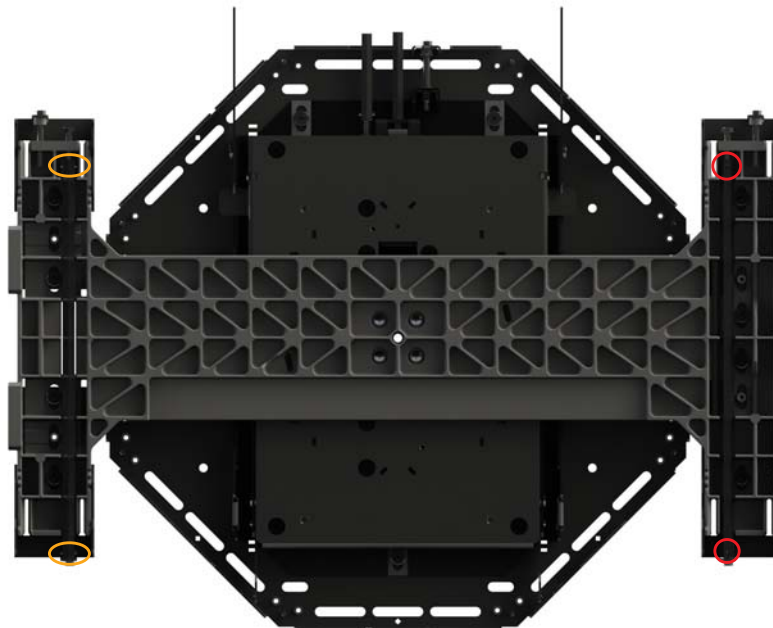


- 3 Remove the hex bolts from both ends of both hex rods and discard the bolts and hex rods.

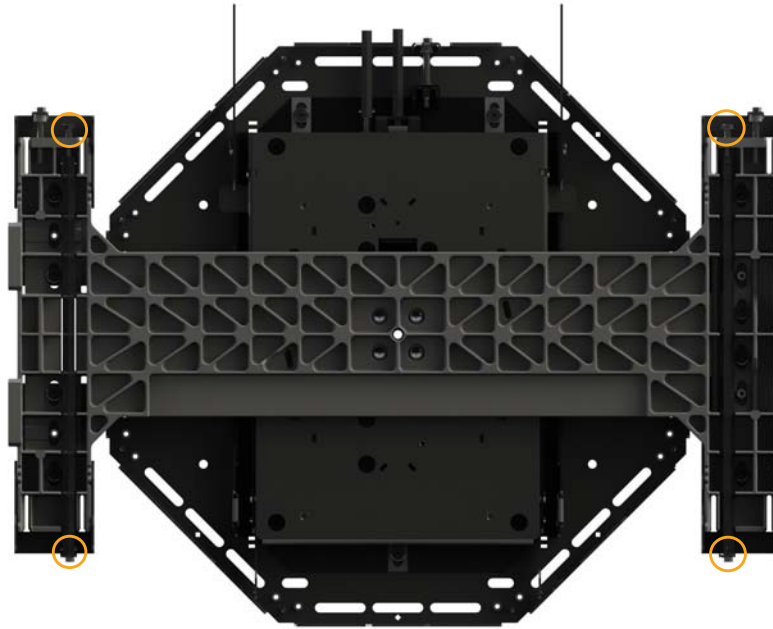

All 4 z-axis brackets should now move up and down freely.

- 4 Loosen the screws holding each Z-axis bracket.

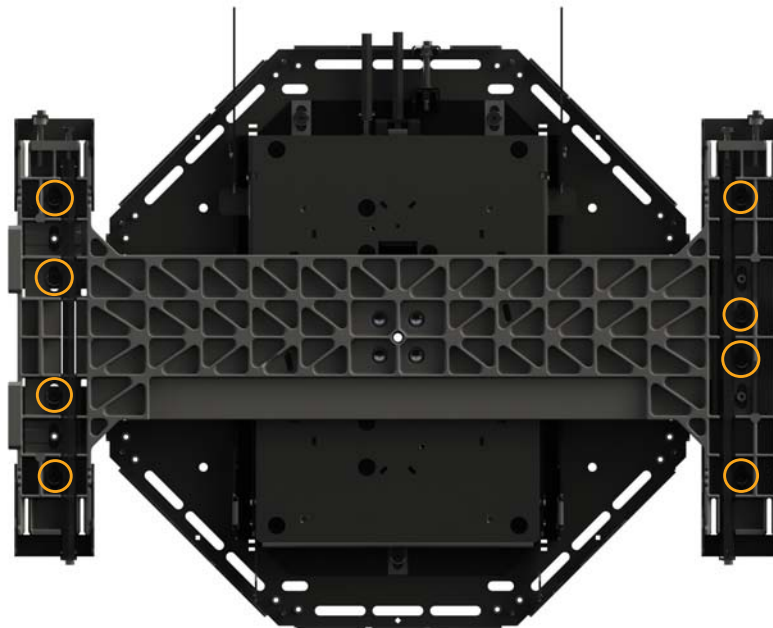


- 5 Install the two short portrait adapter brackets in the top and bottom slots on the left side of the mount. The hex bolts on the adapters should thread into the holes on the side while the bracket slides into the casting. The standoff coming up from the z-axis brackets should protrude through the angled slots in the adapter brackets.
- 6 Screw the provided M4 screws into the standoffs in the angled slots. Retighten the left side z-axis bracket screws.
- 7 Install the two long portrait adapter brackets through the middle two slots on the left side of the mount. The bracket should slide in the slot on the back of the cast aluminum part and come out on the far side. The hex bolts should thread into the holes on the left side of the mount. Once again, the standoffs from the z-axis brackets should protrude through the angled slots on the portrait adapter bracket.
- 8 Screw the provided M4 screws into the standoffs in the angled slots. Retighten the right side z-axis bracket screws.
- 9 Using an 8mm nut driver, adjust the hex bolts along the left side to bring the mount to nominal with the standoffs centered in the slots.

Installing MX46HDX Brackets on the First Row of a Fixed Wall

- 1 Remove the LCD mounts from the LCD module boxes. Set aside the boxes with the LCD modules still in them for later installation. Unpack the horizontal/vertical brackets and hardware from the wall accessory box(es).
- 2 Use the drawings that correspond to your product. (See "[Matrix Drawings](#)" on [page 205](#).)
The LCD mounts are designed to mount with either M6 or #1/4-20 hardware and a washer.
- 3 Determine the vertical center of your wall and then find the location of the closest display to this position.
- 4 Mark on the wall vertically where the center of that display will be. Using a pencil, make a horizontal line where the bottom of the bottom center bracket will be. Use a string or laser level to continue the line for the rest of the desired wall. This will help maintain a level row as you install the LCD mounts.
- 5 To predetermine the proper mount points for the LCD mount, measure them out or use a template. Then loosely attach the LCD mount.
- 6 Using a level (a digital one is highly recommended), level the bracket as you keep in mind the string or laser level at the bottom.

- 7 Align the diamond-shaped notches on the LCD mount with the desired center of the LCD (this is done for the first bracket only).

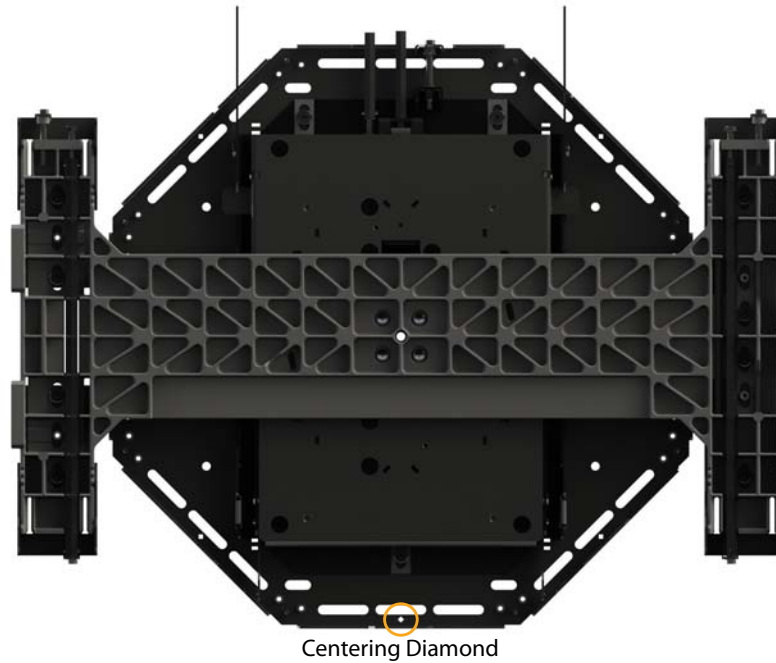


- 8 Tighten the screws as necessary.

Note: Be sure that as you tighten the screws, the mount is flat. If it is not, use shims near the mounting points as necessary.

- 9 Attach horizontal brackets to the LCD mount (long spacer for landscape and short spacer for portrait) that will attach to the next LCD mount you want to install.
- 10 Repeat steps 5-9 for the first row. Be sure to level all brackets with respect to the first mounted bracket.
- 11 Using a digital level, make sure the first row is level. All brackets in a row should be level with the bracket next to it within $\pm 0.1^\circ$.

Installing MX46HDX Brackets on Subsequent Rows

- 1 Starting again in the middle of the wall, use two screws to mount vertical brackets to each LCD mount in the first row. Locating pins help align the brackets.

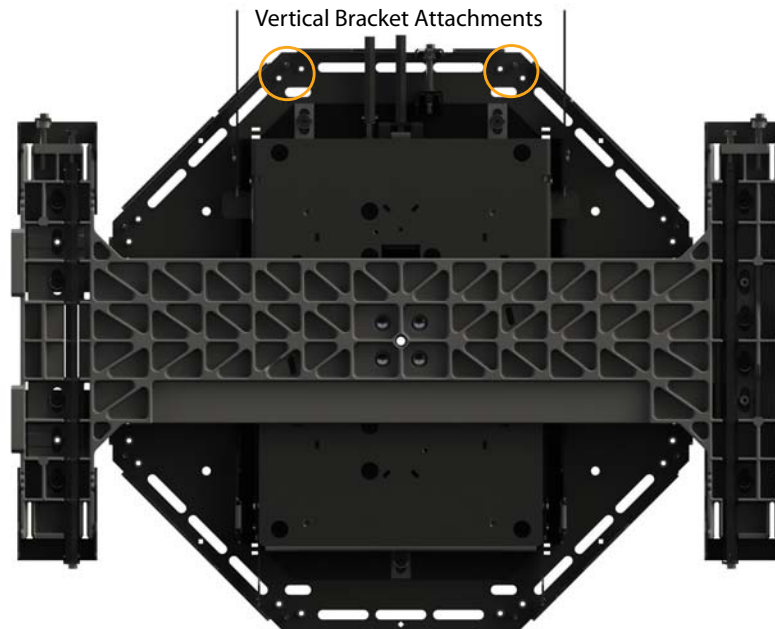

- 2 Install all the LCD mounts in this row and attach them with the two screws to the vertical brackets.
- 3 Loosely attach LCD mounts to the wall.
- 4 Install the horizontal brackets. As you add each new set of brackets, make sure the row continues to be level and plumb. Tighten the screws that attach the LCD mount to the wall. Repeat this process for all of the LCD mounts and horizontal brackets in this row.

Note: Be sure that as you tighten the screws, the mount is flat. If it is not, use shims near the mounting points.

- 5 Using a digital level, make sure the row is level and the columns are plumb.
- 6 Repeat steps 1-5 for each row that you add.

Routing Cables

Before you install LCD modules, you need to route cables through the LCD mounts. Notches on the horizontal brackets make routing cables easier.

As you configure your wall, it is important to think about how it will be set up and where the master (A1) display should be located. This does not need to be the upper left display in an array, but rather should be in a location that will be easily accessible. For example, if you have a 4 x 4 wall and it is easier to see on-screen menus in a lower row, the master (A1) display should be set up there.

Note: It is possible to change the master display after a wall is built. However if an IR is used for the wall or an ambient light sensor is used, it must be connected to the A1 display panel in order to function properly.

- 1 Route power and video cables between the LCD mounts and then through the side hole near the bottom of the LCD mount. Place cables in the LCD mount channel so they are out of the way.




Best practice for routing heavy power cables.



Note: We recommend that you use a cable label-maker to identify each cable before it is installed.

Note: We recommend that you initially leave 0.5m (2 ft) of cable beyond the LCD mounts to ease connection. The excess cable can be pulled back as the panels are put into place.

- 2 Route power and video cables from the brackets to the off-board equipment for the entire wall. For ease in troubleshooting and configuration, we recommend that you run your video cables together in "clusters." Use one Quad controller module and (up to) four LCD modules in each cluster. Pick a rectangle of LCD modules and connect them all to the same Quad controller module. For ease of turning on displays as you install, we recommend that the power cables be routed from the bottom center out whenever possible.

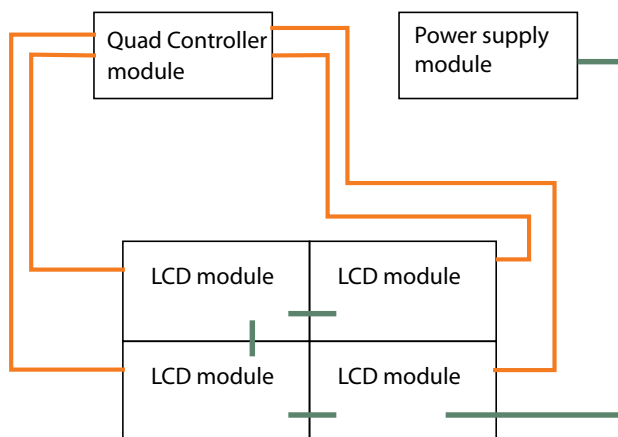

Note: For most configurations of the wall, you can choose any arrangement of rectangles. But for configurations that will have multiple sub walls, you will want to plan your configuration before choosing your clusters of LCDs. If you're not sure how to arrange the clusters, choose a 2 x 2 configuration. See "[Understanding Wall Configuration](#)" on page 140 for more information.

Note: Keep in mind that you need to point the remote at the IR sensor, not toward the screen you want to control.


Routing Cables for the MX46HDX

Before you install LCD modules, you need to route cables through the LCD mounts. Attachment points for zip ties or cable wraps are available around the edges of the mount and on spacer brackets to make routing cables easier.

As you configure your wall, it is important to think about how it will be set up and where the master (A1) display should be located. This does not need to be the upper left display in an array, but rather should be in a location that will be easily accessible. For example, if you have a 4 x 4 wall and it is easier to see on-screen menus in a lower row, the master (A1) display should be set up there.

Note: It is possible to change the master display after a wall is built. However, if an IR is used for the wall or an ambient light sensor is used, it must be connected to the A1 display panel in order to function properly.

- 1 Route the power and video cables between the LCD mounts. Secure them to zip tie attachment points whenever possible to keep the cables out of the way.

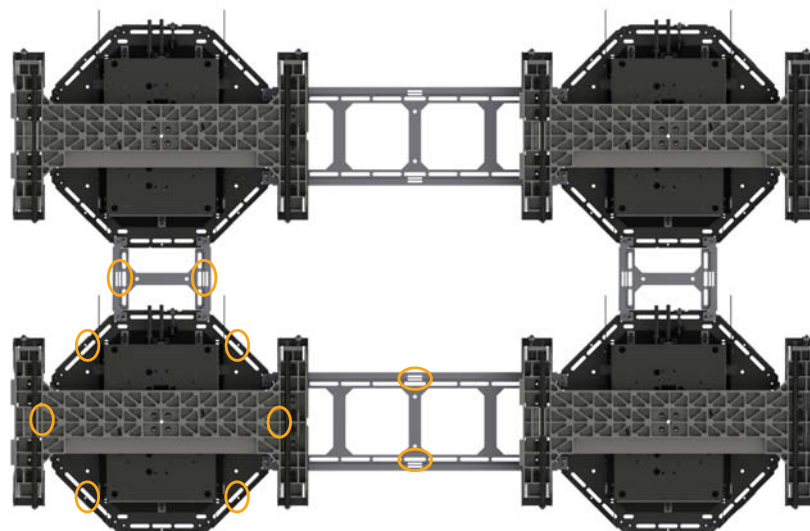


Zip Tie Locations

Note: We recommend that you use a cable label-maker to identify each cable before it is installed.

Note: We recommend that you initially leave 0.5m (2 ft) of cable beyond the LCD mounts to ease connection. The excess cable can be pulled back as the panels are put into place.

- 2 Route power and video cables from the brackets to the off-board equipment for the entire wall. For ease in troubleshooting and configuration, we recommend that you run your video cables together in "clusters." Use one Quad controller module and (up to) four LCD modules in each cluster. Pick a rectangle of LCD modules and connect them all to the same Quad controller module. For ease of turning on displays as you install, we recommend that the power cables be routed from the bottom center out whenever possible.

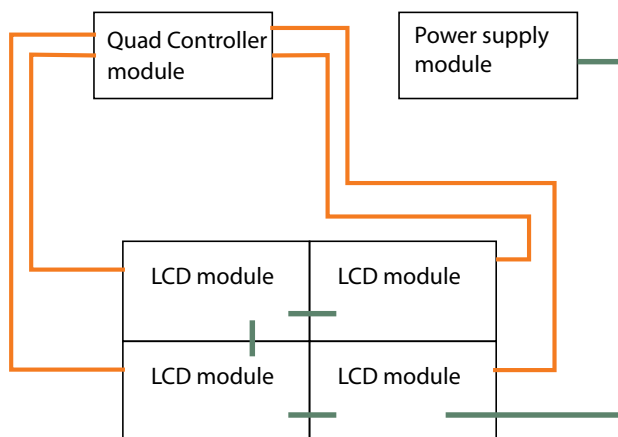

Note: For most configurations of the wall, you can choose any arrangement of rectangles. But for configurations that will have multiple sub walls, you will want to plan your configuration before choosing your clusters of LCDs. If you're not sure how to arrange the clusters, choose a 2 x 2 configuration. See ["Understanding Wall Configuration" on page 140](#) for more information.

Note: Keep in mind that you need to point the remote at the IR sensor, not toward the screen you want to control.


Placing Off-Board Module Equipment

Before you install your LCDs, first place your Quad controller modules and power supply modules in the area where they will be installed.

Plugging In Cables to the Off-Board Modules

Once the modules are placed, complete the following steps.

- 1 For each Quad controller module, plug the CAT 6 video cables from the LCDs into the LCD Out connections. (HDMI connections are made later in the connecting sources section.)

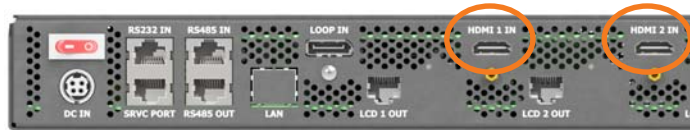

- 2 For each Quad controller module, plug one end of a power cable into the DC IN connector on the Quad controller module and the other end into the CTRL PWR connector on the power supply module.




- 3 For all the power supply modules, plug one end of the power supply monitor cable into the PS MON connector of the Power Supply module and the other end into the MON LOOP connector of the next power supply module. Plug the final PS MON from the power supply into the PS MON on the Master Quad Controller.



- For each power supply module, plug one end of the AC power cable into the power supply module and then the other end into the wall outlet.



Note: The Quad Controller Module may have an optional device known as WallNet that allows remote monitoring of the status of various components in the wall. WallNet is only required on one Quad Controller Module to monitor up to 64 displays. See document 020-1260-00, User Guide, WallNet2, Clarity Matrix for detailed operation instructions.

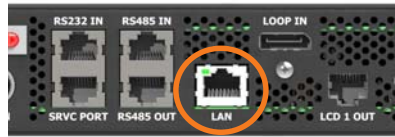

WallNet connection

- For each power supply module that will plug into an LCD, plug in one end of the longer power cable into one of the 48V connectors on the power supply module.



Rear of Quad Controller module

Connect one end of the longer power cable into the 48V "Panel Power Out" connection. The other connects to the first in a chain of LCD modules.

Rear of power supply module



AC power to wall outlet

Power to Quad Controller module

Power to LCD


Installation Considerations; Tips for Adjusting Walls

The basic concept of installing LCD modules in the wall is similar to installing brackets. Start from the center of the wall and build out the first row. As you complete each row, ensure the entire row is level.

Caution: It is important that you check communication between the LCD modules as you build each row! This will help minimize changes once your wall is fully installed.


While the Planar EasyAxis mounts are designed to align the LCDs with one another, take note of LCDs that may not match in overall size to the majority of LCDs. While most panels are the same size, there are some that can be larger or smaller by a small amount. When this is the case, it may be difficult to align the seams of all units exactly.

For small walls, these larger or smaller panels can easily be moved to the outside corners (top, sides), depending on which dimension is larger or smaller than the others.

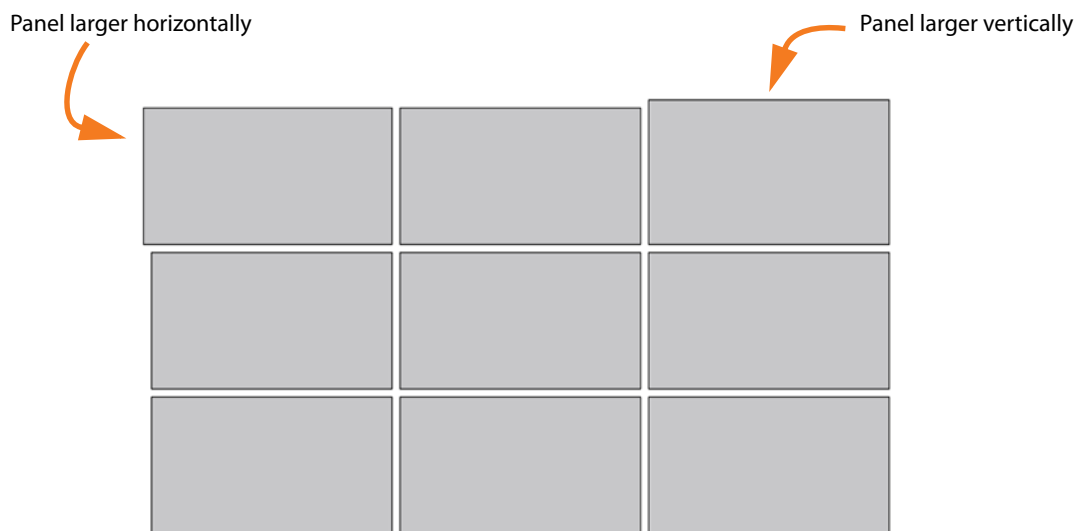

Panel sizes and spacing are exaggerated in this diagram.

For larger walls, it may be necessary to group these units into rows or columns throughout the installation or at the edges.

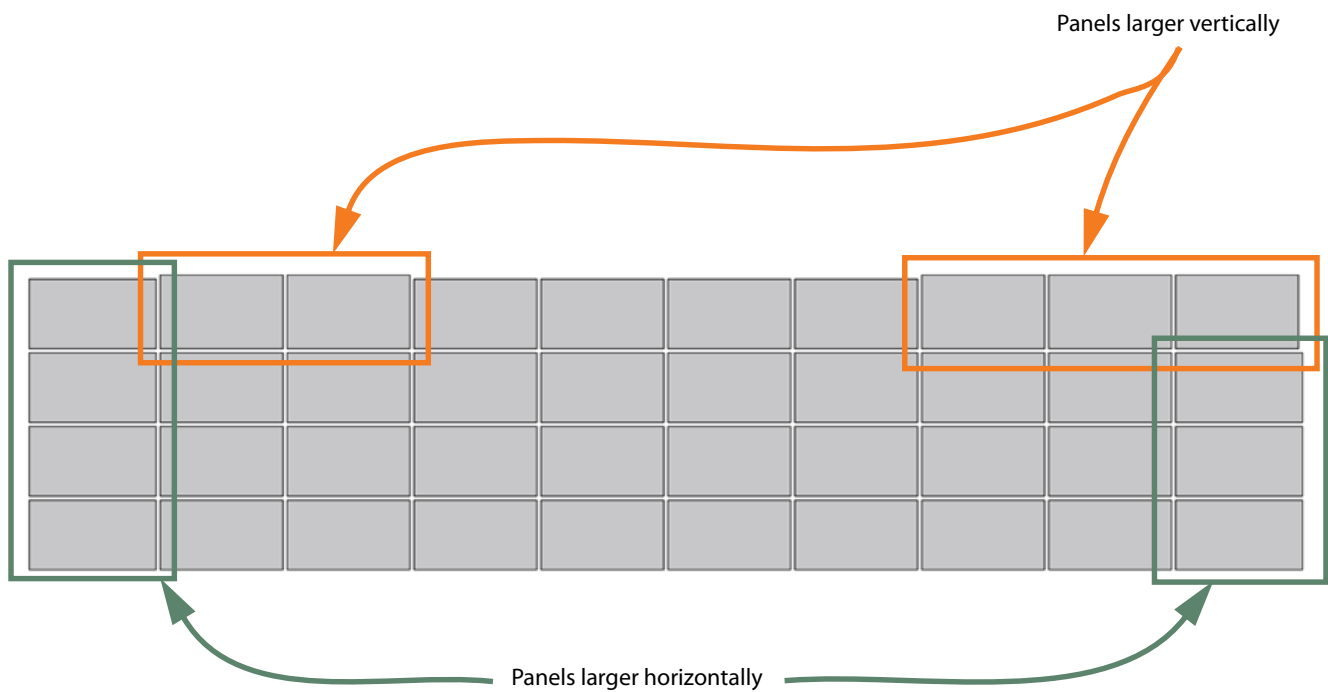

Panel sizes and spacing are exaggerated in this diagram.

Note: It is important to install displays so that there is a physical gap between units. Due to thermal expansion, module dimensions will grow after they have been turned on. This growth should stop after about one hour depending on ambient conditions. If the wall was installed without a proper gap between units, this can lead to the modules contacting one another and creating stress on the LCD. This stress can lead to bright spots or non-uniformity where the contact occurs and possibly damage to the LCD itself. When the units are turned off the LCD's will contract to their original size and the gaps will return to their installed size.

As with the mounts, LCDs should be installed in the middle of the wall first and then added outward from there. This enables use of the adjustments by splitting the tolerance build-up to the left and right.

Installing the First or Bottom Row

As you plug in and install each LCD module, turn it on to verify it works properly and to ensure that the position sensor is active. See step 9 of this section for more information.

Note: Wearing the provided gloves will prevent smudges that would need to be cleaned later.

- 1 Remove the LCD that you want to install from the LCD shipping box.
- 2 Remove the LCD from the bag and then remove the mylar sheet and tape from the LCD module. *Be careful when removing the tape so you don't damage the bezel.*
- 3 *Two* people should lift the LCD into place. Each person should put one hand on the handle of the back of the display and one hand on the bottom of the display.



This picture shows an MX46 Landscape installation.

Caution: Be careful to limit contact with the thick edge of the bezel on the LCD, as electrical connections beneath can be easily damaged. Avoid resting the LCD on the corners, as doing so can cause damage. If the LCD needs to be rested against a surface, it should be rested face out and on the LCD edge that has the thinner bezel (LCD bottom surface).



Correct position
All four corners touching a solid
surface
Angle no more than 10° from
vertical




Incorrect position



Never rest the LCD on a corner!

- Starting in the middle of the wall, slide the horizontal support pins on the back of the LCD into the notch of the LCD mount. The LCD module is now in the pre-service mode position.

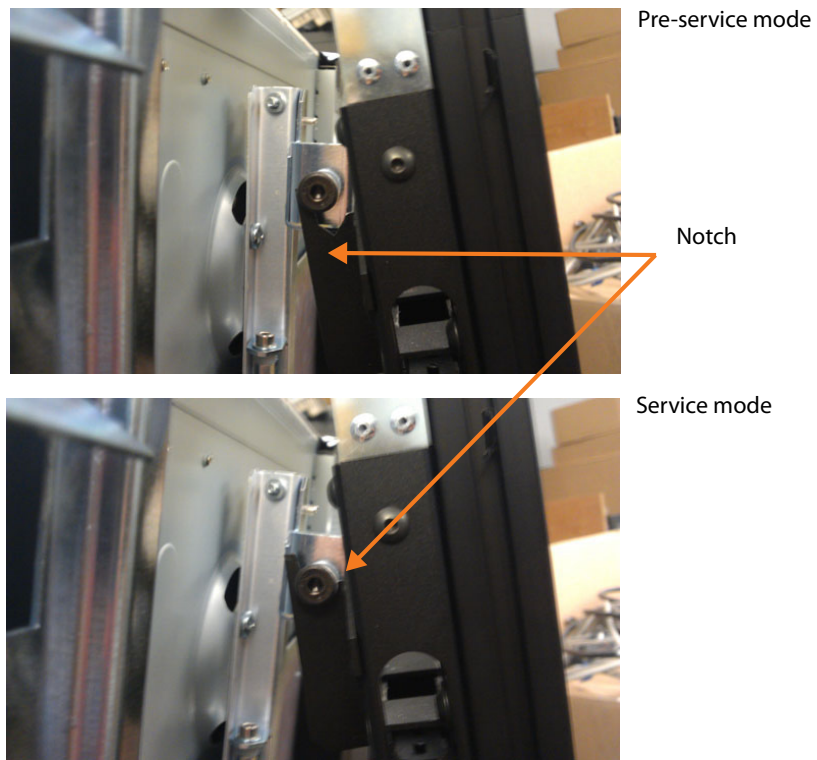


- Connect the Cat 6 video cable from the Quad controller module to the VIDEO connector on the bottom of the LCD.

Note: About connecting power supply cables: The power for one of the displays will come directly from the power supply module. Then power for the next display can be looped out of this first one into the second one. The order in which you connect these does not matter.

Note: Disconnecting power from a panel will disconnect power from any panels connected down the power chain.


- 6 Connect the power cable from the power supply module to the power connector on the bottom of the LCD. The power cable may come directly from the power supply or from another LCD's DC Out.

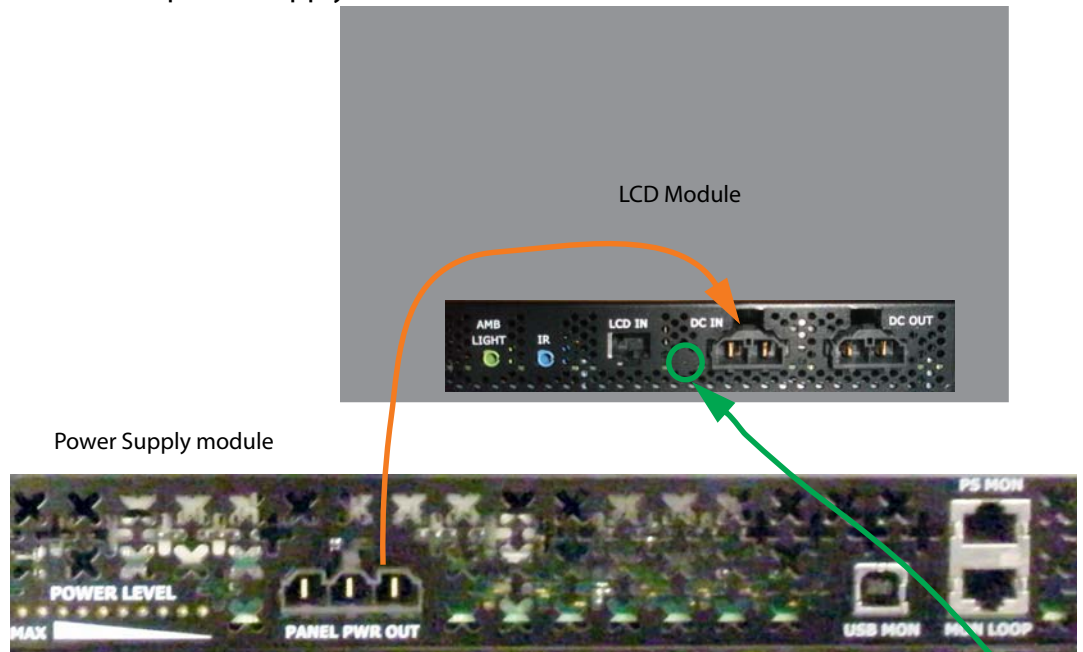

- 7 Turn on the power supply and the Quad Controller modules. Make sure picture information is flowing in the video connection; look for the flashing green light between the LCD IN and DC IN connectors.

- 8 Slightly lift on the handles and move the panel toward the mount. Once the panel cannot move toward the mount further, the panel can be lowered so that the adjustment cams slip into their nests.

Landscape installation - Slide down and into position

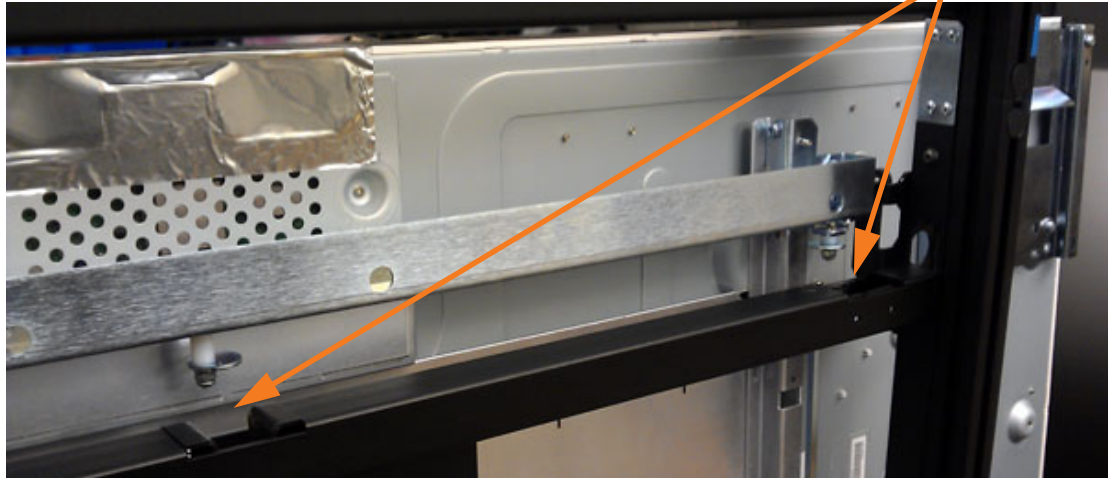

Portrait installation - Slide down and into position



Note: If the display is not seated properly, make sure the x-axis and z-axis adjusters are seated in the correct positions. (See steps **16-17** of this section.)

- 9 Verify that the position sensors (see "Mounting the IR Sensor" on page 79) are working by displaying the on-screen menus on the LCDs. For Landscape installations, the first LCD on the left in the row should always show the display ID of 1:1. For Portrait installations, the first LCD on the right in the row should always show the display ID of 1:1. As you build the row out, the left (Landscape) of the two numbers on each LCD should show an incremental

number. In the first example below, you would expect to see 1 in the far left LCD, 2 in the next one, etc. In the second example, you would expect to see 1 in the far right LCD, 2 in the next one, etc. Each number must also be unique. If you see a duplicate number or no information at all, check your cabling to make sure everything is properly connected and all of your modules are turned on.

1:1	2:1	3:1
-----	-----	-----


Landscape configuration.

3:1	2:1	1:1
-----	-----	-----


Portrait configuration.

- 10** For displays in the same row, make sure they are in a straight line using a digital level. Use this level to ensure the displays are plumb (true vertically for both sides and the front) and aligned from display to display. While the displays will be set to a nominal position prior to shipment, you might need to make minor adjustments, which are described in the following steps.
- 11** Each LCD module will come from the factory in the nominal position. However, due to installation and manufacture tolerances, adjustments to the module position may be required.

- 12** Starting with the center display, make sure it is level/parallel with the brackets. If it is not, use the two y-axis adjusters (one on each side) to accomplish this. Leave the other adjusters in their nominal positions.

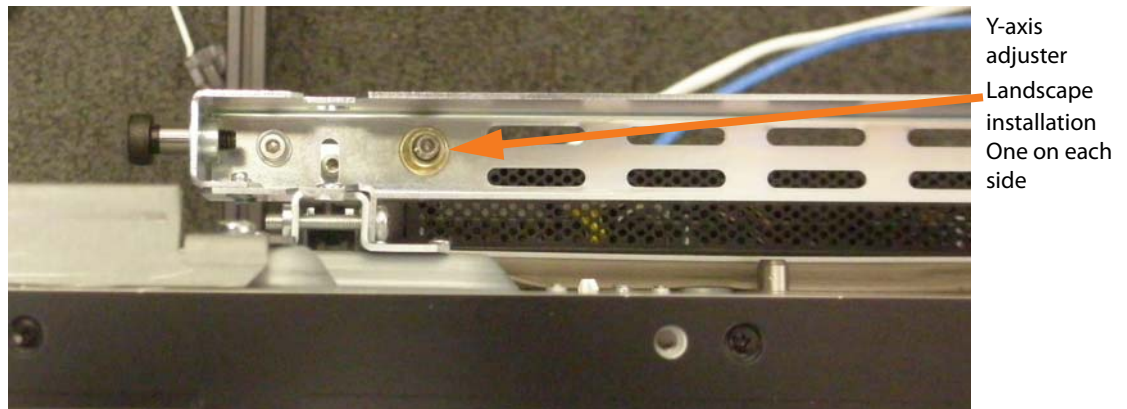


- 13** For the next display in the row, repeat steps **1-10** and then continue to step **14**.
- 14** When the next display in the row is installed, use the y-axis adjusters to level the display just as you did with the previous one.
- 15** If the displays are not level with each other, fine-tune the y-axis adjusters of the last installed display until it is level with the rest of the displays in the row.
- 16** Adjust the top and bottom z-axis adjusters in each corner of the last installed display until it is flush with the display next to it.

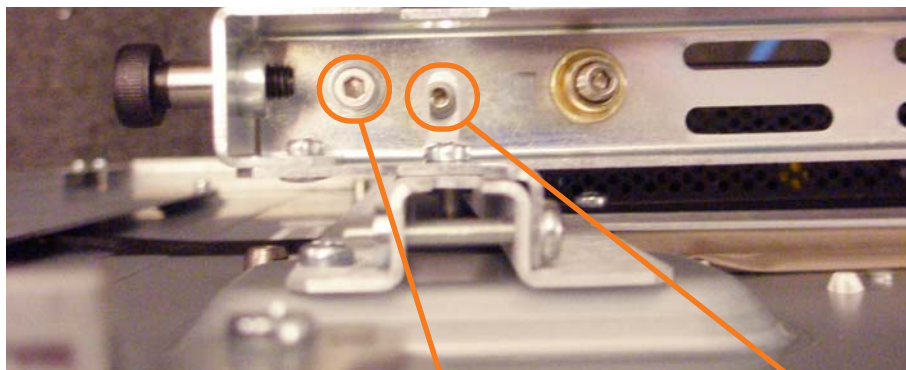

There is a pair of Z-axis adjusters on each side.

- 17 Adjust the x-axis (in the middle of the support bar) of the last installed display so there is a 0.38mm gap (approximate thickness of a business card) between the displays.

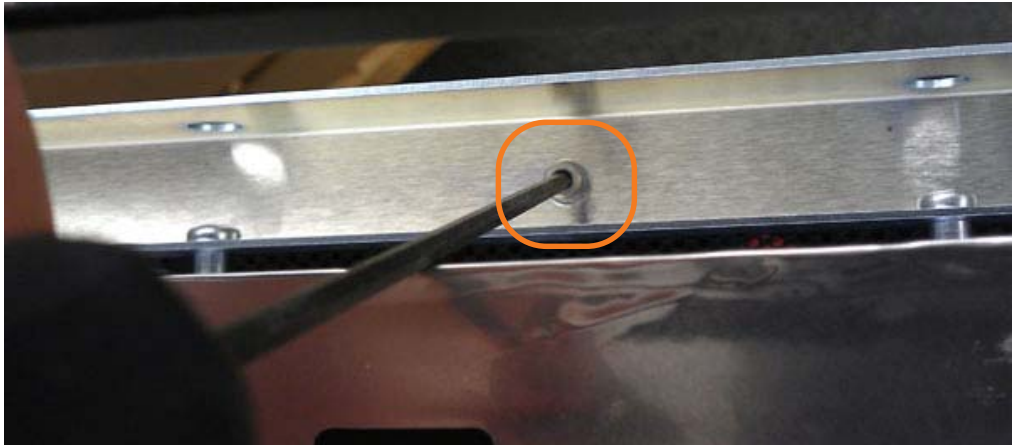

- 18 If the gap is tapered, you can make slight adjustments to the y-axis to correct this. This could be one or both displays that have the taper. Keep in mind if you adjust too far out of level, it can cause issues with the alignment of subsequent displays.

Note: A slight waviness in the gap is typical.


Installing Second and Subsequent Rows

- 1 Starting at the center display of the next row that you want to install, follow steps 1-8 of "Installing the First or Bottom Row" on page 61.

Caution: Depending on how the previous row was adjusted, when placing one display on top of another display, be sure to avoid contact between the displays. Damage may occur from the upper displays banging into or resting on the lower displays.


- 2 Verify that the position sensors are working by displaying the on-screen menus on the LCDs. For Landscape installations, the first LCD on the left in the row should always show the display ID of 1:1. For Portrait installations, the first LCD on the right in the row should always show the display ID of 1:1. As you build the row out, the left (Landscape) of the two numbers on each LCD should show an incremental number. In the first example below, you would expect to see 1 in the far left LCD, 2 in the next one, etc. In the second example, you would expect to see 1 in the far right LCD, 2 in the next one, etc. Each number must also be unique. If you see a duplicate number or no information at all, check your cabling to make sure everything is properly connected and all of your modules are turned on.

Check the number on the left when building a row.

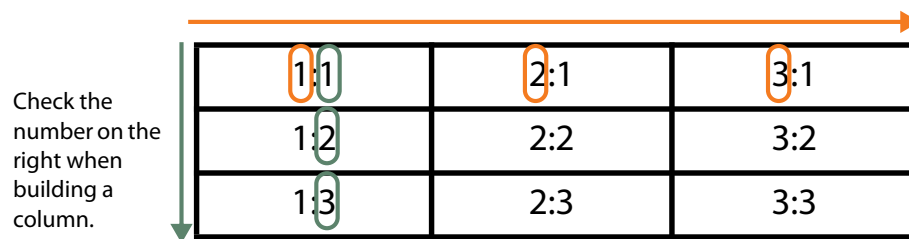

Note: Landscape configuration.

Check the number on the left when building a row.

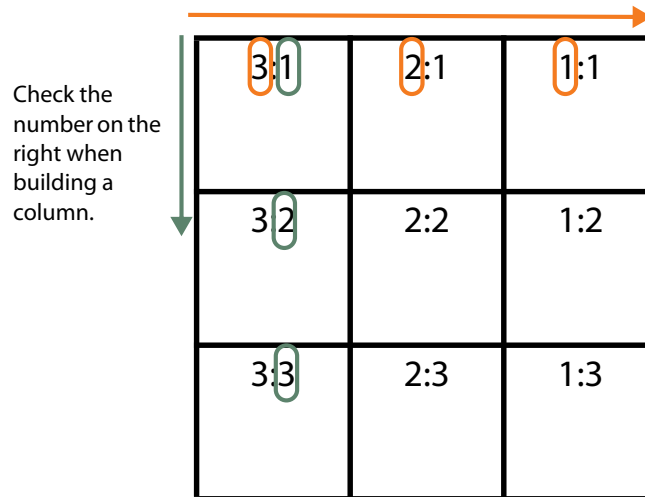

Check the number on the right when building a column.

Note: Portrait configuration.

- 3 Make sure the first display in the row is plumb with the display below it using the x-axis adjuster.
- 4 Using the y-axis adjusters, set the horizontal gap between the displays at 0.38mm (approximate thickness of a business card).
- 5 Adjust the z-axis corners of the last installed display until it is flush with the display next to it. Depending on the adjusted corner, this may require that the display be put in service mode. The alignment of the bottom corners might need to be re-adjusted as each new display is installed in the row.
- 6 Repeat steps 1-5 of this section to install subsequent displays in this row.
- 7 When you are finished, check the wall one more time to make sure the display IDs are in the correct order. Use the example above as a reference.

Installing the First or Bottom Row of MX46HDX Panels

As you plug in and install each LCD module, turn it on to verify it works properly and to ensure that the position sensor is active. See step 9 of this section for more information.

Note: Wearing the provided gloves will prevent smudges that would need to be cleaned later.

- 1 Remove the LCD that you want to install from the LCD shipping box.
- 2 Remove the LCD from the bag and then remove the mylar sheet and tape from the LCD module. *Be careful when removing the tape so you don't damage the bezel.*

- 3 Two people should lift the LCD into place. Each person should put one hand on the handle on the back of the display and hone hand on the bottom of the display.

Caution: Be careful to limit contact with the thick edge of the bezel on the LCD, as electrical connections beneath can be easily damaged. Avoid resting the LCD on the corners, as doing so can cause damage. If the LCD needs to be rested against a surface, it should be rested face out and on the LCD edge that has the thinner bezel (LCD bottom surface).



Correct position
All for corners touching a solid surface
Angle no more than 10° from vertical



Incorrect position



Never rest the LCD on a corner!

- 4 Starting with the bottom middle mount of the wall, extend the scissor assembly and lock it in the extended position by rotating up the scissor braces.
- 5 Lift the panel into place with the bottom angled slightly outward. The support pins should slide down the channel in the z-adjustment brackets and the support tabs should slide into the slots in the large cast aluminum part.

Note for portrait installs: All panels should be installed in landscape mode, if possible, and then rotated to portrait before being pushed back into place. While installing the panel onto the mount directly in portrait mode is possible, it is much simpler to do it in landscape mode and then turn the panel.




- 6 Connect the Cat 6 video cable from the Quad controller module to the LCD IN connector location on the bottom of the LCD. If having difficulty accessing the board, the panel can optionally rotate out at the bottom into a service mode. Kickstands from the panel side rotate down to prop the panel in place against the bottom edge of the cast aluminum part.



Note: About connecting power supply cables: The power for one of the displays will come directly from the power supply module. Then power for the next display can be looped out of this first one into the second one. The order in which you connect these does not matter.


Note: Disconnecting power from a panel will disconnect power from any panels connected down the power chain.

- 7 Connect the power cable from the power supply module to the power connector on the bottom of the LCD. The power cable may come directly from the power supply or from another LCD's DC Out.

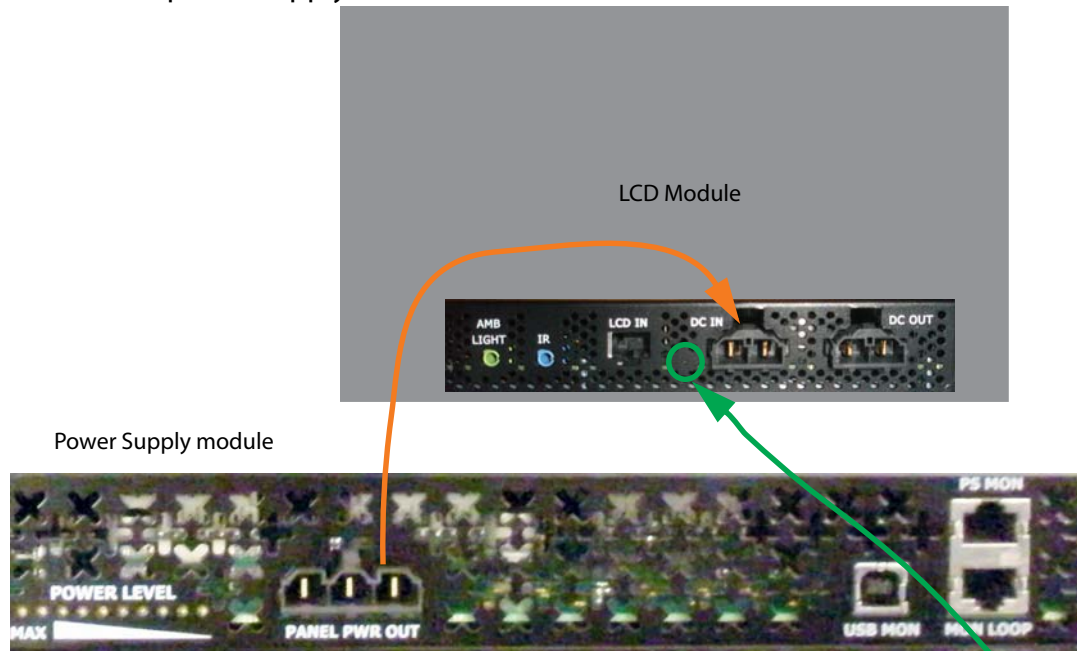

- 8 Turn on the power supply and the Quad Controller modules. Make sure picture information is flowing in the video connection; look for the flashing green light between the LCD IN and DC IN connectors.

- 9 If service mode was used, rotate the kickstands back up and allow the panel to hang vertically. Slide both bottom lock brackets upward, making sure that the support pins engage with the channels on the z-adjustment brackets, until the spring pin locks the bottom lock brackets in place.

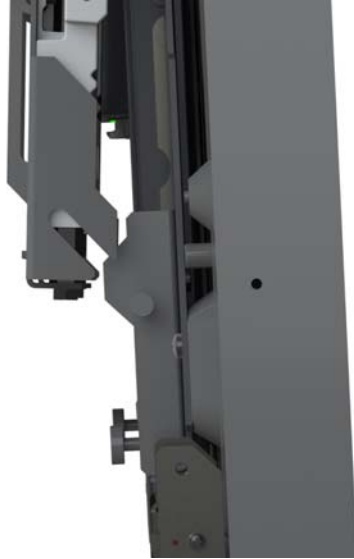

Bottom Pin Out




Bottom Pin Halfway



Bottom Pin Latched

- 10 Turn the center mount adjustment counterclockwise until loose to release the rotation lock.

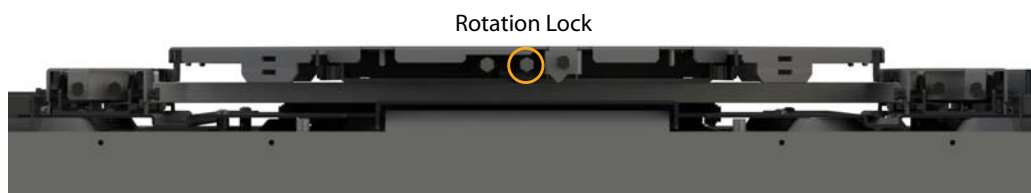

Rotation Lock

- 11 Unlock the scissor assembly by rotating the scissor braces all the way down. You may need to pull the display outward slightly to allow the braces to disengage.



Scissor Locked




Scissor Unlocked

- 12 Carefully push the display back toward the wall, making sure to clear any surrounding panels. Adjust x, y, and rotation slightly if necessary before pushing back in all the way to avoid scraping surrounding panels.


Note: Avoid pushing on the bezel edges. Pressure should be applied on the front LCD screen, spread over as large an area as possible. Do not push with fingertips.

- 13 Verify that the position sensors (see "Mounting the IR Sensor" on page 79) are working by displaying the on-screen menus on the LCDs. For Landscape installations, the first LCD on the left in the row should always show the display ID of 1:1. For Portrait installations, the first LCD on the right in the row should always show the display ID of 1:1. As you build the row out, the left (Landscape) of the two numbers on each LCD should show an incremental number. In the first example below, you would expect to see 1 in the far left

LCD, 2 in the next one, etc. In the second example, you would expect to see 1 in the far right LCD, 2 in the next one, etc. Each number must also be unique. If you see a duplicate number or no information at all, check your cabling to make sure everything is properly connected and all of your modules are turned on.

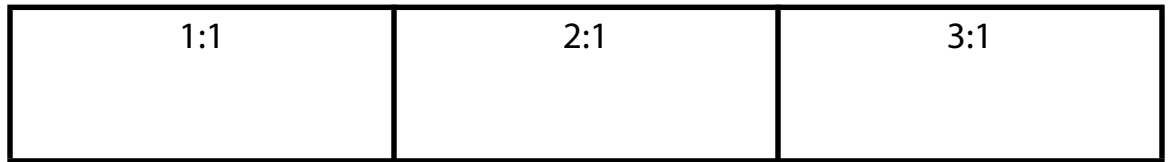

Landscape configuration.

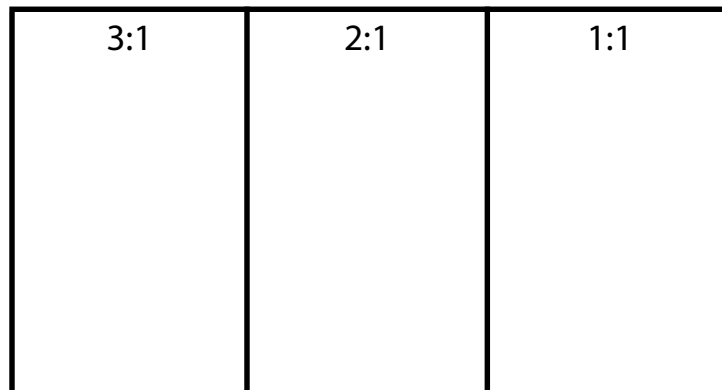


Portrait configuration.

- 14** For displays in the same row, make sure they are in a straight line using a digital level. Use this level to ensure the displays are plumb (true vertically for both sides and the front) and aligned from display to display. While the displays will be set to a nominal position prior to shipment, you might need to make minor adjustments, which are described in the following steps.
- 15** Each LCD module will come from the factory in the nominal position. However, due to installation and manufacture tolerances, adjustments to the module position may be required.
- 16** Make sure the display is level/parallel with the bracket by rotating the panel. Once it is level, lock the rotation by turning the rotation lock clockwise.
- 17** For the subsequent displays in the row, repeat steps 1-16 and then continue to step 18.

- 18** If the display is not level with the adjacent display, use the y-axis adjusters to move the display up and down as necessary.



Standard Landscape Adjustments

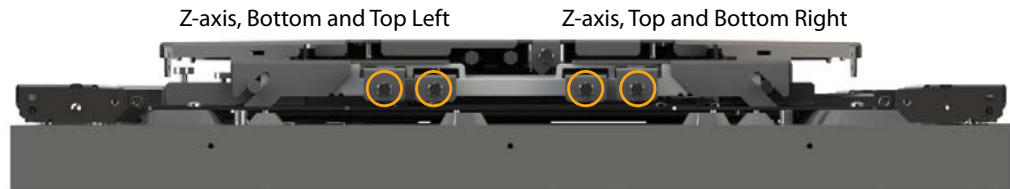

Portrait Adjustments with Optional Adapter Kit

- 19** Adjust the top and bottom z-axis adjusters in each corner until the display is flush with the adjacent display.
- 20** Adjust the x-axis of the display so that there is a 0.38mm gap (approximate thickness of a business card) between the display and its neighbor.
- 21** If the gap is tapered, you can unlock the rotation and rotate the display slightly until the gap is even along the entire length. Keep in mind if you adjust too far out of level, it can cause issues with the alignment of subsequent displays.

Note: Note: A slight waviness in the gap is typical.

Installing Second and Subsequent Rows of MX46HDX Panels


- 1** Starting at the center display of the next row that you want to install, follow steps 1-12 of "Installing the First or Bottom Row of MX46HDX Panels" on page 70.

Caution: Depending on how the previous row was adjusted, when placing one display on top of another display, be sure to avoid contact between the displays. Damage may occur from the upper displays banging into or resting on the lower displays.

- 2** Verify that the position sensors are working by displaying the on-screen menus on the LCDs. For Landscape installations, the first LCD on the left in the row should always show the display ID of 1:1. For Portrait installations, the first LCD on the right in the row should always show the display ID of 1:1. As you build the row out, the left (Landscape) of the two numbers on each LCD should show an incremental number. In the first example below, you would


expect to see 1 in the far left LCD, 2 in the next one, etc. In the second example, you would expect to see 1 in the far right LCD, 2 in the next one, etc. Each number must also be unique. If you see a duplicate number or no information at all, check your cabling to make sure everything is properly connected and all of your modules are turned on.

Check the number on the left when building a row.

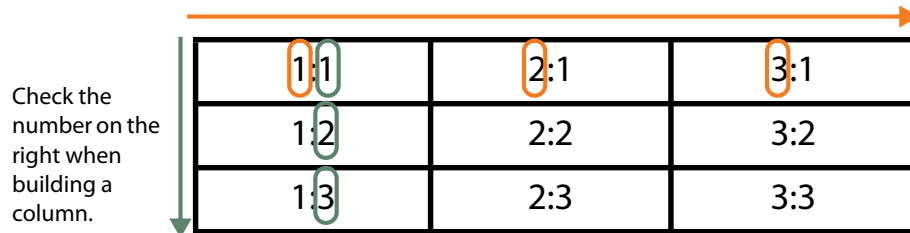

Note: Landscape configuration.

Check the number on the left when building a row.

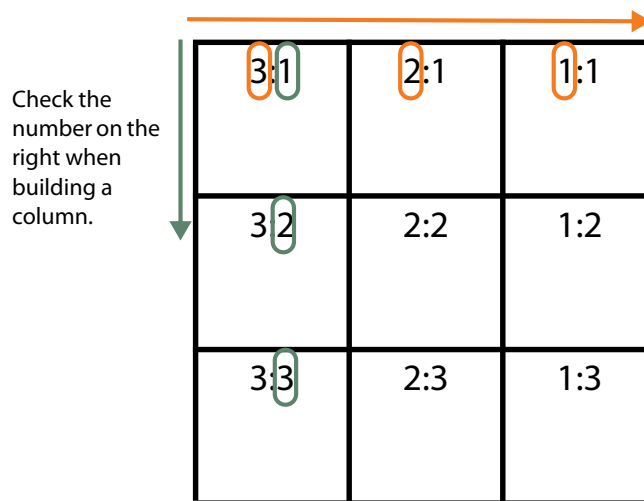

Note: Portrait configuration.

- 3 Make sure the display is level by rotating the panel. Check gaps on sides and bottom to ensure that the gaps are even along the length of the display. Once it is level, lock the rotation by turning the rotation lock clockwise.
- 4 Make sure the first display in the row is plumb with the display below it using the x-axis adjustor.
- 5 Using the y-axis adjuster, set the horizontal gap between the displays at 0.38mm (approximate thickness of a business card).
- 6 Adjust the z-axis corners of the last installed display until it is flush with the display next to it. The alignment of the bottom corners might need to be re-adjusted as each new display is installed in the row.

- 7 Repeat steps 1-6 of this section to install subsequent displays in this row.
- 8 When you are finished, check the wall one more time to make sure the display IDs are in the correct order. Use the example above as a reference.

Mounting the IR Sensor

Before you mount the IR sensor, keep the following points in mind:

- Because most menus will be controlled on the master (A1) display, it is suggested that you mount the IR sensor near this display.
- No matter which display a menu is on, you will still need to point the remote towards this one IR sensor that controls the entire wall.

Connecting the IR Sensor

Connect the IR remote sensor to Quad controller module A or to LCD module A1. See the diagram on page 30 for a visual example of this connector location.

Mounting the Ambient Light Sensor

The ambient light sensor is an optional module used to change the brightness of the displays based upon the light conditions of the room where the wall is located. The OSD contains the software setup for this sensor and can be manipulated to give desired results. For best results, it is important to locate this sensor in a position which best typifies the changing ambient light—sunlight, overhead lighting—conditions seen by the front of the installed wall. Do not mount it behind a wall or in a place where there is no change in ambient light, because no change in brightness will occur if the sensor is unable to detect changes in ambient light. For a properly setup system, the wall will increase or decrease its brightness when the ambient light intensity changes.




RS485 Quad Module Connections

Use the RS485 cables to connect the RS485 Out of each Quad controller module to the RS485 In of the next module. The order of the modules does not matter. You do not have to complete the loop - the RS485 In of the first module will remain empty, as will the RS485 Out of the last module. Unlike other Planar Clarity wall products, these connections must be made, even if you will not be controlling your wall through RS232.

Checking Your Connections

Below is a diagram of a basic configuration. This illustrates which cables are connected where. Use this to make sure you have correctly made all of the basic connections.

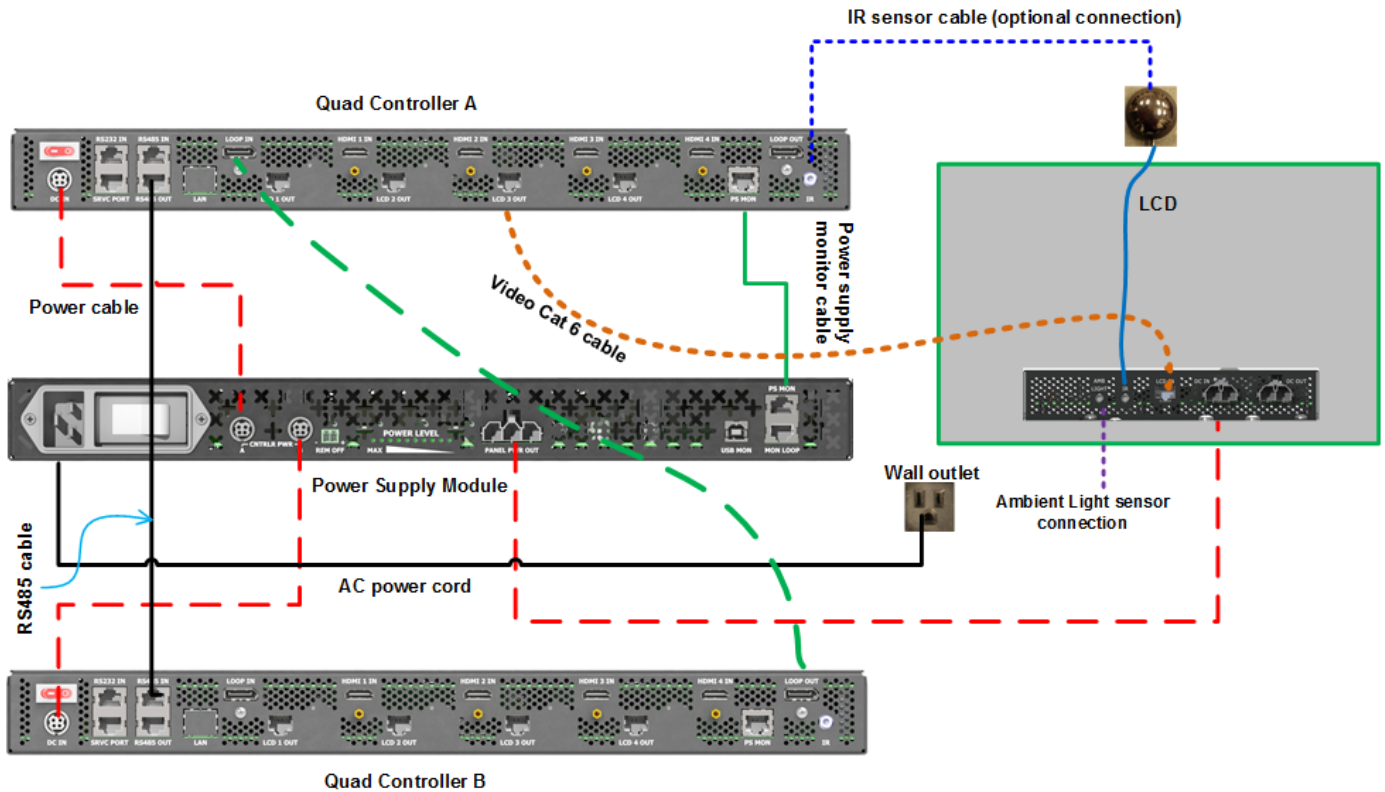

System Addresses

Each Quad controller module contains four microprocessor/scaler engines that each control one LCD. Each microprocessor has an address to which the master uses to communicate with. These are also the addresses that an external host computer will use when controlling the system through RS232. These addresses are determined by the system, not by the installer. Each Quad controller module has a letter address: A through P. This address is set via the address selector dial (see next page for a picture) on the front of the module. You must set this selector so that each Quad controller module in your system has a unique address. Each Quad controller module has four processors, numbered 1 through 4. The address of each processor is the combination of the Quad controller module letter address and the processor number address. For example, A1, A2, A3, A4, B1, B2, B3, B4, etc. Throughout this manual we will be using these addresses to refer to these processors.

Since each processor controls one LCD, we will also be referring to LCDs by this letter/number designation. Keep in mind that if you change where the video cables were connected for a particular LCD, its address will change. **An LCD's address is not determined by its position in the array, rather by its Quad Controller module connection.**


Each Quad controller module also has four HDMI input connections. These four inputs are closely associated with the corresponding LCDs. So in this manual we will also be referring to these connections by letter and number designations, A1, A2, A3, etc. Whether an address refers to an input, a processor, or an LCD will be apparent from the context.

Quad Module A, and specifically processor A1 has special duties. It is referred to in this manual as the master. The IR remote input, the (optional) host RS232 connection and the (optional) network connection are all made on processor A. LCD A1 displays most of the menus.

Setting the Address of Each Quad Controller Module

For each Quad controller module that is connected to LCDs, you will need to set an address (similar to a unit ID) on the front of the Quad controller module. Using the Quad controller module address adjustment tool, manually turn the dial in the middle of the address selector to the letter you want to be identified with the LCDs connected to this Quad controller module. It is important to note that each module must be unique. So one Quad controller module needs to be A, the next B, etc.

Use the address adjustment tool to turn this dial to the letter you want

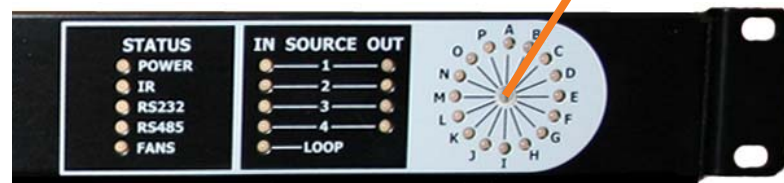

It is recommended that you set the addresses when the Quad controller modules are turned on. This makes it easier to see LEDs as you switch between addresses. Once you have set the IDs how you want, it is recommended that you power cycle all Quad controller modules.

Connecting Sources

Note: If you do not connect your sources at this time, you can do the Matrix Layout (see "Matrix Layout Menu" on page 91) and color balance (see "Adjusting Color Balance" on page 92) before sources are connected.


The digital inputs of the Clarity Matrix give you the flexibility to create a variety of configurations that can be displayed. There are three basic ways that you will most likely use your video wall.

- Spread one picture over the entire video wall.
- Plug in individual inputs into each LCD in the wall.
- Spread one picture over a section of the wall, or what we'll call a sub wall, and have individual inputs on the other displays.

Each Quad controller module has four HDMI inputs, a DisplayPort Loop input and a DisplayPort Loop out. How you connect your sources may depend on what you want to do with the wall. Familiarize yourself with the configuration scenarios ("Understanding Wall Configuration" on page 140) before connecting your sources. If in doubt, connect each source to the HDMI In connector that corresponds to the LCD connector where you want that source to be displayed. If you plan to use any form of the Clarity Big Picture, cable the Loop Out and Loop In connections as shown in "Loop-Through" on page 84. If you want to connect an analog source to the Clarity Matrix, you will need to use an analog to HDMI converter or matrix switcher that converts analog signals to HDMI.

Quad Controller Status LEDs


LEDs on the front of the Quad Controller module can indicate a number of different things. The following shows the most common occurrences.

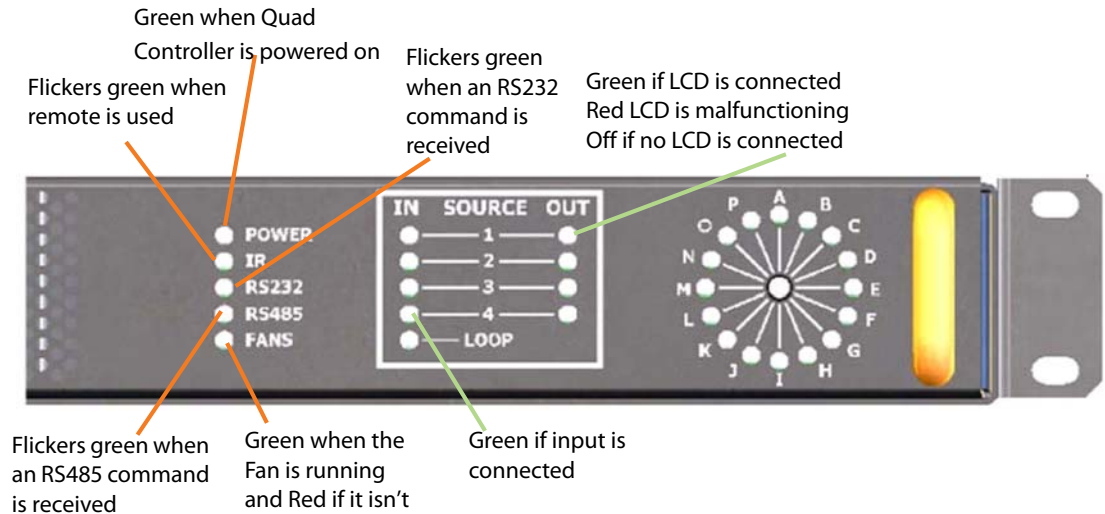

While the Quad Controller module is updating its other three processors, the lights on the front have a distinctive pattern. Every other light in the circle will be illuminated. The Output lights will slowly change from red to green. One of the lights will be red when the other three are green. That is the processor which is currently being programmed. The entire process for all three processors should take about 20 minutes. Do not turn off the power during this time. Wait until all controllers have finished and the front panel lights have returned to normal. Then turn off the power to all modules one more time and power the system on as normal.

Loop-Through

All of the “Quick Configure” settings and many other configurations rely on the system being configured for loop through, as shown in the diagram below. Connect a cable from the LOOP OUT connector of the first Quad controller module to the LOOP IN connector of the next Quad controller module. Connect the LOOP OUT connector of the final Quad controller module to the LOOP IN connector of the first module, completing the loop. Below is an example of a basic loop through.

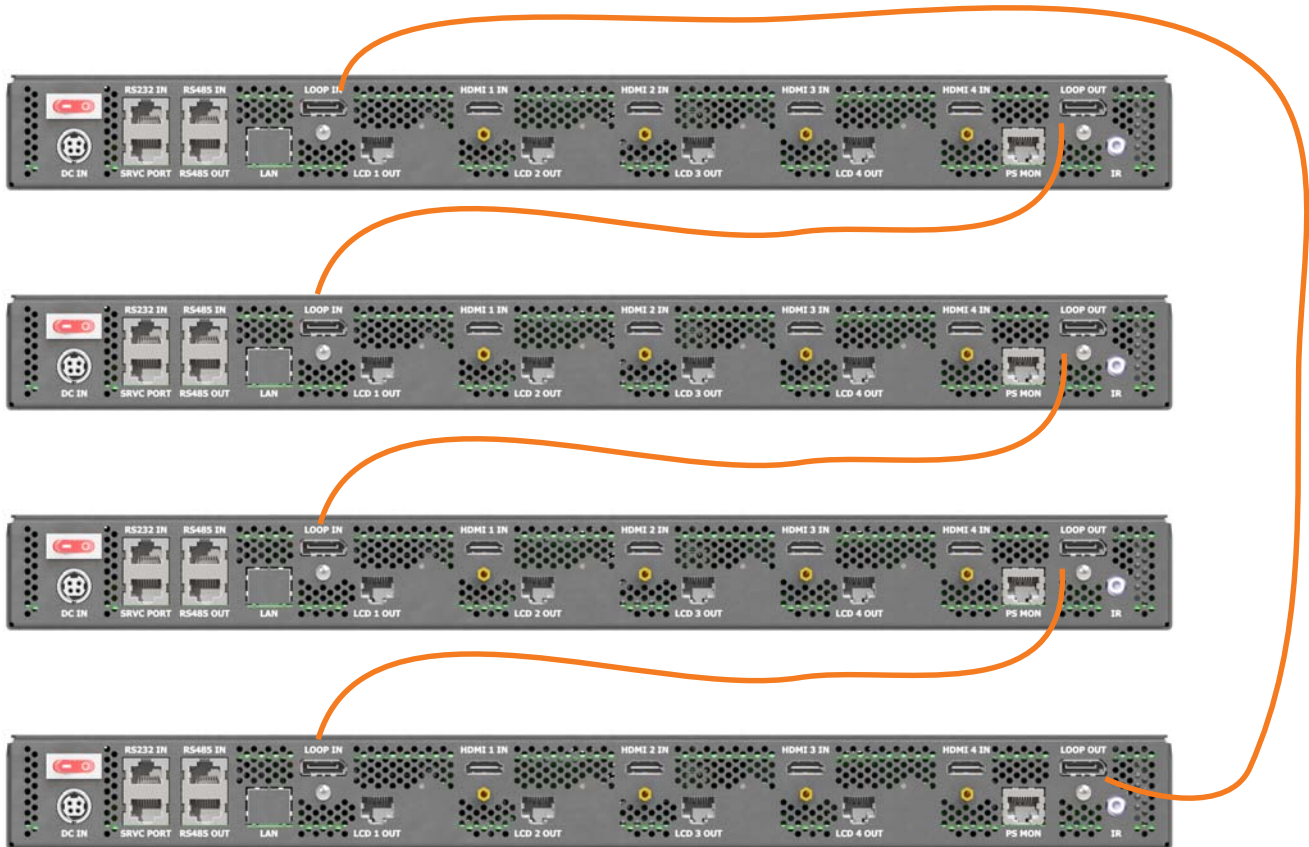

Configuring a Clarity Matrix Video Wall

Menu Settings

There are four different types of menu in the on-screen menus: navigational, global, local and status. These will be described in more detail on the following pages.

Basic Configuration Steps

Configure your displays by performing steps in the following order:


- 1 Matrix Layout (global) - see "Matrix Layout Menu" on page 91.
- 2 Color Balance the displays (local) - see "Adjusting Color Balance" on page 92.
- 3 Configure Wall Settings. See "Understanding Wall Configuration" on page 140 for more information.
- 4 If you need to adjust the on-screen image, see "On-Screen Menus" on page 166 to see different menu options.

Master vs. Slave Displays

The master display is the LCD where the bulk of the on-screen menu configuration and off-board configurations will be controlled. The master display is the one plugged into the LCD 1 connector of Quad controller module A, which is identified on screen as A1. All other displays in the array are considered "slave" displays, which will receive many global software and hardware commands from the master (A1). Information specific to individual displays can be controlled on slave displays.

Menus and the Remote

All on-screen menus are controlled using a specific remote control created for the Clarity Matrix LCD Video Wall System. This remote allows you to access the four menu types: navigational, global, local and status. These menus are described below.

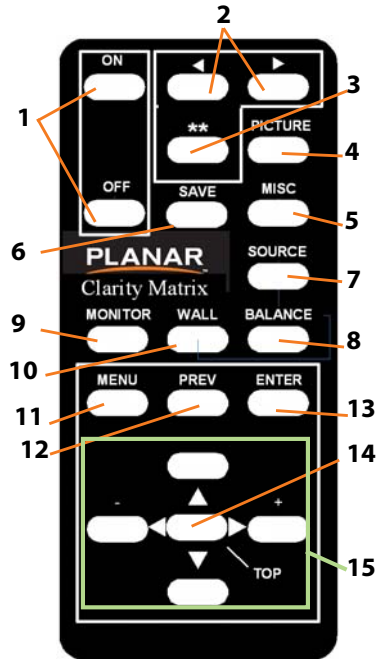

Number	Definition
1	ON/OFF Turn the display ON/OFF.
2	◀ ▶ Move the target left or right.
3	** Set the target to all at once.
4	PICTURE With each press, go to Picture, Input Levels, Aspect Ratio, Picture Position, Zoom Top & Left, Zoom Bottom and Right.
5	MISC With each press go to Miscellaneous submenu, main Miscellaneous Options menu, Backlight Settings and Serial Port Settings.
6	SAVE Press once for Recall, twice for Save.
7	SOURCE Takes you to the next Quick Configure setting (Big Picture, A1, A2, etc.)
8	BALANCE Press once for the Color Balance menu.
9	MONITOR With each press, go to Unit Status, Serial Port Status, Setup Summary and Test Patterns.
10	WALL Open the Wall Configuration menu.
11	MENU Bring up the on-screen menus.
12	PREV Return to the previous menu.
13	ENTER Press to select a menu option.
14	TOP Move the highlight bar to the top line of the menu.
15	▼ ▲ ▶ ◀ Arrow keys move the highlight bar around on the menu to select the option you want.

Note: Keep in mind that you need to point the remote towards where the IR sensor is mounted. Arrows on menu lines lead to other menus:

- Solid black arrows ▶ lead to navigational menus.
- Hollow blue arrows > lead to status menus.
- Hollow green arrows ▷ lead to slave menus.

Navigational Menus

Navigational menus appear only on the master display, which can be identified on screen by A1. These menus simply allow you to get to other menus, and there are no active functions directly available from them.

- Diagnostics
- Picture

Global Menus

Global menus can only be controlled on the master (A1) display. Any changes made to global menus will result in changes to the entire wall. The following menus are globally controlled:

- Backlight Settings
- Factory Settings
- Matrix Layout
- Memory
- Miscellaneous Options
- Quad Module Route
- Serial Port Settings
- Set Clock/Schedule Events
- Wall Configuration

Status Menus

Status menus appear on all displays simultaneously and show information specific to each display. Status menus are informational and no settings can be changed. The following menus are status menus:


- Hours
- Picture Information
- Program Information
- Serial Port Status
- Setup Summary
- Unit Status

Local Menu

Local menus allow you to make changes to a specific display as needed. This allows you to better fine-tune certain settings, such as scaling or overscan. Local menus can appear on any display, either one at a time or all at once. You need to select which display you want to control by using the **target control buttons** on the remote control. The following menus are locally controlled:

- Aspect Ratio
- Big Picture
- Diagnostics
- Input Levels
- Picture
- Picture Position
- Size & Position
- Test Patterns
- Wall Setup
- Viewport Bottom & Right
- Viewport Top & Left
- Zoom Bottom & Right
- Zoom Top & Left

This button puts the local menu onto all displays at once.

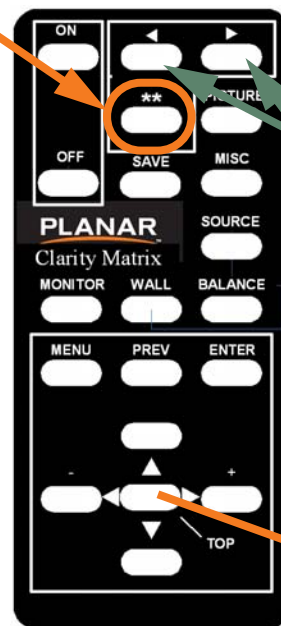

These arrows move the local menu to the next display in the array.


Top button

When displaying local menus on all LCD modules at the same time, the highlight bar might be on a different line on each menu. Use the TOP button to simultaneously move the highlight bar to the same place on all menus.

Display IDs

LCD displays are identified with a letter and a number, called a display ID. The letter is set on the front panel of the Quad controller module (see "Setting the Address of Each Quad Controller Module" on page 82). The number is chosen by the connector to which the display is connected.

If this display will show local menus, the display ID has a green square around it. The master (A1) display has a red square around it.

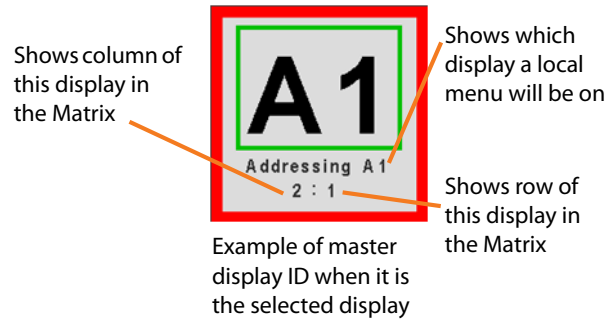

RS232 Communication

RS232 control is not necessary for operation, but is a convenient way to control displays from a computer at a distance. If your installation will not use RS232 control, skip this section.

Everything you can do with the remote, you can do with RS232 commands. Plus, you can send inquiries to the displays and find out the current settings and values.

Connecting RS232 Cables

- 1 Connect the 9-pin adapter to the serial output connector of the controlling computer. (This computer does not have to be the same one as the computer used as a picture source.) The serial output is sometimes called the Comm Port, and sometimes there is more than one.
- 2 Connect a cable from the RJ-45 adapter to the RS232 connector of the Quad controller module A.

For more information about configuring RS232 communications, see "Serial Port Settings and Diagnostics" on page 126.




RS232 port connection is on the Quad Controller module.
Only connect to Quad module **A** or the connection won't work.

Wiring the adapter

To go from 9-pin D-sub serial connector on the back of the computer to an RJ45 connector, use a standard RJ45-to-9-pin adapter. Wire it internally as shown. The wiring shown for this adapter is correct for *straight-through* cables. Straight-through cables are wired 1-to-1, 2-to-2, etc.



	RJ45	9-pin
Yellow wire	6	3
Black wire	3	2
Green wire	5	5

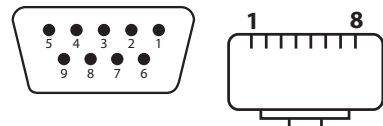

RJ45 looking into the socket

Matrix Layout Menu

The Clarity Matrix LCDs are equipped with sensors that allow them to know their position in the array. The master (A1) keeps track of this information and displays it in the MATRIX LAYOUT menu. To start the automatic discovery process, go to the MATRIX LAYOUT MENU (MAIN MENU > WALL CONFIGURATION > MATRIX LAYOUT) and select the AUTO option. The discovery process takes about 5-10 seconds for the entire wall.

Caution: You **must** complete this step before performing any other on-screen menu configurations!

Matrix Layout								PLANAR
<Enter> to update matrix layout								
Auto			Quick			Reset	**	
A1	A2	A3						
B1	B2	B3						
C1	C2	C3						

Note: The first time you open this menu, it will be populated from A1 all the way through P4, no matter how many modules you have.

Depending on how your wall is set up, one of four scenarios could occur:

- Auto Layout Complete - The discovery process completed without errors.
- No Auto Layout has been performed - For more information, see "Troubleshooting" on page 178.
- Error in the Layout - This might appear if an LCD is in service mode. For more information, see "Troubleshooting" on page 178.
- If your array is larger than nine wide or nine high, you will not be able to see the entire layout on this menu. A message will appear that indicates this.

Adjusting Color Balance

Color Balance is used to select the color temperature of each display, as well as to match the colors of adjacent displays when several displays are arranged in an array. When you see a yellow car move across a video array from one display to another, you want it to have the same color for the whole trip, not change from yellow to tan to orange.

Colors vary slightly from one display to the next, because of slight variations in the backlights and displays. This cannot be avoided, but you can compensate for it with color balancing.

Caution: In order to maintain temperature specifications, displays with protective optically bonded glass installed have a lower maximum brightness. Do not attempt to color balance a mixture of displays with and without protective optically bonded glass.

Understanding Color Temperature

Different “pure white” light sources do not always have the same color. For instance, light from an incandescent bulb has more yellow than light from direct sunlight. “Color Temperature” is a way of measuring these color differences. In general, higher color temperature numbers are bluer or “cooler.” You may have a reason for wanting your display to be a specific color temperature. For instance, if you are using Clarity Matrix in a television studio where you will be videotaping the content, you will want a low color temperature. Clarity Matrix defaults to the brightest setting possible, which is 100 in the RED, GREEN and BLUE lines under WHITE BALANCE. You may choose a different color temperature by setting it in the COLOR BALANCE menu.

Adjusting Color Temperature

Select the COLOR TEMPERATURE line in the COLOR BALANCE menu and then select from 3200°K (Warm), 5500°K, 6500°K, 8500°K (Cool) or NATIVE. If you want the brightest display, select the NATIVE option.

Changing the color temperature changes the three WHITE BALANCE values. You can also change the WHITE BALANCE values individually to create a custom color temperature. Once you have changed the values, a new CUSTOM option is available on the COLOR TEMPERATURE line.

Note: Resetting Color Balance: Most displays in a shipment are color balanced at the factory. If this has happened, the Color Balance menu will show a CUSTOM Color Temperature when you first turn them on. If you make color adjustments to a display, you can return to this value with the RESET TO FACTORY. If you want to start with the brightest possible display and do your own color balancing, you can use RESET TO NATIVE.

Color Balancing Multiple Displays

Color balancing is subjective. It may seem strange at first, but it gets easier with practice. Fortunately, you don't have to match all the colors; you only have to match whites and grays. It is not necessary to achieve a perfect white or a perfectly colorless gray. It is only necessary that all the displays look alike when they display white and gray.


Caution: Never try to match the colors of the displays with the black and white level controls or with the video controls.

Caution: If you are color blind, even a little bit, do not color balance your array. Have someone else color balance the wall.

- 1 Turn on all the displays in the array and let them warm up for at least 5 minutes. The backlights must be thoroughly warm before you color balance.
- 2 Press MISC twice on the remote to open the BACKLIGHT CONTROL menu. Set the global backlight level to the desired brightness.



- 3 Open the COLOR BALANCE menu by pressing BALANCE on the remote.

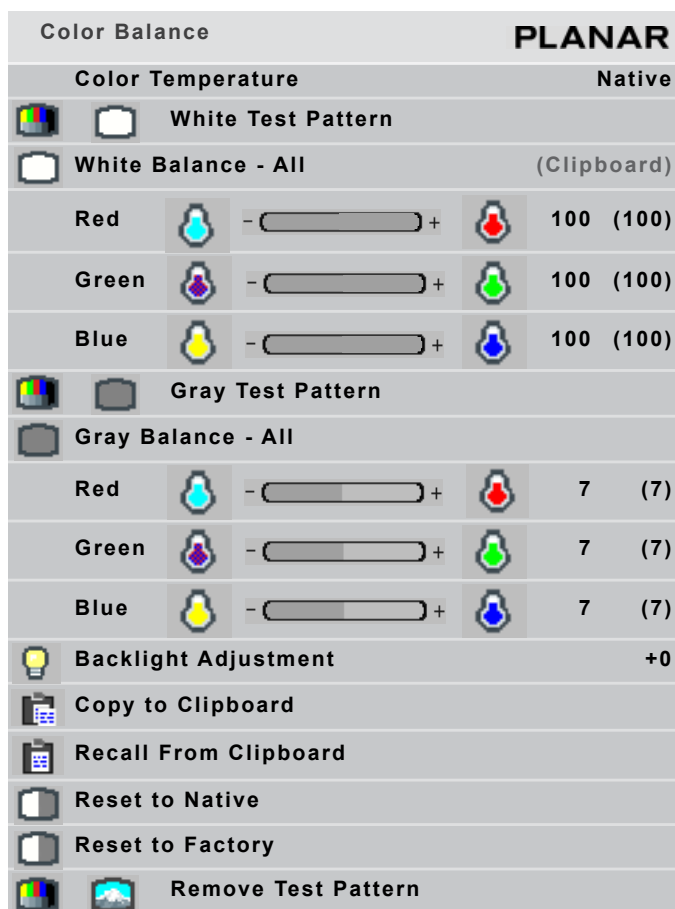

Note: The color balance menu is a local menu. For more information about navigating local menus, see "Local Menus" on page 88.

- 4 Press the ** button to show the menu on all displays.
- 5 If the array has never been color balanced, make sure you start with the same color temperature setting on each display.
 - a If you are not interested in achieving a specific color temperature, use NATIVE, which is the brightest.
 - b If the display has been color balanced before, it will display CUSTOM in the COLOR TEMPERATURE line, because the balance values don't match any of the pre-set color temperatures.
 - c To reset all displays to the factory default setting, select "Reset to Defaults" and press ENTER.
- 6 Highlight the WHITE TEST PATTERN line and press ENTER. This will show the white test pattern on all displays.

Note: Always use the *internal* Test Patterns for color balancing, *not* an external pattern.

- 7 When all displays are white, find the *least bright* display in the array. This will be the “baseline” display, and you will *not* adjust it. All other displays will be adjusted to this baseline display.
Why pick the “least bright” display? Why not pick the brightest and adjust to it? When the white value is 100, the display is as bright as it can get. You are adjusting for slight variations in backlight brightness.
- 8 Choose a display next to the baseline display and adjust its BACKLIGHT ADJUSTMENT to make its overall brightness match the baseline display. (If you can’t bring this setting down to match the baseline, maybe you didn’t choose the darkest display.)
- 9 Continue with other adjacent displays until the overall backlight brightness matches on all displays.

Note: The backlight adjustment does not affect the color of the display.

- 10 Choose a display next to the baseline display and adjust its white values (red, green and blue) to make its color match the baseline display. Concentrate on the center of the displays, not the adjacent edges. Do *not* adjust the gray values at this time.
- 11 Continue with other adjacent displays until all the displays have the same appearance when white.
- 12 When all displays look the same when displaying the White test pattern, highlight the GRAY TEST PATTERN line and press ENTER. This will show the gray pattern on all displays.
- 13 Choose any display as the new baseline display. It does not need to be the baseline display you used for white.
- 14 Adjust the gray values for all the displays until they match the baseline display. Do one display at a time. Again, match the center part of the picture, not the edges.
- 15 When all displays match in gray, highlight the REMOVE TEST PATTERN line and press ENTER. Press MENU to close all the menus.
- 16 If you need to start over, you can always select RESET TO FACTORY or RESET TO NATIVE and press ENTER. (See Resetting Color Balance in the Note on page 92.)

Tips for Color Balancing


Note: A Color Balance Tool is available as a separate kit. It has a sensor and a PC program that will automate the color balance process.

- COPY TO CLIPBOARD will save all the current settings to a temporary memory. You can then make more adjustments to see if it gets better or worse. RECALL FROM CLIPBOARD will restore these saved settings. The clipboard is only for testing. These values are not saved when AC power is off.
- Stand back from the array and directly in front of it to get an overall view.
- Small changes are difficult to see at first, particularly with white. When you don't know which color to change, pick one at random and change it 4 or 5 steps. The result will be either better or worse. If worse, go the other way with that color. If that is also worse, put this color back where you started and do the same with another color. If everything you do makes the match worse, you must be close to the ideal point.
- Removing red has the same effect on hue as increasing blue and green together. The COLOR BALANCE menu slider bars have colored bulbs at each end to tell you what the effect will be of moving a color toward that end.
- Changes in the white values affect the gray values but changes in gray values do not affect the white values.
- Color balance values are saved on the LCD Interface board, so they will be correct for the display even if it is moved to a different Quad Controller output.

In the MISCELLANEOUS OPTIONS menu (MAIN > ADVANCED OPTIONS > MISCELLANEOUS Options) there is a checkbox **Allow 10 Bits Per Color** (default is checked). When this is checked and the source is 10bpc, the display does its converting algorithm and the picture is slightly improved. However, if the source is 1080p, the data is coming to the display too fast for it to handle, and it uses 8bpc, whether or not this box is checked.

Miscellaneous Options		PLANAR
<input checked="" type="checkbox"/>	Menu Timeout	Never Time Out
	Rotate Menu	None
<input type="checkbox"/>	Hide Source Absent Message	
<input checked="" type="checkbox"/>	Allow Frame Lock	
<input checked="" type="checkbox"/>	Allow 10 Bits Per Color	

You can see which color depth is currently used in the Picture Information menu.
(MAIN MENU >PICTURE > PICTURE INFORMATION)

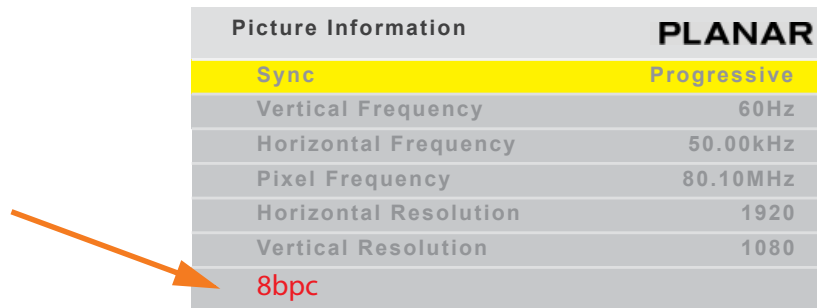

The image shows a screenshot of a 'Picture Information' menu. The menu is displayed in a grey-themed interface. At the top, 'Picture Information' is on the left and 'PLANAR' is on the right. Below this, there are several rows of settings. The 'Sync' row is highlighted in yellow and shows 'Progressive'. Other rows include 'Vertical Frequency' (60Hz), 'Horizontal Frequency' (50.00kHz), 'Pixel Frequency' (80.10MHz), 'Horizontal Resolution' (1920), and 'Vertical Resolution' (1080). The final row shows '8bpc' in red text, with an orange arrow pointing to it from the left.

Picture Information	PLANAR
Sync	Progressive
Vertical Frequency	60Hz
Horizontal Frequency	50.00kHz
Pixel Frequency	80.10MHz
Horizontal Resolution	1920
Vertical Resolution	1080
	8bpc

Advanced Options

Advanced options are used mostly for fine tuning and will rarely need to be used. The most commonly used items in the **ADVANCED OPTIONS** menu are described in the following sections:

- Color Balance: see "Adjusting Color Balance" on page 92
- Backlight Settings: see "Backlight Control" on page 111
- Miscellaneous Options: see "Miscellaneous Options" on page 99

The less commonly used options are covered in the following sections of this manual:


- Size and Position: see "Adjusting Position" on page 125
- Serial Port Settings: see "Serial Port Settings and Diagnostics" on page 126
- Set Clock/Schedule Events: see "Setting the Clock and Scheduling an Event" on page 102

Main Menu	PLANAR
Wall Configuration	▶
Picture	▶
Memory	▶
Diagnostics	▶
Advanced Options	▶
Program Information	>

Advanced Options	PLANAR
Color Balance	▷
Size and Position	▶
Miscellaneous Options	▶
Backlight Settings	▶
Serial Port Settings	▶
Set Clock / Schedule Events	▶
EDID	▷
Orbiter	▶

Miscellaneous Options

The MISCELLANEOUS OPTIONS menu contains several unrelated settings. The MISCELLANEOUS “slave” menu is the first menu to appear when you press the MISC button. To access the main MISCELLANEOUS OPTIONS menu, press MISC *twice* on the remote.

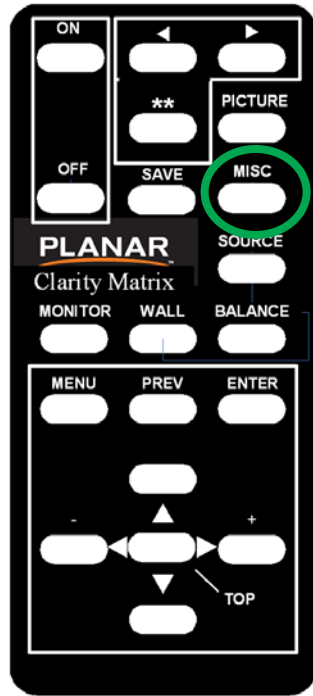

Miscellaneous Options	PLANAR
Menu Timeout	Never Time Out
Rotate Menu	None
<input type="checkbox"/> Hide Source Absent Message	
<input checked="" type="checkbox"/> Allow Frame Lock	
<input checked="" type="checkbox"/> Allow 10 Bits Per Color	

Menu Timeout

Determines how long the on-screen menus will be displayed; the range is 0-60 seconds; NEVER TIME OUT means the menus will remain on screen until you choose to turn them off.

Rotate Menu

Makes the menus readable when the display is arranged in portrait or landscape orientation. ROTATE MENU does not rotate the picture. It only arranges the menus so they read the same way the picture does. To use the display in portrait mode, your source image must be rotated.

Hide Source Absent Message

When there is no source, a message box appears on the display saying Source Absent. This message will remain for 30 seconds and then is erased. If the user turns on the menu system, the source absent message appears again for another 30 seconds. Some users would rather not see the source absent message, so this checkbox allows the messages to be turned off completely.

Allow Frame Lock

Frame lock causes the display to synchronize its vertical refresh timing with that of the incoming source. This prevents frame tearing or frame dropping. To frame lock, the incoming signal must be within the refresh parameters of the display itself, which is from 50 Hz to 60 Hz.

Allow 10 Bits Per Color

Clarity Matrix displays normally use 10 bits per color unless the bandwidth of the signal is too high. Then it will automatically revert to 8 bits per color. However, there may be signals that cause problems and that the Matrix G2 processor didn't detect, causing it to revert to 8 bits per color. Checking this box should prevent this problem.

Auto Color Space

Digital pixels can be encoded in several ways. The pixel may consist of values for red, green and blue which combine to make up the final color. This is known as RGB color space. Alternatively, the pixels may be encoded with the brightness of the pixel in one value, and the color information on the other two values. This is known as YCbCr encoding.

Normally the values range from 0 to 1023 for 10 bit per color or 0 to 255 for 8 bit per color, but they could be encoded using only 16 to 235 for 8 bit values or 64 to 940 for 10 bit values. This is compressed color and is sometimes used in video (as opposed to computer) signals.

HDMI signals have extra information aside from the video embedded in the signal. This extra information is known as infoframes. Details on the color space are one of the types of data carried in infoframes. The HDMI receiver chips in the Clarity Matrix system are capable of decoding infoframes and converting the pixels into RGB full color automatically.

Clarity Matrix is capable of converting the pixels to RGB, but it must be told what the incoming signal is; it can't always do it automatically. This makes things complicated in the Clarity Matrix G2 system, because the processor which controls the HDMI receiver is not always the same as the one that displays the image.





Color Depth

Color Depth simply means the number of bits used to define each color. Normal color depth is 8 bits per color (8bpc), but some picture sources have 10bpc. Although the Clarity Matrix display has 8bpc, it is capable of handling an input with 10bpc with an improved picture. It does this by interpolating and dithering the information in the two least significant bits.

In Clarity Matrix there are 4 settings for the colorspace parameter: AUTO, RGB, RGB-VIDEO and YCbCr.

Main Menu	PLANAR
Wall Configuration	▶
Picture	▶
Memory	▶
Diagnostics	▶
Advanced Options	▶
Program Information	>

Picture	PLANAR
Picture Information	>
Picture Setup	▷
Aspect Ratio	▷

Input Levels	PLANAR
 Colorspace	AUTO
Center Point (frame buffer)	929 832 699
Center Point (processed)	914 828 622
 Black Level (offset) - All	- [Slider] +
Red	- [Slider] + 128
Green	- [Slider] + 128
Blue	- [Slider] + 128
 White Level (gain) -All	- [Slider] + 128
Red	- [Slider] + 128
Green	- [Slider] + 128
Blue	- [Slider] + 128
 Set to Nominal for RGB Levels (0-255)	
* Copy Settings to All Displays	

The default setting is **AUTO** which relies on the HDMI receiver to detect the colorspace and convert it to RGB.

The other settings are used when there is no HDMI information, such as when a DVI-to-HDMI converter is used. **RGB-VIDEO** is used when the incoming signal is compressed color data. In order for the processor to properly convert RGB-VIDEO, it uses an internal block to convert the incoming signal to full range YCbCr and then a second block to convert the YCbCr to RGB. For YCbCr, just the second internal block is used. For RGB no conversions are performed.

Setting the Clock and Scheduling an Event

The Clarity Matrix LCD Video Wall can be easily programmed to schedule specific events, such as turning the display on or off.

- 1 To access the SET CLOCK/SCHEDULE EVENTS menu, press MENU on the remote and from the MAIN MENU, select ADVANCED OPTIONS > SET CLOCK/SCHEDULE EVENTS.

Main Menu	PLANAR
Wall Configuration	▶
Picture	▶
Memory	▶
Diagnostics	▶
Advanced Options	▶
Program Information	>

Advanced Options	PLANAR
Color Balance	▷
Size and Position	▶
Miscellaneous Options	▶
Backlight Settings	▶
Serial Port Settings	▶
Set Clock / Schedule Events	▶
EDID	▷
Orbiter	▶



- 2** Press ENTER to open the EVENT popup menu.
- 3** Do one of the following:
 - To set the clock, see "Setting the Clock" on page 104.
 - To schedule an event, see "Scheduling an Event" on page 104.

Setting the Clock

Use the following instructions to set the clock.

- 1 If 0 is not already selected in the Event # line, use the -/+ keys to select it.

Event # (0= set clock)	0
Frequency	Never
Action	No Action
Slot to Recall	1
Day of Week	Tuesday
Year	2010
Month	03
Date in Month	02
Hour	21
Minute	30

- 2 Depending on the changes you want to make, update any of the following lines:
 - Year
 - Month
 - Date in Month
 - Hour
 - Minute

Note: Time is calculated using a 24-hour clock. For example, if the current time is 9:30 p.m., set the Hour line to 21 and the Minute line to 30.

- 3 When you are finished making the appropriate changes, press ENTER to see the new time at the top of the SET CLOCK / SCHEDULE EVENTS menu.
- 4 Press MENU to close the menu system.

Scheduling an Event

The most important event that can be “scheduled” for the Clarity Matrix LCD Video Wall is to turn it on or off. Scheduling an automatic shut off time for the Clarity Matrix helps ensure that Temporary Image Retention does not occur. The following events can be scheduled:

- Turn wall off/on
- Set the clock ahead/back 1 hour
- Recall a memory slot

Use the following instructions to schedule an event.

- 1 Use the -/+ keys to select the “event number” you want to correspond to this event.

- 2 Use the up/down arrows to select the FREQUENCY line. Use the -/+ keys to scroll through the list until you find the selection you want. The following frequencies can be selected:
 - One Time (e.g. to set clock ahead one hour in the spring)
 - Daily (e.g. to turn the display on/off)
 - Weekly

Event # (0= set clock)	1
Frequency	Daily
Action	No Action
Slot to Recall	1
Day of Week	Wednesday
Year	2010
Month	02
Date in Month	24
Hour	0
Minute	0

Note: If you have set up a one time event, the frequency will show “Never” once the event has occurred. You can schedule the event to occur again by changing the frequency back to “One Time” and then correcting the date and time.

- 3 Use the up/down arrows to select the ACTION line. Use the -/+ keys to scroll through the list of Action items until you find the one you want. The following actions can be selected:
 - Turn Wall Off
 - Turn Wall On
 - Recall Slot
 - Set Clock Ahead 1 Hour
 - Set Clock Back 1 Hour
- 4 Do one of the following:
 - If you selected “Recall Slot” in the previous step and want to recall a memory slot other than the one shown, go to step 5.
 - If you did **not** select “Recall Slot” in the previous step, go to step 6.

- 5 Use the up/down arrows to select the SLOT TO RECALL line. Use the -/+ keys to scroll through the list until you find the selection you want.

Event # (0= set clock)	3
Frequency	Weekly
Action	Recall Slot
Slot to Recall	4
Day of Week	Monday
Year	2010
Month	05
Date in Month	03
Hour	12
Minute	30

Note: If you select a memory slot that has not been set up, no action will occur.

- 6 Depending on the frequency you selected and the change you want to make, update any of the following lines:
 - Day of Week
 - Year
 - Month
 - Date in Month
 - Hour
 - Minute

Note: Time is calculated using a 24-hour clock. For example, if you want your wall to turn off at 9:30 p.m., set the HOUR line to 21 and the MINUTE line to 30.

- 7 Continue setting up events until you are finished. Changes are automatically saved each time you move from line to line.
- 8 When you are finished making the appropriate changes, press ENTER to see the new events on the SET CLOCK / SCHEDULE EVENTS menu.
- 9 Press MENU to close the menu system.

Aspect Ratio Settings

The aspect ratio of any picture is its width divided by its height. $W/H = \text{Aspect Ratio}$


The native aspect ratio of the Clarity Matrix displays is 1.77. This is sometimes referred to as 16:9 for 1.77. The native resolution of most Clarity Matrix displays is 1920 x 1080. The LX46S-3D is an exception with a resolution of 1366 x 768.

Many pictures do not have this aspect ratio. Standard television, VGA, SVGA, and XGA signals are 1.33. Movies from DVDs vary depending on the original film format, but are often 1.85. The larger the number, the “wider” the picture seems.


When the incoming picture is a different aspect ratio from the screen, the display gives you six choices (see SCALE MODE submenu options) to make it fit.

Scale Mode Settings

- 1 To select the Scale Mode, press PICTURE on the remote three times.

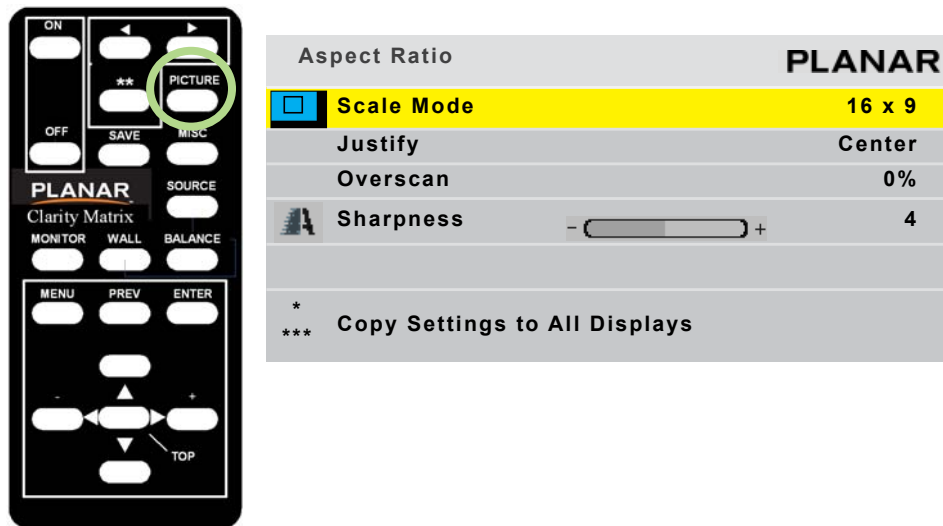







- 2 With SCALE MODE highlighted, press ENTER. The SCALE MODE submenu displays.






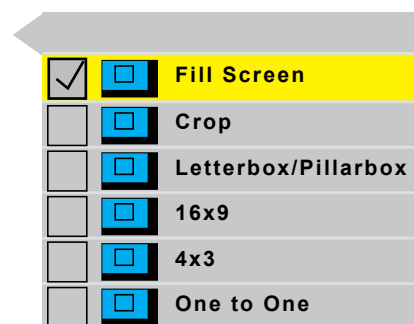


The scale modes are “radio” buttons; you can only choose one at a time.

Note: The display is not capable of compressing the image in one direction while stretching it in the other. For example, if you try to display a UXGA (1600 x 1200) on an Clarity Matrix LCD Video Wall in a 1 x 2 column arrangement (1920 x 1080) at Fill All, the display will letterbox the image and the following note will appear at the bottom of the menu: "Can't display Change Scale Mode." You can leave the scale mode at Fill All or change it to Letterbox. You can also select Crop or One to One.

Note: The SCALE MODE menu icons change to indicate the effect each mode will have on the picture based on the JUSTIFY and SCALE MODE settings, and the source resolution.

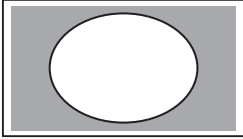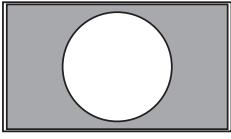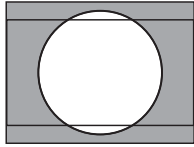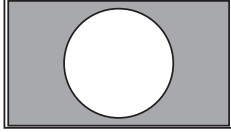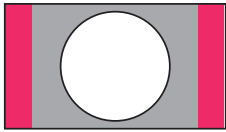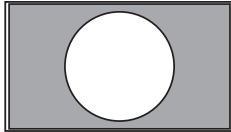Scale Mode	Affect on Input Type on 16 x 9 Display	
	4 x 3 source (e.g. Standard Video or VGA/SVGA/XGA)	16 x 9 source (e.g. 1080i or WXGA computer source)
Fill Screen	Stretches width of image 	Displays full image without distortion 
<p>Fill Screen makes the picture fit top-to-bottom and left-to-right, regardless of how this stretches or compresses the picture. Fill All distorts the picture, when the aspect ratio of the incoming picture is not the same as the display.</p>		
Crop	Crops top and bottom of image; fits width of image without distortion 	Displays full image without distortion 
<p>Crop expands non-native aspect ratio pictures until the <i>second</i> edges touch the border and lets the other edges of the picture fall outside the display and get cropped.</p>		
Letterbox /Pillarbox	Fits height of image without distortion; fills width with border 	Displays full image without distortion 
<p>Letterbox/Pillarbox expands the picture until the first edges (top-bottom or left-right) touch the border of the display, and then fills in the other sides with a solid color.</p>		

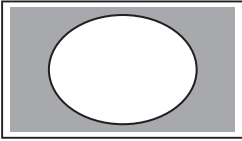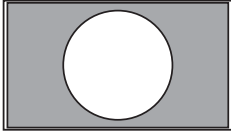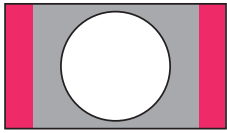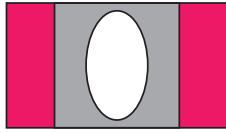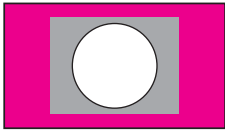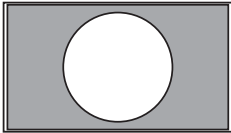Scale Mode	Affect on Input Type on 16 x 9 Display	
	4 x 3 source (e.g. Standard Video or VGA/SVGA/XGA)	16 x 9 source (e.g. 1080i or WXGA computer source)
16 x 9	Stretches image to fill width without affecting height 	Displays full image without distortion 
<p>(16 x 9) forces the aspect ratio to 16 x 9 (1.77), the standard for many DVD movies. This will distort any picture other than 16 x 9 aspect ratio pictures. 16 x 9 can be used to display anamorphic DVDs on an array.</p>		
4 x 3	Fits height and width of image without distortion; fills width with border 	Fits height of image, compresses width and fills with border 
<p>(4 x 3) forces a 4 x 3 (1.33) aspect ratio, the ratio of standard television.</p>		
One to One	Displays image without distortion at actual size 	Displays full image without distortion 
Example above represents a VGA input displayed on one LCD module		Example above is for 1366 x 768 input displayed on one LCD module
<p>One to One maintains the original size and aspect ratio of the picture. This may leave blank areas on all four sides. For instance, a VGA picture (640 x 480) on a 16 x 9 display will occupy only a small area in the center of the screen. The primary use of One to One is to display the image without scaling artifacts.</p> <p>The One to One Scale Mode will produce different cropping results and the image size will be different for each input resolution.</p>		

Justify Settings

Justify determines how the picture will be placed in a wall of displays. For a single display, Justify determines placement on the screen. For a wall of displays, if the image is not large enough to fill all the displays in the wall, some will be left blank.

Top/Left

Positions the image starting with the top, leftmost display, then across and down.

Center

Positions the image starting with the center of the image in the center of the wall spreading out equally to all displays.

Bottom/Right

Positions the image starting with the bottom, rightmost display, then across and up.

Overscan

This is used to hide blank areas and stray lines in the edges of an image. The lower the overscan setting, the more of the optical image that is seen. Standard CRT televisions have an overscan of about 5%, which may actually hide content or images that you want to see.

Sharpness

Sharpness settings determine how crisp the image should be. There are sixteen levels of sharpness, where 0 is the softest and 15 is the sharpest. Seven is the default.

Backlight Control

The backlight is optimized for the LCD operation. For normal operating conditions, the backlight can be adjusted for maximum brightness if desired. If you are operating at higher altitudes up to 2000 meters, it is recommended that you run the backlight at a reduced intensity. Running at maximum intensity at high altitudes can affect the lifetime expectancy.

Note: To extend the backlight life, it is recommended that you use the lowest backlight brightness that works for your application. This will reduce power consumption, heat output and reduce the chances of TIR from occurring. (See "What is Temporary Image Retention?" on page 5.)

To open the BACKLIGHT CONTROL menu, press MISC *twice* on the remote.



Note: The last two lines above will only appear on the master (A1) display.

When BACKLIGHT CONTROL MODE is **Manual**, you see the menu above.

When BACKLIGHT CONTROL MODE is **Auto**, you see the menu below

Note: Auto Backlight On only works when an Ambient Light sensor is plugged into LCD A1.



Auto Backlight On

If AUTO BACKLIGHT ON is checked, the display turns on the backlights soon after AC power is applied. It won't wait for a remote control or RS232 command.

This is the normal mode for applications where the displays will be on 24 hours a day. This way, no one has to manually turn on the backlights after a power failure.

Caution: To prevent temporary image retention (TIR), it is recommended that you do **not** leave the Clarity Matrix LCD Video Wall on for 24 hours a day. To get the most out of your display, see "Recommended Usage" on page 5.

If the displays normally have the backlights off for part of the day or night, do not check this box. Otherwise a power failure at night would turn on the backlights.

Turn Backlight Off With No Source and (DPMS) Delay

When checked, TURN BACKLIGHT OFF WITH NO SOURCE (DPMS) causes the backlights to turn off after the source goes absent for the length of time specified in the DPMS DELAY line. If this line is not checked, the backlights remain on indefinitely. To specify an amount of time after which the source is absent that the backlights will shut off, enter that number in the DPMS DELAY line.

Backlight Intensity

The backlight intensity can range from 0-100 in increments of 10. If you are operating at higher altitudes up to 2000 meters, it is recommended that you run the backlight at a reduced intensity.

Dimmed Intensity (Backlight Control Mode is AUTO only)

This sets the intensity of the backlight when the ambient light is below the threshold. Set this value to an acceptable brightness when the room may be at its darkest. This will reduce the power required for panels and the image will be more comfortable for viewers.

Ambient Threshold

This value determines the ambient light intensity required to switch the backlight between Backlight Intensity and Dimmed Intensity. A greater value keeps the brightness at the set Backlight Intensity while a lower value sets the brightness to the Dimmed Intensity. The backlight change will occur when the Ambient Light is five points different from the Ambient Threshold for greater than three minutes. This value is to be determined through observation of the environment as to what is appropriate for the end user. The measured Ambient Light on the OSD will give the value to set the Dimmed Intensity to once conditions have been determined as appropriate. Range is 0 to 255.

Ambient Light Sensor Software Setup

Follow these instructions to make sure the system will work properly.

- 1** Set Backlight Control Mode to **AUTO**.
- 2** Adjust the Dimmed intensity value to your desired setting. This can be determined by mimicking the dim conditions and determining the proper Backlight Intensity under 'Manual' mode.
- 3** Adjust the Ambient Threshold to the desired value. This can be determined by using the Ambient Light reading from the sensor when the dim conditions were mimicked.
- 4** Set Backlight Control Mode to **MANUAL**.
- 5** Set Backlight Intensity to desired value under bright operating conditions.
- 6** Reset the Backlight Control Mode to 'Auto'. The system will now change the intensity automatically based on the values provided. If you wish to change these values, do this procedure from the beginning.

Controlling EDID Behavior

EDID (Extended Display Identification Data) is the standard protocol for a display to communicate to a picture source what kind of display it is, what its capabilities are.

Planar displays present to the picture source a default EDID that is not always optimum for the task. Sometimes you will want to control this directly to get best performance. Examples:

- You may use the **Preferred Timing** field in the EDID even though your desired resolution exists elsewhere in the EDID list.
- You may need a non-standard resolution to accomplish mullion compensation without scaling the image.
- The display is configured in a Big Picture Array, and you would like to output one-to-one pixels. The standard EDID can't accommodate all possible Big Picture combinations.
- You are in a country with 50Hz power and would like the EDID timing to be 50Hz rather than the default 60Hz.

You can specify detailed timing for EDID by setting the horizontal active, vertical active, and vertical refresh rate. The system will then calculate the rest of the parameters by using the CVT reduced blanking formula. You can also specify all the timing parameters manually.

All this can be done in the EDID menu. Open the on-screen menu and from the MAIN MENU select **ADVANCED OPTIONS > EDID**.

EDID	PLANAR
EDID Detailed Timing 1 (Preferred Timing)	▶
EDID Detailed Timing 2	▶
<input type="checkbox"/> EDID Has Only Preferred Timing	←
<input checked="" type="checkbox"/> EDID (Plug and Play) Enabled	

- If the **EDID Has Only Preferred Timing** is checked, the only timing information in the EDID will be that of the Preferred Timing field. All other timing descriptions in the EDID will be blanked out. This can be useful for some video drivers that always attempt to use the highest resolution in the EDID, even if that isn't the desired behavior.

EDID Detailed Timing 1	PLANAR
Number of pixels per line	
Update EDID	
Horizontal Active	1920
Vertical Active	1080
Vertical Refresh Rate	60Hz
<input type="checkbox"/> Fully Specified	
Pixel Clock	148.50MHz
Horizontal Blanking	280
Horizontal Front Porch	88
Horizontal Sync Width	45
Vertical Blanking	45
Vertical Front Porch	4
Vertical Sync Width	5
Revert to Factory	

- **EDID (Plug and Play Enabled)** is normally checked. When it is *not* checked, the EDID will be written over with invalid checksums and will appear as an invalid display to the picture source device. This is sometimes useful for troubleshooting.
- **Update EDID** writes all changes made in the **EDID Detailed Timing** menu into the EDID. Writing to the EDID is a slow process, so it is done in the background. **Update EDID** is grayed out unless there are pending changes. When the writing is finished, any attached sources re-read the EDID.
- The same EDID is written to all 5 HDMI sources.
- The **Fully Specified** checkbox determines whether the detailed timing will be calculated from
 - horizontal active, vertical active, and vertical refresh rate (unchecked),
 - or if all fields are specified by the user (checked).

Orbiter Control

For still images that might remain on the display for a long time, the Orbiter lets you move the image slowly to reduce the possibility of temporary image retention.

Spreading Images Across the Wall

For the Clarity Matrix LCD Video Wall, you will need to set up a variety of options that relate to how each display fits into the wall. Whether you use Planar's Big Picture or an external video processor, your goal is to make the picture fit together properly at the edges.

Using an External Video Processor

The processor divides a single picture into several sections and sends each part on a separate cable. Connect these cables to the proper display.

You can still position the picture with the display controls. With most processors, you can position and zoom the picture with the processor controls.

Using the Quick Configure Feature

The Clarity Matrix LCD Video Wall contains sensors that easily configure the layout of your wall. Quick Configure sets up the routing (see "Understanding Wall Configuration" on page 140) and the Big Picture Setup (see below) automatically. If you have a more complicated setup and want to manually configure your wall, use the BIG PICTURE SETUP menu.



Using the Matrix Layout

This feature is described earlier in the manual. For more information, see "Matrix Layout Menu" on page 91.

Using Planar's Big Picture

To use Planar's Big Picture, you must set the values in the BIG PICTURE SETUP menu for the same wall size on all the LCDs in the wall using the Big Picture feature.

Wall Configuration	PLANAR
Quick Configure Big Picture A3	Big Picture ▶
Big Picture Setup	▷
Matrix Layout	▶
Quad Module A Route	▶
Quad Module B Route	▶
Quad Module C Route	▶
Synchronize High Resolutions	

Big Picture Setup	PLANAR
Matrix Position	3x3 1:1
Wall Width	3
Wall Height	3
Unit Column	1
Unit Row	1
<input type="checkbox"/> Wall Mode	
<input type="checkbox"/> Frame Compensation	
 Frame Height	10 pixels
 Frame Width	10 pixels
* ***	Copy Settings to All Displays
	No Big Picture Key installed

Matrix Position

Shows the current size of the wall and the position of the currently selected panel.

Wall Width and Wall Height

These show the number of displays wide and high for the *picture*. This may be different from the physical size of the wall. You could build a 4 x 3 array of displays and use WALL MODE to put a single picture on the four displays in the upper left corner, for instance. Using the QUICK CONFIGURE line on the WALL CONFIGURATION menu will set these automatically.

Unit Column and Unit Row

These represent the position of the display in this “array.” For example, in the 4 x 4 landscape array of displays shown below, Unit numbering starts at the top left corner of the array. This display would have a Unit Column value of 1 and a Unit Row value of 1. Using the QUICK CONFIGURE line on the WALL CONFIGURATION menu will set these automatically.


Unit Row 1 Unit Column 1	Unit Row 1 Unit Column 2	Unit Row 1 Unit Column 3	Unit Row 1 Unit Column 4
Unit Row 2 Unit Column 1	Unit Row 2 Unit Column 2	Unit Row 2 Unit Column 3	Unit Row 2 Unit Column 4
Unit Row 3 Unit Column 1	Unit Row 3 Unit Column 2	Unit Row 3 Unit Column 3	Unit Row 3 Unit Column 4
Unit Row 4 Unit Column 1	Unit Row 4 Unit Column 2	Unit Row 4 Unit Column 3	Unit Row 4 Unit Column 4

Wall Mode

When checked, this turns on the Planar’s Big Picture feature. When not checked, the display shows the whole picture. Using the QUICK CONFIGURE line on the WALL CONFIGURATION menu will set these automatically.

Frame Compensation


When video displays are used in an array, the intent is to display a large version of an image. However, even the thinnest of mullions can break up the image oddly. Notice the eagle's eye here.

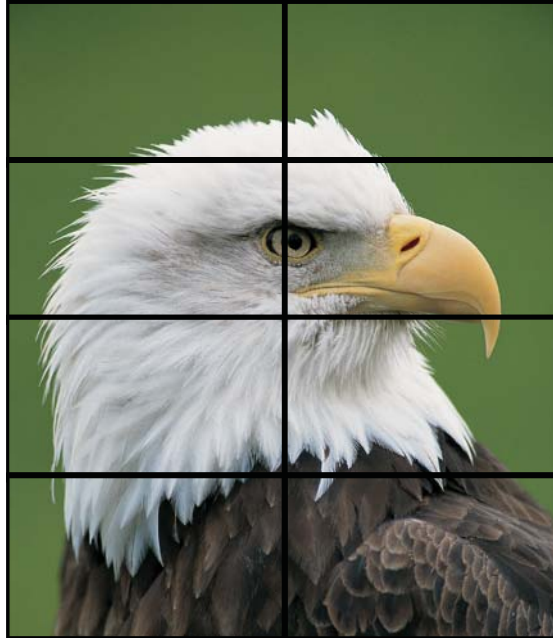

One way around this is to adjust the image. Imagine looking out a window made up of many panes of glass. The image you see is partially obscured by the frames, but your mind assembles the image and ignores the frames.

Note: Frame Compensation is also known as mullion or bezel compensation.

Frame compensation allows you to mimic the mind's function by "hiding" portions of the picture (as if the mullions were actually hiding the image) and allow the distributed image to appear as one very large image.

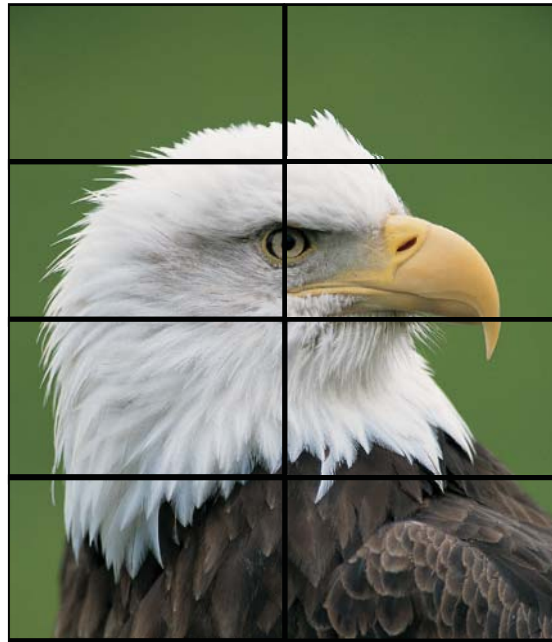

To ensure images containing diagonal lines remain correctly diagonal, turn on Frame Compensation.

Depending on how closely you space the displays, you must determine how much of the picture to "hide" behind the display's mullions and the space between displays.

Frame Height and Frame Width

Frame Height can be set to hide pixels at the top and bottom of images. Frame Width can be set to hide pixels to the left and right of images. The Frame Height and Frame Width numbers default to the correct numbers for your display, assuming they are tiled with the frames tightly together. If your installation leaves more space between the frames, you will need to increase these numbers.

Zoom and Viewport

Zoom fits the edges of a large picture - one that covers many displays' screens - from side to side and top to bottom.

To access the Zoom menus, select MAIN MENU > ADVANCED OPTIONS > SIZE AND POSITION. Then select the ZOOM TOP & LEFT menu or the ZOOM BOTTOM & RIGHT menu.

You can zoom the sides up to +100 pixels *larger* in each direction. You can also zoom the sides up to -100 pixels *smaller*, but only if that side is not the edge of the overall picture.



Zoom Menu Entries

Image Resolution

Shows the resolution of the source picture.

This Unit

Shows the number of pixels this display is using of all the incoming pixels.

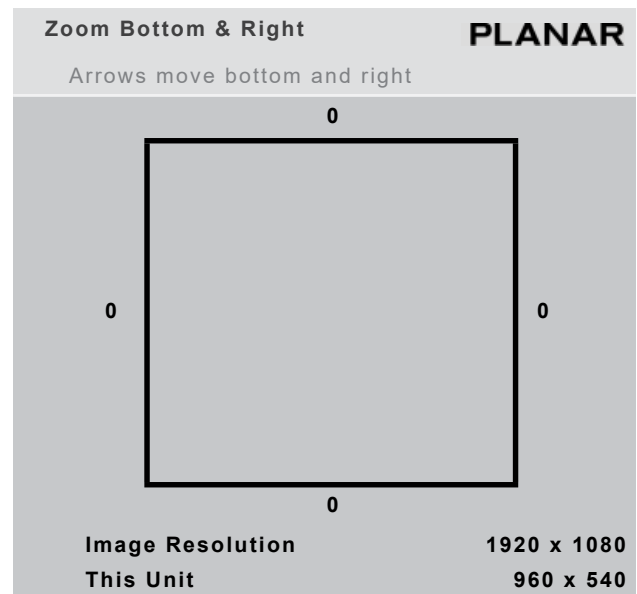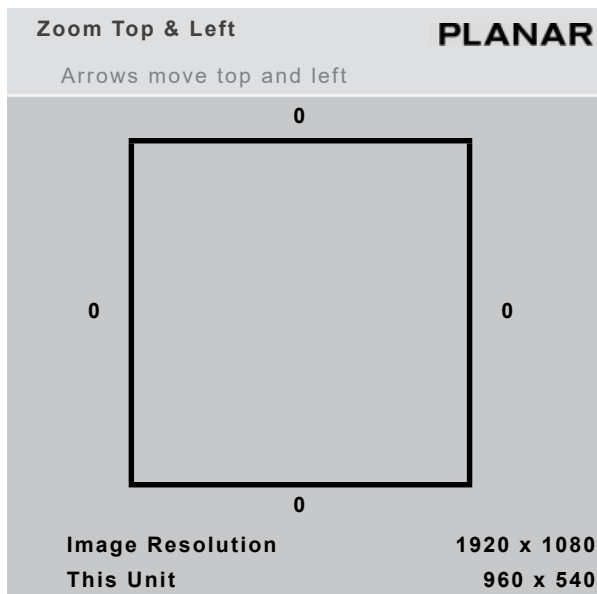

Viewport Adjustment



Use the VIEWPORT menu (MAIN MENU > ADVANCED OPTIONS > SIZE AND POSITION > VIEWPORT WINDOW) to adjust the number of pixels actually used on the display. You can't increase this number, but you can reduce it.

Main Menu	PLANAR
Wall Configuration	▶
Picture	▶
Memory	▶
Diagnostics	▶
Advanced Options	▶
Program Information	>

Advanced Options	PLANAR
Color Balance	▷
Size and Position	▶
Miscellaneous Options	▶
Backlight Settings	▶
Serial Port Settings	▶
Set Clock / Schedule Events	▶
EDID	▷
Orbiter	▶

Size & Position	PLANAR
Picture Position	▷
Zoom Window Top & Left	▷
Zoom Window Bottom & Right	▷
Viewport Window Top & Left	▷
Viewport Window Bottom & Right	▷
Reset All Windows to Default	
* ***	Copy Settings to All Displays

Note: The COPY SETTINGS TO ALL DISPLAYS line will only appear if this menu is on the master display (A1).

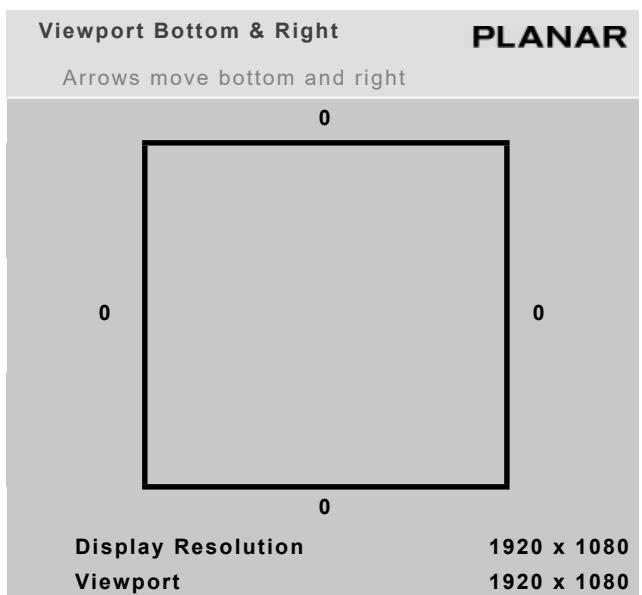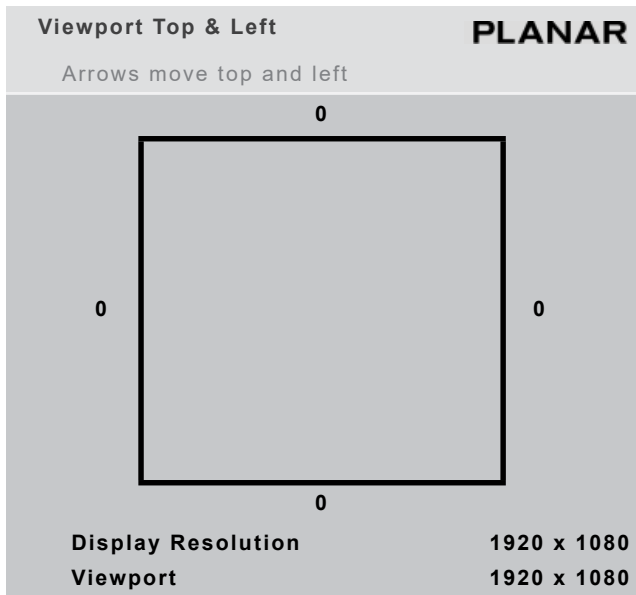

Display Resolution


Shows the resolution of the display. This has nothing to do with the resolution of the source picture.

Viewport

Shows the number of display pixels being used.

Adjusting Position

Position moves the picture on the screen but does not move the menus. Open the PICTURE POSITION menu (MAIN MENU > ADVANCED OPTIONS > SIZE AND POSITION > PICTURE POSITION). The four arrow keys move the picture on the screen.

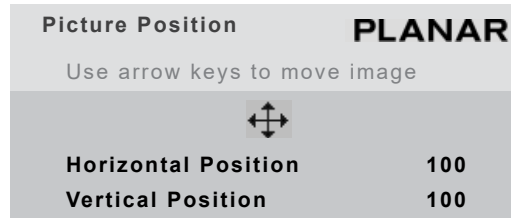

The numbers for Horizontal Position and Vertical Position are arbitrary, where 100 100 is a neutral position. Moving the picture position is equivalent to using both the zoom and viewport adjustments together in order to pan the image. Pixels will be dropped from the image on one side and black space will fill in for the dropped pixels on the other side.


Serial Port Settings and Diagnostics

If you want to control the displays remotely with RS232 commands from a computer, read this section. For more information, see "RS232 Communication" on page 90. RS232 is also used to upgrade the firmware of the Quad controller modules.

Diagnostic information is available from the UNIT STATUS and HOURS menus. For more information, see "Diagnostics" on page 128.

Serial Port Settings

To access the SERIAL PORT SETTINGS menu, select the MAIN MENU > ADVANCED OPTIONS > SERIAL PORT SETTINGS.

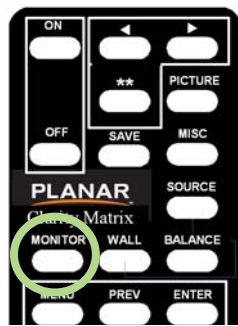

Serial Port Settings	PLANAR
ASCII Response Type	Symbolic
ASCII Response Terminator	CR
Baud Rate	19200

ASCII Response Type

Determines what type of data will be returned to the computer. For human-readable text in a serial program, choose SYMBOLIC. For computer-read data, use NUMERIC or DATA ONLY.

ASCII Response Terminator

Will be determined by what your serial program wants to see at the end of every transmission from the display.

Baud Rate

The baud rate *must* be the same as that used by the controlling computer. The baud rate is *not* automatically set, as it is with modem communications. It must be manually set here **and** at the computer to match each other.

Note: For firmware upgrades, you don't need to adjust the baud rate.

Serial Port Status

The SERIAL PORT STATUS menu provides diagnostic information for the serial port.

To access the SERIAL PORT STATUS menu, press MONITOR *twice* on the remote. You will see the status of the serial port that has had the most recent activity. To view the status on a different serial port, use the arrow key.

To clear the counters back to 0, press <ENTER> on the remote.

Serial Port Status RS232 ▶		PLANAR
<ENTER> to clear; +/- to select different serial port		
Commands Received		34
Replies Sent		34
Last Packet Type		Operation
Last Packet Address		Not Addressed
Bytes Received		921
Bytes Sent		773
UART Framing Errors		4
UART Overflow Errors		0
Group A Unit: 1		19200 Baud
		Most Recent
		...115, 111, 108, 117, 105, 111, 110, 63, 13
		.st--1?.st--2?.st--3?.lcd.vertical-resolution?.

Controlling With RS232 Commands

The RS232 protocol - the "rules" for controlling displays with RS232 commands - are described in a separate document. See "Planar's Technical Support Website" on page 279 to see how to get to the web page. Then look for Clarity Matrix LCD Video Wall and under that the *RS232 Guide*.

Diagnostics

Most of the submenus available from the DIAGNOSTICS menu are not used on a regular basis. Examples of these menus can be found in "On-Screen Menus" on page 166.

To check status information for the system or to see usage information, use the UNIT STATUS and HOURS menus, which are explained in the following sections.

Checking Unit Status

The UNIT STATUS menu shows information for the LCD, Quad controller module and the power supply module. This can be a helpful troubleshooting tool if you are having operational issues with one of the system components.

Unit Status A1		PLANAR	
Matrix 010-1409	Rev 01	1920 x 1080	
LCD			
Temperature	20 °C	Backlight	OK
24v Supply	24.40v		
48v Supply	47.31v		
Power	52.26w	MX46HDS	
Quad Module			
Temperature	31 °C	Fan	OK
Power Supplies			
		Fan	OK
		PS	OK

Note: The QUAD MODULE line only appears on processor number 1 of each Quad controller module. The Power Supply line only appears on processor A1.

LCD

Temperature indicates the current internal temperature inside the LCD module. This is not the ambient temperature nor the temperature to be used to determine if the display is out of specification.

Backlight indicates whether the backlight is operating normally or not.

24V Supply indicates the backlight voltage. If the number is below 22V, there is an issue with the power to the LCD. The likely cause is excessive cable length or cable quality between the power supply module and the LCD module.

48V Supply indicates the incoming voltage to the interface board.

Power indicates the amount of power currently consumed by the LCD module. The display type is also shown.

Quad Module

Temperature indicates the current internal temperature of the Quad module. This is not the ambient temperature nor the temperature to be used to determine if the module is out of specification.

Fan indicates whether or not one or both of the internal module fans are functioning properly.

Power Supply

Fan indicates whether or not a fan internal to the module is functioning properly.

PS indicates whether or not a power supply is functioning properly within the module.

Note: In order for this menu to show power supply module information correctly, the PS MON cable must be plugged in. If it is not plugged in, you will see the message "PS MON CABLE IS NOT CONNECTED."

Checking System Usage

The HOURS menu shows the hours the system and backlights have been in use. It also shows the average LCD usage information.

Hours	PLANAR
System Time	00636:45
Backlight Time	00532:00
Average Hours Per Day	12
Number of Days > 20 Hours	0

Note: The last two lines will only appear on the master (A1) display.

System Time

Number of hours the system has been operational. This number is counted by Quad controller module A.

Backlight Time

Number of hours that the LCD has been turned on. This information is stored in the LCD interface board.

Average Hours Per Day

Shows the average number of hours per day an LCD has been on.


Number of Days > 20 Hours

Shows the number of days that an LCD display has been on more than 20 hours per day. This feature helps installers keep displays within the normal use thermal guidelines. For more information, see "Normal Use Thermal Guidelines" on page 6.

Communicating via Network

The Quad Controller Module may have an optional device known as WallNet that allows remote monitoring of the status of various components in the wall. WallNet is used to display information about a wall of displays via a web browser. When first plugged in, it utilizes DHCP to obtain an IP address. Upon failing to obtain an IP address, it defaults to a static IP address of 192.168.12.12. For more detailed information, refer to document 020-1260-00, User Guide, WallNet2, Matrix G2.

Note: For communication to work, the external LAN *must* know the IP address of the Quad Controller which is shown in the Networking menu (MAIN MENU > DIAGNOSTICS > NETWORKING).

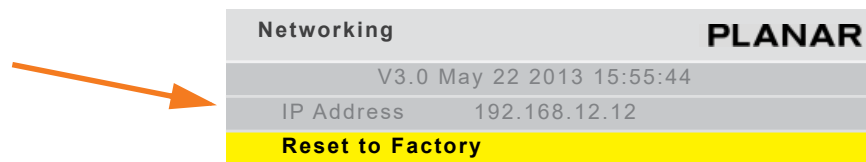

Note: This option must reside on the master Quad Controller to function properly.

Saving and Recalling Configurations

Advantages of Saving Configurations to Memory Slots

- You can compare multiple settings quickly
- You don't have to repeat settings when comparing entire configurations
- You can revert to a known good setting when testing new configurations

What the Memories Store

The following settings can be stored in a memory slot and recalled when needed:

- Selected source
- Resolution (and much more about the signal)
- Sharpness
- Position and size (zoom settings)
- Everything in the ASPECT RATIO menu
- Brightness, Contrast, Hue and Saturation for video sources

All of this is stored separately for each memory slot. As an example, you could store multiple different wall setups and switch between them quickly.

Global Storage

The following settings are stored globally; that is, they are stored at the display level and are the same for all memory slots.

- Everything in the MISCELLANEOUS OPTIONS menu
- All the HOURS settings
- All the COLOR BALANCE settings

Memory: What Is Saved? And Where?

In the display, some parameters (values) are associated with the mode. The mode is primarily the horizontal and vertical resolution and the vertical frequency of the incoming source picture. It is more than that, but if you think of it this way, you will be close enough. Some parameters are associated with the input. The parameters specific to mode and input are saved in memory slots.


Some parameters are global. They are independent of the mode or input, and are not saved to memory slots, as shown in the table below.

Parameter	Saved in Slot	Global
ASCII Response Term.		x
ASCII Response Type		x
Auto Backlight On		x
Baud Rate		x
Black Level: R, G & B	x	
Brightness (video)	x	
Color Balance (all values)		x
Contrast (video)	x	
Hue	x	
Justify	x	
Menu Timeout		x
Overscan	x	
Plug and Play (EDID)		x
Position, Horizontal	x	
Position, Vertical	x	
Saturation	x	

Parameter	Saved in Slot	Global
Sharpness	x	
Viewport Window Bottom	x	
Viewport Window Left	x	
Viewport Window Right	x	
Viewport Window Top	x	
Wall Height	x	
Wall Mode	x	
Wall Unit Column	x	
Wall Unit Row	x	
Wall Width	x	
White Level: R, G & B	x	
Zoom Window Bottom	x	
Zoom Window Left	x	
Zoom Window Right	x	
Zoom Window Top	x	

Saving Configurations

- 1 Set up the wall the way you want it.
- 2 Press the SAVE button twice.

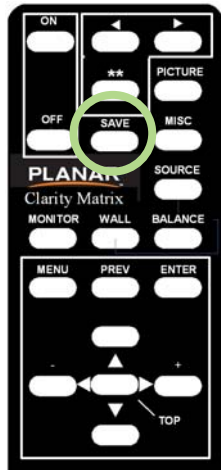

Save		PLANAR							
<input type="checkbox"/>	1	<input type="checkbox"/>	9	<input type="checkbox"/>	17	<input type="checkbox"/>	25	<input type="checkbox"/>	33
<input type="checkbox"/>	2	<input type="checkbox"/>	10	<input type="checkbox"/>	18	<input type="checkbox"/>	26	<input type="checkbox"/>	34
<input type="checkbox"/>	3	<input type="checkbox"/>	11	<input type="checkbox"/>	19	<input type="checkbox"/>	27	<input type="checkbox"/>	35
<input type="checkbox"/>	4	<input type="checkbox"/>	12	<input type="checkbox"/>	20	<input type="checkbox"/>	28	<input type="checkbox"/>	36
<input type="checkbox"/>	5	<input type="checkbox"/>	13	<input type="checkbox"/>	21	<input type="checkbox"/>	29	<input type="checkbox"/>	37
<input type="checkbox"/>	6	<input type="checkbox"/>	14	<input type="checkbox"/>	22	<input type="checkbox"/>	30	<input type="checkbox"/>	38
<input type="checkbox"/>	7	<input type="checkbox"/>	15	<input type="checkbox"/>	23	<input type="checkbox"/>	31	<input type="checkbox"/>	39
<input type="checkbox"/>	8	<input type="checkbox"/>	16	<input type="checkbox"/>	24	<input type="checkbox"/>	32	<input type="checkbox"/>	40

The SAVE grid menu displays. This menu contains 40 numbered memory slots.

- 3 Using the arrow keys on the remote, navigate to a slot:
 - An unchecked slot number allows you to save new settings.
 - A checked slot has settings already saved to it. If you want, you can overwrite what's already saved.
- 4 Press ENTER. The SAVE SLOT menu displays.

Save		PLANAR		
Slot Number	(Current)	1		
Save Now	(will overwrite occupied slot)			
Name	DI 1920x1080			
Source	Digital			
Colorspace	RGB			
Resolution	1920 x 1080			
Wall	2 x 2	1:1		
Scale/Justify	One to One / Center			
Position/Overscan	168,19 / 0%			
Zoom UL/ LR	+0,+0	/ +0,+0		
Viewport UL/LR	+0,+0/	+0,+0		
Frequency/Phase	1602 / 22.5°			
Sharpness	Normal			
Black Level	63	55	57	
White Level	166	170	169	

Note: This menu shows all the settings that will be saved. You can't change anything but the name in this menu. The appearance of this menu is somewhat different for digital and video sources, reflecting what is saved for them.

- a If the current settings exactly match what is already in the memory, (CURRENT) will appear in the SLOT NUMBER line.
 - b If the memory already had data, and the only change is to the name, the phrase "will update name of occupied slot" appears in the SAVE NOW line.
 - c If this memory already has something stored in it, the phrase "will overwrite occupied slot" appears in red on the SAVE NOW line. This is the only warning.
 - d If none of these messages appear, this slot is empty.
- 5 Select SAVE NOW and press ENTER. The display instantly stores all the current settings into that memory slot.

Changing the Name of the Memory Slot

The default name is an abbreviation of the source connector, resolution, and if Wall Mode is on, wall settings. In the following example, the name tells you that the source is connected to Digital, which displays 1920 x 1080, is part of a 2 x 2 array, and is the display in the upper left corner (column 1, row 1).

- 1 If you want a more descriptive name, select NAME and press ENTER. A little bar appears beneath the NAME line.

Save		PLANAR	
Slot Number	1		
Save Now			
Name	DI 1920x1080 2x2 1:1		
Source	Digital		
Colorspace	RGB		
Resolution	1920 x 1080		
Wall	2 x 2	1:1	
Scale/Justify	One to One / Center		
Position/Overscan	168,19 / 0%		
Zoom UL/ LR	+0,+0 /	+0,+0	
Viewport UL/LR	+0,+0/	+0,+0	
Frequency/Phase	1602 / 22.5°		
Sharpness	Normal		
Black Level	63	55	57
White Level	166	170	169

- a Use the + or - keys to move the yellow selector under the character you want to change.
 - b Use the up/down arrows to change the character.
- 2 When you are finished, press PREV.
 - 3 Select SAVE NOW and press ENTER.

Note: If you use RS232 controls, you can also use commands to send a string name to a memory slot, saving time.

Recalling Stored Configurations








- 1 Press SAVE once to open the RECALL GRID menu.



Recall				PLANAR					
<input checked="" type="checkbox"/>	1	<input checked="" type="checkbox"/>	9	<input checked="" type="checkbox"/>	17	<input type="checkbox"/>	25	<input type="checkbox"/>	33
<input checked="" type="checkbox"/>	2	<input checked="" type="checkbox"/>	10	<input type="checkbox"/>	18	<input type="checkbox"/>	26	<input type="checkbox"/>	34
<input type="checkbox"/>	3	<input checked="" type="checkbox"/>	11	<input type="checkbox"/>	19	<input type="checkbox"/>	27	<input type="checkbox"/>	35
<input type="checkbox"/>	4	<input type="checkbox"/>	12	<input type="checkbox"/>	20	<input type="checkbox"/>	28	<input type="checkbox"/>	36
<input type="checkbox"/>	5	<input type="checkbox"/>	13	<input type="checkbox"/>	21	<input type="checkbox"/>	29	<input type="checkbox"/>	37
<input type="checkbox"/>	6	<input type="checkbox"/>	14	<input type="checkbox"/>	22	<input type="checkbox"/>	30	<input type="checkbox"/>	38
<input type="checkbox"/>	7	<input type="checkbox"/>	15	<input type="checkbox"/>	23	<input type="checkbox"/>	31	<input type="checkbox"/>	39
<input type="checkbox"/>	8	<input type="checkbox"/>	16	<input type="checkbox"/>	24	<input type="checkbox"/>	32	<input type="checkbox"/>	40

 - 2 Navigate to the slot you want to recall. When navigating, you can only go to the checked numbers. All the slots with checks have something stored in them. The others are grayed out.

3 Press ENTER to open the RECALL SLOT menu.

Recall		PLANAR		
Slot Number		17		
Recall Now				
Name	DI 1920x1080			
 Source	Digital			
 Colorspace	RGB			
 Resolution	1920 x 1080			
Wall	2 x 2	1:1		
Scale/Justify	One to One / Center			
Position/Overscan	168,19 / 0%			
Zoom UL/ LR	+0,+0 /	+0,+0		
Viewport UL/LR	+0,+0 /	+0,+0		
 Frequency/Phase	1602 / 22.5°			
 Sharpness	Normal			
 Black Level	63	55	57	
 White Level	166	170	169	

Note: If this slot number has exactly the same settings that are currently being used, a (CURRENT) message appears on the top line.

The name of the memory is listed here, as well as all the important parameters (data) stored in that memory slot.

- 4 If the name is *not* the one you want, press PREV and choose another memory.
- 5 In the RECALL SLOT menu, RECALL NOW is selected. Press ENTER to recall the parameters currently displayed in the menu.
- 6 We suggest that you create a list of memory slots that contains each slot number, name and description.

Deleting a Configuration

- 1 Go to the MEMORY menu (MAIN MENU > MEMORY).








Memory	PLANAR
Recall	▶
Save	▶
Delete	▶

- 2 Select DELETE and press ENTER.
This opens the DELETE grid menu with 40 numbered memory slots.

Delete	PLANAR					
<input checked="" type="checkbox"/> 1	<input checked="" type="checkbox"/> 9	<input checked="" type="checkbox"/> 17	<input type="checkbox"/> 25	<input type="checkbox"/> 33		
<input checked="" type="checkbox"/> 2	<input checked="" type="checkbox"/> 10	<input type="checkbox"/> 18	<input type="checkbox"/> 26	<input type="checkbox"/> 34		
<input type="checkbox"/> 3	<input checked="" type="checkbox"/> 11	<input type="checkbox"/> 19	<input type="checkbox"/> 27	<input type="checkbox"/> 35		
<input type="checkbox"/> 4	<input type="checkbox"/> 12	<input type="checkbox"/> 20	<input type="checkbox"/> 28	<input type="checkbox"/> 36		
<input type="checkbox"/> 5	<input type="checkbox"/> 13	<input type="checkbox"/> 21	<input type="checkbox"/> 29	<input type="checkbox"/> 37		
<input type="checkbox"/> 6	<input type="checkbox"/> 14	<input type="checkbox"/> 22	<input type="checkbox"/> 30	<input type="checkbox"/> 38		
<input type="checkbox"/> 7	<input type="checkbox"/> 15	<input type="checkbox"/> 23	<input type="checkbox"/> 31	<input type="checkbox"/> 39		
<input type="checkbox"/> 8	<input type="checkbox"/> 16	<input type="checkbox"/> 24	<input type="checkbox"/> 32	<input type="checkbox"/> 40		

 - 3 Navigate with the arrow keys to the slot you want to delete and press ENTER.
When navigating, you can only go to the checked numbers. All the slots with checks have something stored in them. The others are grayed out.

4 In the DELETE SLOT menu, DELETE NOW is selected.

Delete		PLANAR	
Slot Number	17		
Delete Now			
Name	DI 1920x1080		
 Source	Digital		
 Colorspace	RGB		
 Resolution	1920 x 1080		
Wall	2 x 2	1:1	
Scale/Justify	One to One / Center		
Position/Overscan	168,19 / 0%		
Zoom UL/ LR	+0,+0	/	+0,+0
Viewport UL/LR	+0,+0/	+0,+0	
 Frequency/Phase	1602 / 22.5°		
 Sharpness	Normal		
 Black Level	63	55	57
 White Level	166	170	169

5 Press ENTER.

Confirm Slot Delete		PLANAR	
Are you Sure?	Yes	No	

6 Use the left arrow to make the YES red and press ENTER.

Confirm Slot Delete		PLANAR	
Are you Sure?	Yes	No	

Note: It is not necessary to delete the data in a memory slot before saving new data. Saving will overwrite the stored data. (See "Saving Configurations" on page 134)

Understanding Wall Configuration

The Clarity Matrix LCD Video Wall system is quite flexible. Its digital inputs can be displayed on the LCD modules in a variety of ways. However, it is not quite as flexible as a high-cost matrix switcher system. This section contains examples of common scenarios that can be accomplished with the Clarity Matrix system.



Configuration Scenarios

Read through the following scenarios and use the flowchart on the previous page to find the ones that apply to your installation. If you fall into more than one scenario, make sure that the cabling of the system is the same for all of your configurations.

Configuration of a wall can be broken down into three parts: *cabling*, *source routing* and *wall configuration*.

Cabling consists of how the LCD modules are connected to the Quad controller modules, how the Quad controller modules Dual Link In and Loop Out connections are made and how the sources are connected to the Digital inputs.


Source Routing consists of configuring the internal video switches on each Quad controller module. These switches control which inputs are displayed on which outputs within the Quad controller module and are set on the quad module route menu. For most of the scenarios, it is not necessary to know the details of how these switches are set, but for more complex scenarios, it is necessary to understand these switches. For an example of the quad module route menu, see "Understanding the Quad Module Route Menu" on page 159.

Wall Configuration consists of setting up the scaling chips in each of the four processors on the Quad controller module so the correct piece of the image is displayed on each LCD. Because the Clarity Matrix has position sensors, these settings can be done automatically in many of the scenarios.

Standard Cabling Scenarios

Scenarios 1, 2 and 3 all use what we call standard cabling. It does not matter which LCDs are cabled to which Quad controller module. Scenarios 2 & 3 require standard loop through cabling, as shown on page 143.

Scenario 1: Individual Inputs

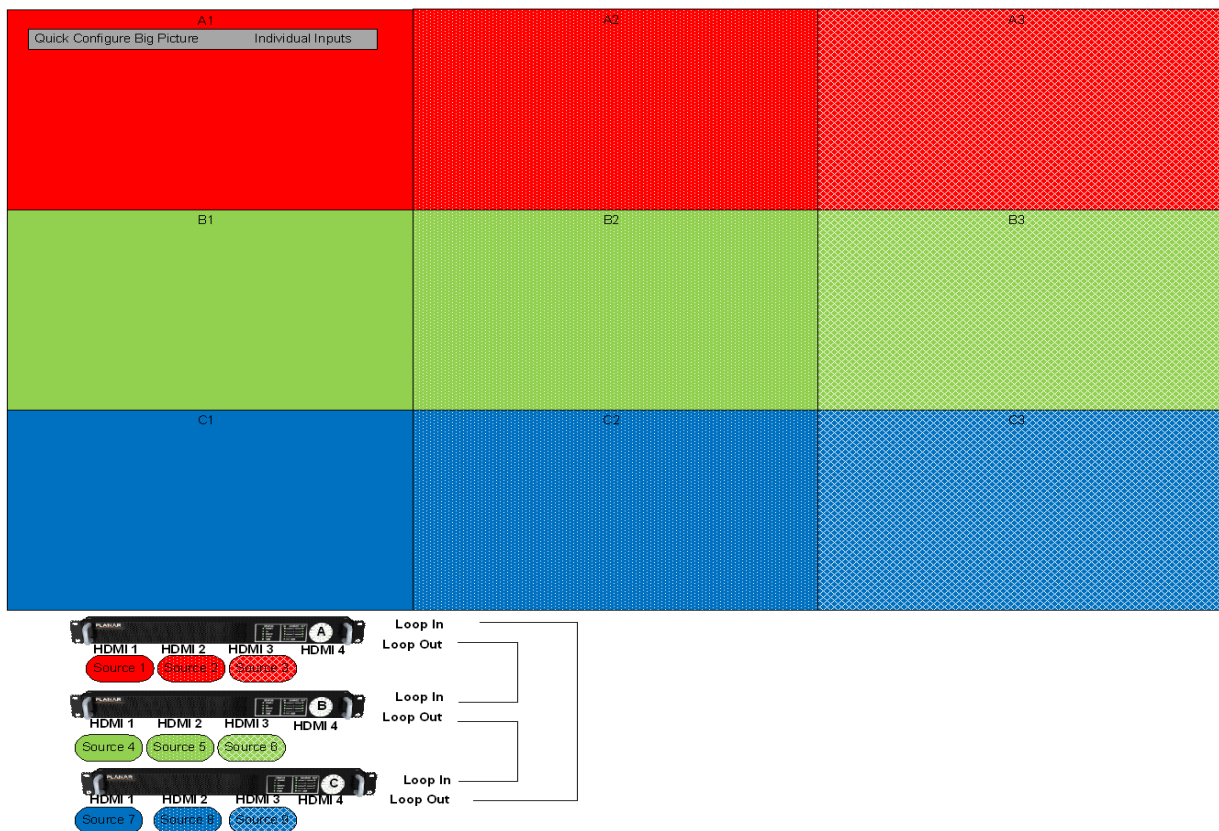

3 x 3 wall with individual inputs

The simplest way to configure a Clarity Matrix system is where each LCD displays the video from one and only one of the inputs. This scenario will be used most often with a video processor such as a Magenta Processor.



Cabling To cable a system for individual inputs, keep in mind that you will need to be able to tell your video processor which inputs are in which position. So you will probably want to put the displays in some logical order in the Quad controller modules. If you have unused LCD connectors in your Quad controller module, do not use those corresponding inputs. The above example shows the cabling for this scenario. There is no need to cable the Loop Out or Dual Link In connectors for this scenario.

Source Routing There is a quick configuration for this scenario. In order to route the sources for individual inputs, choose "No BP" from the bottom right corner of the QUICK CONFIGURE menu.

Wall Settings Big Picture is not used in this scenario, so WALL MODE should be set to off on the BIG PICTURE SETUP menu for all displays. The Quick Configure setting takes care of this for you.

Scenario 2: Clarity Big Picture


When in Clarity Big Picture, one source is spread over the entire wall. In the Clarity Matrix product, any input can easily be used as the source for Big Picture.

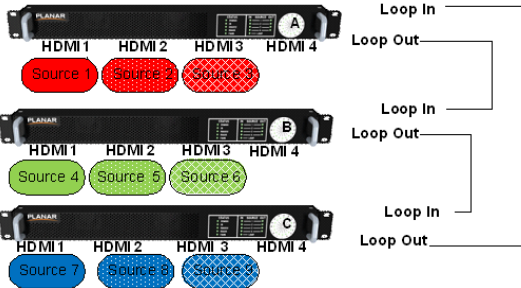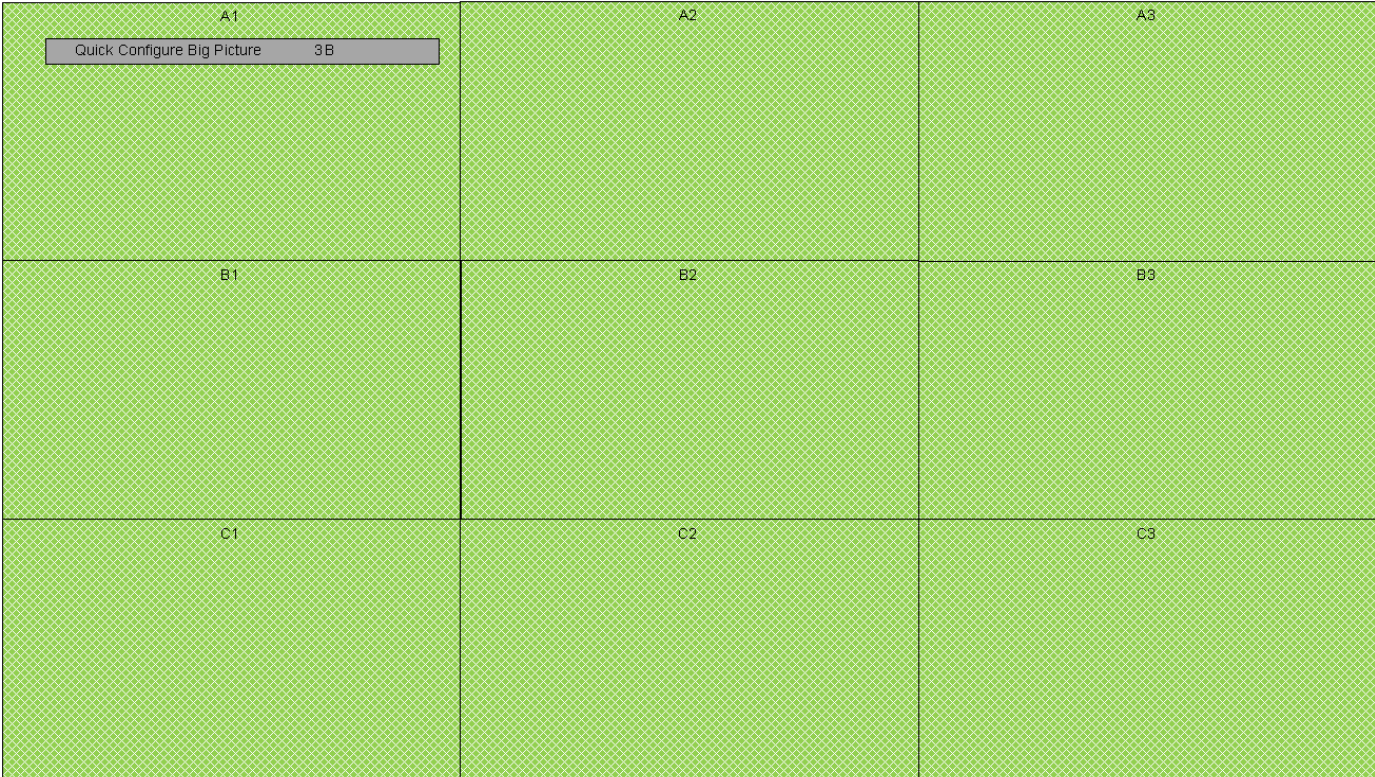

3 x 3 wall using Clarity Big Picture. Any input can be spread over the whole wall.

Cabling Because the Clarity Matrix has position sensing, LCDs can be cabled to the Quad controller modules in any way that is convenient. Keep in mind that most of the configuration menus will appear on the module connected to LCD 1 on the A Quad controller module, so you may want to put that one in a convenient location.

The Loop out connector of each Quad controller module should be connected to one of the Loop In connectors of the next module. The final Loop Out connector should be connected back to one of the Digital In connectors on the first module.

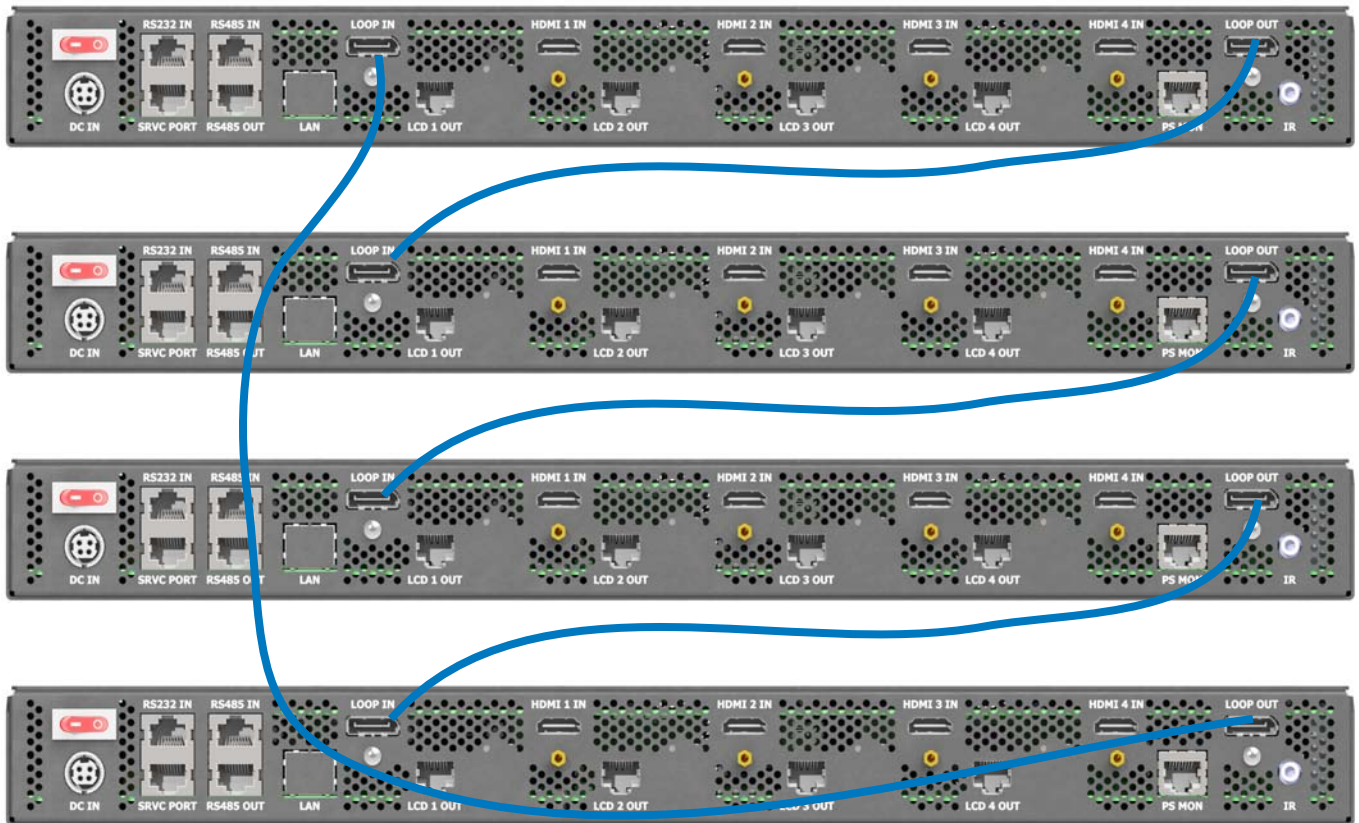

Source Routing There is a quick configuration for Clarity Big Picture. Choose the input you want to display on the whole wall for the QUICK CONFIGURE BIG PICTURE line in the WALL CONFIGURATION menu. In order for this Quick Configure to work correctly, you must have previously allowed the system to discover its display positions by choosing AUTO in the MATRIX LAYOUT menu.

Wall Configuration Each display's wall configuration is set up automatically by the Quick Configure setting. Wall Mode is turned on, the wall width and wall height is set to the width and height of the Matrix, and each display's row and column are set according to its position.

Scenario 3: One Sub Wall and Individual Inputs

In this scenario, one input is spread over multiple LCDs, while the rest of the LCDs display individual inputs. This scenario may be used in a control room, where each display is monitoring a particular source, and at a command, one input may be magnified for more detailed viewing. The size of the sub wall in this scenario does not matter. Two of the examples show a 2 x 2 sub wall in a 3 x 3 Matrix, but you could also have a 3 x 5 sub wall in a 6 x 6 wall, or any other configuration. The restriction is that there is only one sub wall in the Matrix. The other displays are showing individual inputs.

Cabling The cabling for this scenario is the same as for the Big Picture scenario. The Quad controller modules must be looped together by use of the Loop In and Loop Out connectors (see page 156 for an example). There is no restriction on which displays are connected to which Quad controller modules, but you will want to cable them in an orderly fashion so it is easy for you to associate each input with a particular Quad controller module.

Source Routing There are no quick configure settings for this scenario. You will need to set up the source routing and wall settings for each sub wall configuration and save those settings to a slot (see "Saving Configurations" on page 134). To set up source routing, use the QUAD MODULE ROUTE menu for each Quad controller module. This menu has two parts, each of which gives a different view of the same settings. If you use one part of the menu, the other will automatically update. The following diagrams use only the lower part of the menu. For simplicity, the rest of the menu is not shown.

In the following diagrams, the settings from the QUAD MODULE ROUTE menu are shown on the side of the diagram and these menus will appear on display A1.



Wall Settings Once the source is routed, you still need to tell each processor which portion of the source to show. This is done in the BIG PICTURE SETUP menu on each processor. An LCD that is displaying an individual source should have WALL MODE turned off. An LCD that is part of a sub wall should have its height and width parameters set to the sub wall height and width, and its unit row and column parameters set to the row and column within that sub wall.

In the diagrams that follow, a darkened bar over a settings means that setting is not necessary for this scenario and it doesn't matter to what it is set.

Quad Module Route A	
Switch 1	External Loop
Switch 2	External Loop
Switch 3	Digital 3
Switch 4	Loop
Internal Loop	Digital 1
External Loop	Digital 1

Quad Module Route B	
Switch 1	External Loop
Switch 2	External Loop
Switch 3	Digital 3
Switch 4	Digital 4
Internal Loop	Digital 1
External Loop	DPort In

Quad Module Route C	
Switch 1	Digital 1
Switch 2	Digital 2
Switch 3	Digital 3
Switch 4	Digital 4
Internal Loop	Digital 1
External Loop	DPort In

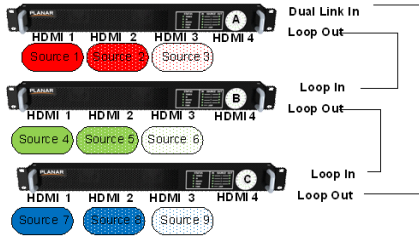
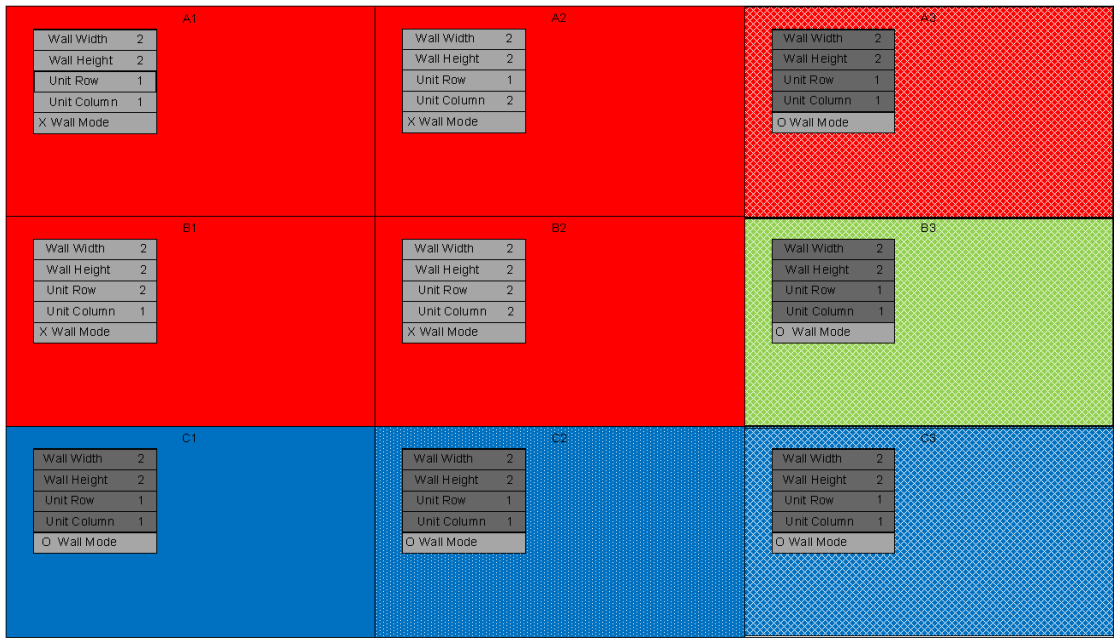


3 x 3 Matrix with 2 x 2 sub wall, upper left displaying source A1.

Quad Module Route A	
Switch 1	Digital 1
Switch 2	Digital 2
Switch 3	Digital 3
Switch 4	Loop
Internal Loop	Digital 1
External Loop	DPort In

Quad Module Route B	
Switch 1	Digital 1
Switch 2	Digital 2
Switch 3	External Loop
Switch 4	Digital 4
Internal Loop	Digital 1
External Loop	DPort In

Quad Module Route C	
Switch 1	Digital 1
Switch 2	External Loop
Switch 3	External Loop
Switch 4	Digital 4
Internal Loop	Digital 1
External Loop	DPort In

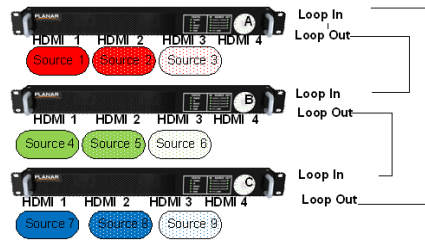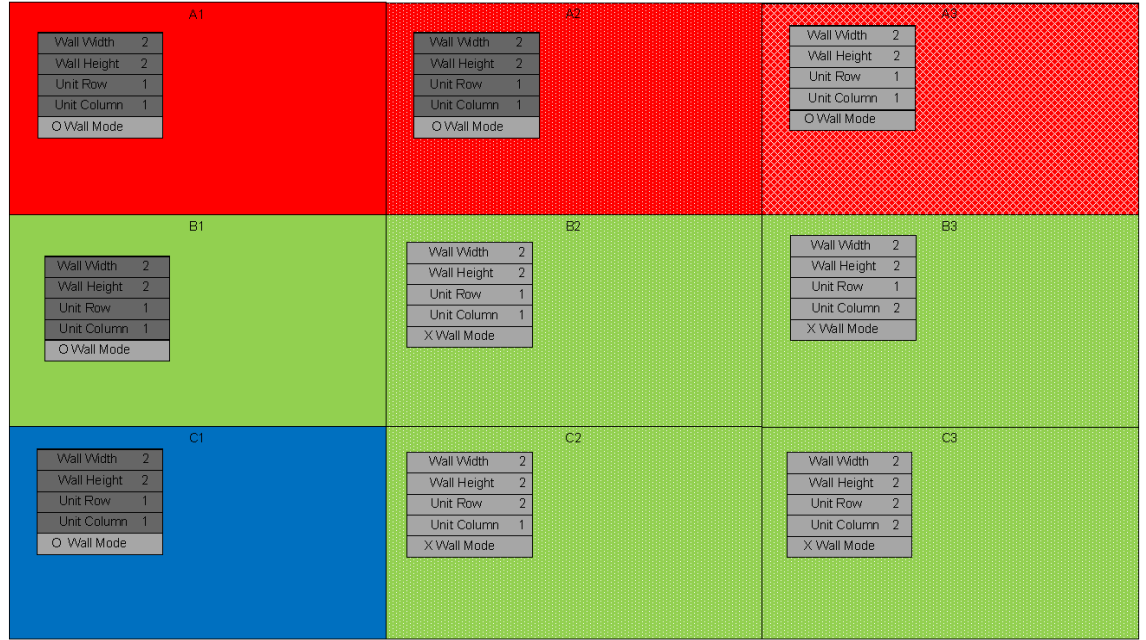

3 x 3 Matrix with 2 x 2 sub wall, lower right displaying source B2.

Quad Module Route A



Switch 1	Digital 1
Switch 2	Digital 2
Switch 3	Digital 3
Switch 4	Loop
Internal Loop	Digital 1
External Loop	DPort In

Quad Module Route B

Switch 1	External Loop
Switch 2	External Loop
Switch 3	Digital 3
Switch 4	Digital 4
Internal Loop	Digital 1
External Loop	DPort In

Quad Module Route C

Switch 1	External Loop
Switch 2	External Loop
Switch 3	Digital 3
Switch 4	Digital 4
Internal Loop	Digital 1
External Loop	DPort In

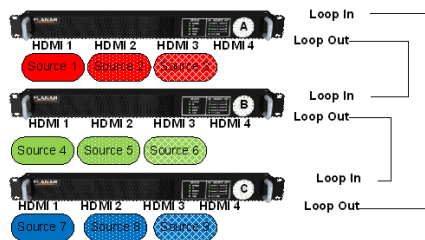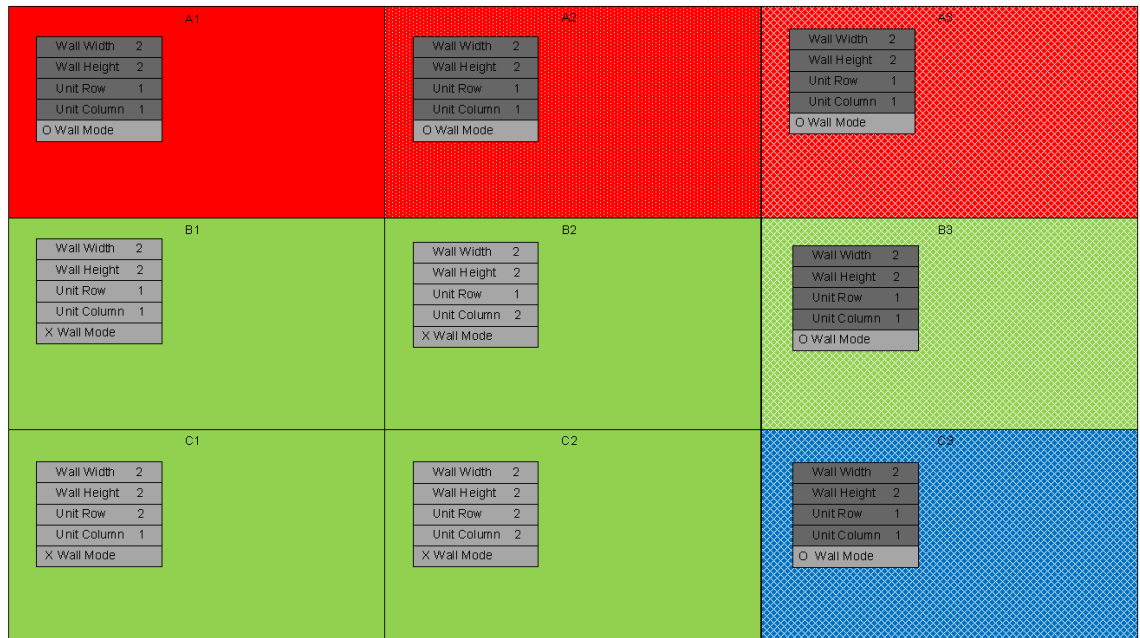

3 x 3 Matrix with 2 x 2 sub wall, lower left displaying source B1.

Standard Cabling with Restrictions on LCD Placement

Scenario 4: One Sub Wall Per Quad Controller

This scenario uses an external video processor, but saves on the number of outputs required for that processor. Each output of the processor drives four LCDs.



4 x 4 Matrix with one source per Quad controller module.

Cabling Cable the LCDs so each Quad controller module controls a 2 x 2 square of LCDs. The order within the square does not matter because the position sensors will be used. Cable each output of the video processor to the same numbered input in each Quad controller module. This could be Digital 1, Digital 2, Digital 3 or Digital 4. It is not necessary to cable the Loop Out connector of the Quad controller module.

Source Routing The Quick Configure Quad setting in the WALL CONFIGURATION menu is used to configure this scenario. If you have cabled the sources to Digital 1, use Quick Configure Quad 1, if you have cabled the sources to Digital 2, use Quick Configure Quad 2 etc.

Wall Settings By choosing the Quick Configure, the system will configure each LCD automatically. Because the settings are different for each LCD, the system must send many commands to each LCD. Quick Configure Quad takes a bit longer to respond than other Quick Configure settings. Note that the LCDs connected to each Quad controller module must be in a rectangle. If they are not, the wall settings will not be set, although the source routing will still take place. The rectangle does not have to be 2 x 2. For example, a wall may not have even multiples of four LCDs. Quick Configure Quad will set the wall parameters to the number and size of LCDs on that Quad controller module, be it 2 x 1, 1 x 2, 1 x 3 etc. The external video processor outputs must be configured accordingly.

Scenario 5: Two Sub Walls Per Quad Controller

This scenario uses an external video processor, but saves on the number of outputs required for that processor. Each output of the processor drives two LCDs.



4 x 4 Matrix with two high resolution sources per Quad controller module.

Cabling Cable the LCDs so that each pair of LCDs you will use for a sub wall are adjacent to each other. These can be 1 x 2 or 2 x 1 rectangles; the position sensors will be used to determine how they are arranged. Cable the outputs of the video Digital 1 and Digital 3. The source on Digital 1 will be spread over LCD 1 and LCD 2. The source on Digital 3 will be spread over LCD 3 and LCD 4. It is not necessary to cable the Loop Out connector of the Quad controller module.

Source Routing The Quick Configure Quad setting in the WALL CONFIGURATION menu is used to configure this scenario. Use Quick Configure Quad 1 & 3.

Wall Settings By choosing the Quick Configure, the system will configure each LCD automatically. Because the settings are different for each display, the system must send many commands to each LCD. Quick Configure Quad takes a bit longer to respond than other Quick Configure settings.

Scenario 6: Multiple Sub Walls

It is possible to have more than one sub wall at one time on a Clarity Matrix LCD Video Wall if certain rules are followed:



- One sub wall can be any size and use any input. This sub wall will use the External Loop.
- All the other sub walls must fit within a single Quad controller module. This means they will be 2 x 2 or smaller.

Quad Module Route A	
Switch 1	Digital 1
Switch 2	External Loop
Switch 3	External Loop
Switch 4	External Loop
Internal Loop	Digital 1
External Loop	DP port In

Quad Module Route B	
Switch 1	External Loop
Switch 2	External Loop
Switch 3	External Loop
Switch 4	External Loop
Internal Loop	Digital 3
External Loop	DPort In

Quad Module Route C	
Switch 1	External Loop
Switch 2	External Loop
Switch 3	External Loop
Switch 4	Digital 4
Internal Loop	Digital 1
External Loop	DP port In

Quad Module Route D	
Switch 1	External Loop
Switch 2	External Loop
Switch 3	Digital 3
Switch 4	External Loop
Internal Loop	Digital 1
External Loop	DP port In

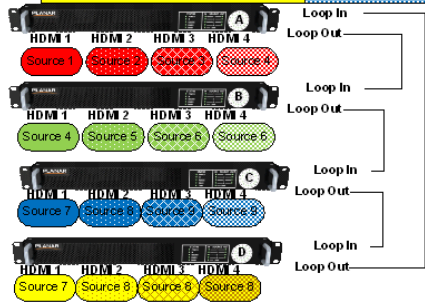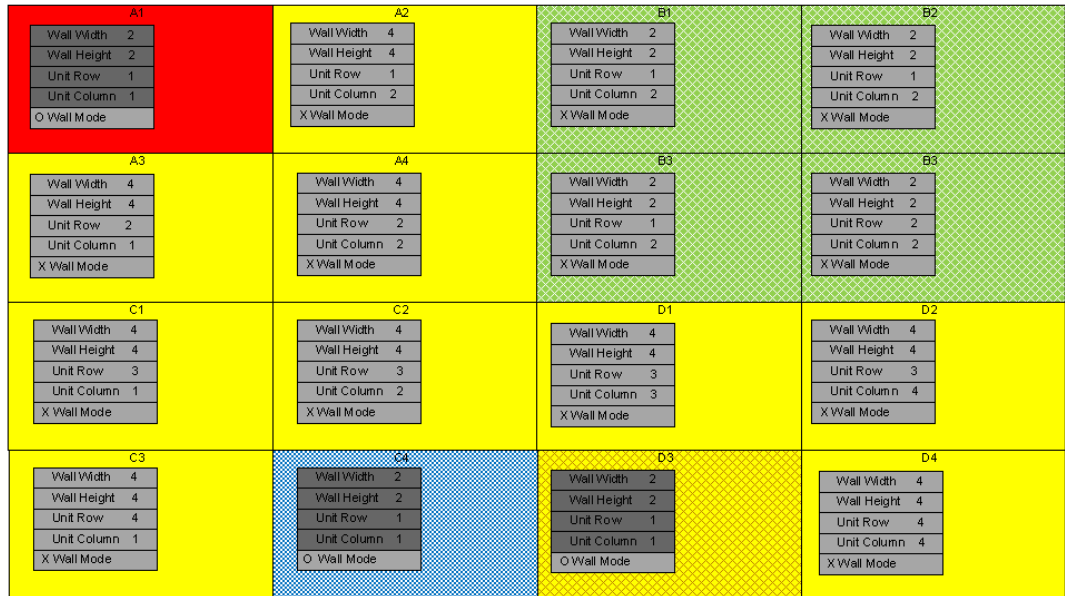

4 x 4 Matrix with one large and one small sub wall.

Cabling Cluster the displays into the groups where you want the small sub walls, and cable each sub wall to a single Quad controller module. Cable the Loop Out of each Quad controller module to the Loop In of the next module and loop the last Loop Out into the Dual Link In of the first module.

Source Routing For the Quad controller modules that are displaying a small sub wall, set each switch to Loop, Use Internal Loop and set the Internal Loop to the display you want to view on that sub wall.

For each display that is part of the large sub wall, set each switch to Loop, and Use External Loop.


Set the External Loop of the Quad controller module that contains the source for the large sub wall to that source. Set the External Loop of all the other Quad controller modules to Loop In.

Wall Settings Set the height and width for each display within a sub wall to the height and width of that sub wall and set the unit row and unit column as appropriate.

DisplayPort Input Scenarios


Only one of the inputs on the Quad controller module is a DisplayPort Input. The DisplayPort Input can either be used as a loop mechanism or as an input but not both. Because of this, systems that use scenarios 7 and 8 cannot also use any of the other scenarios.

Scenario 7: One DisplayPort Input per Quad Controller Module

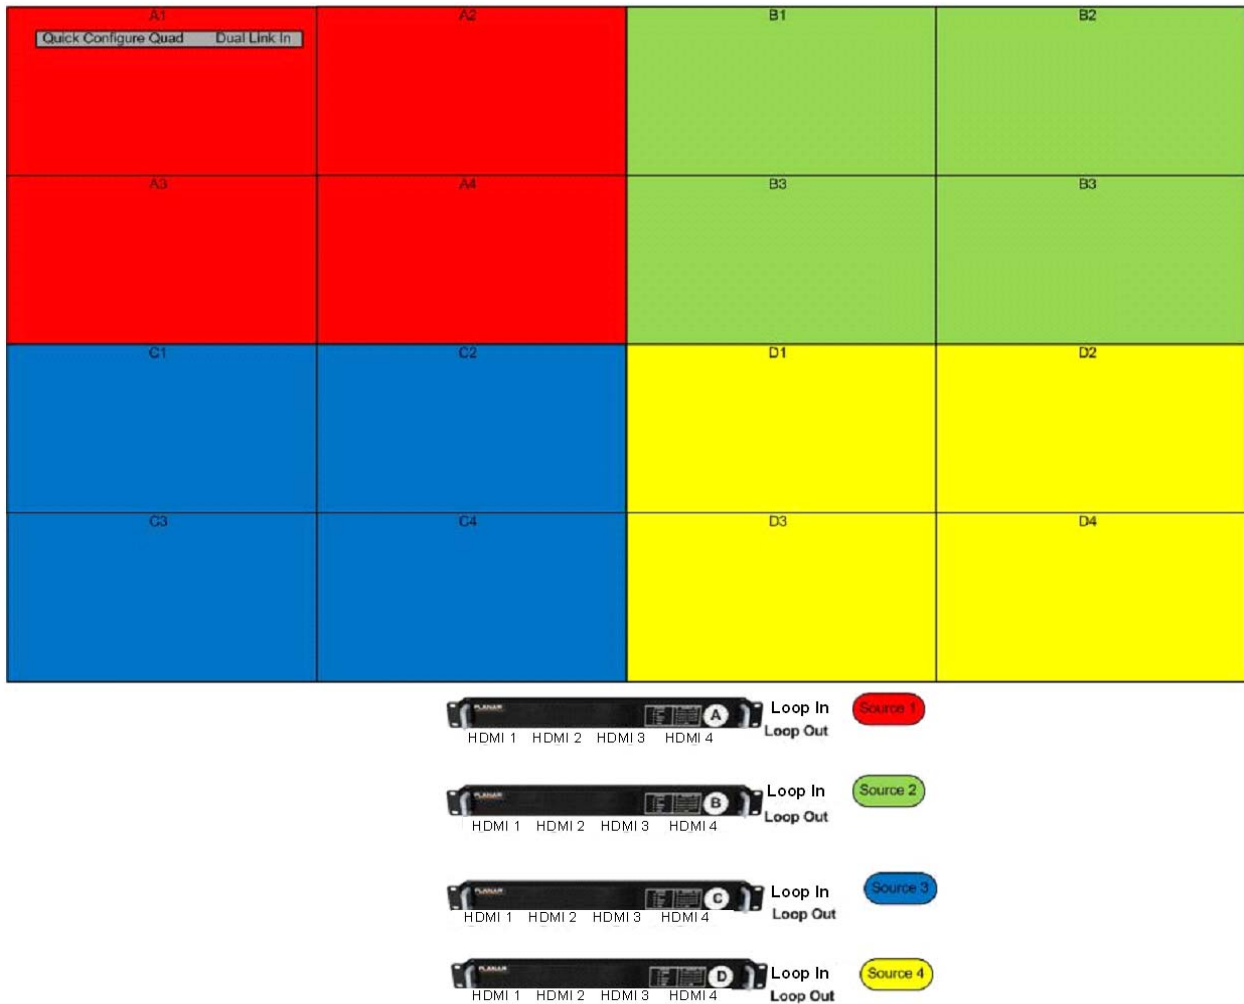

4 x 4 Matrix with one DisplayPort source per Quad Controller Module.

Scenario 8: One DisplayPort Source per LCD

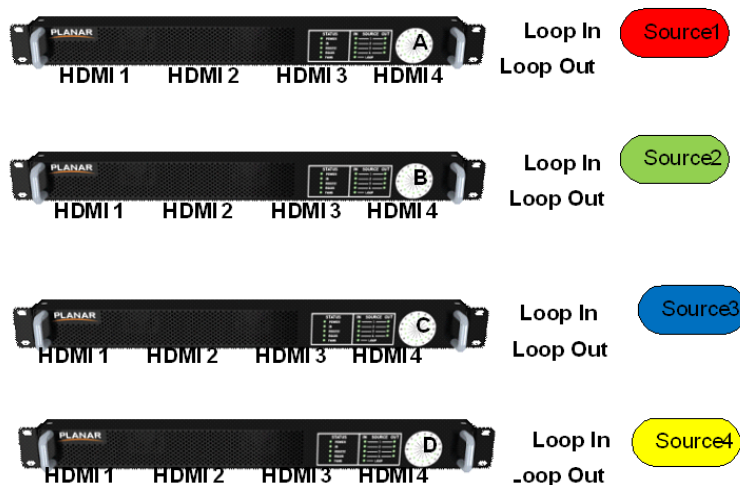

2 x 2 Matrix with one dual link source per LCD.


Cabling Cable each DisplayPort output of the video processor to the Loop In of each Quad controller module. It is not necessary to cable the Loop Out connector of the Quad controller module.

Source Routing The QUICK CONFIGURE QUAD setting in the WALL CONFIGURATION menu is used to configure this scenario. Choose Dp from the bottom line of the Quick Configure menu. Note that there are two boxes on this menu marked Dp: the one on the bottom line sets the Big Picture settings for individual inputs.

Wall Settings By choosing the Quick Configure, the system will configure each display automatically.

Scenario 9: One DisplayPort Input for Big Picture

If you want to spread a DisplayPort source over the whole wall, you only need one DisplayPort Input, because the others are used to loop the signal.

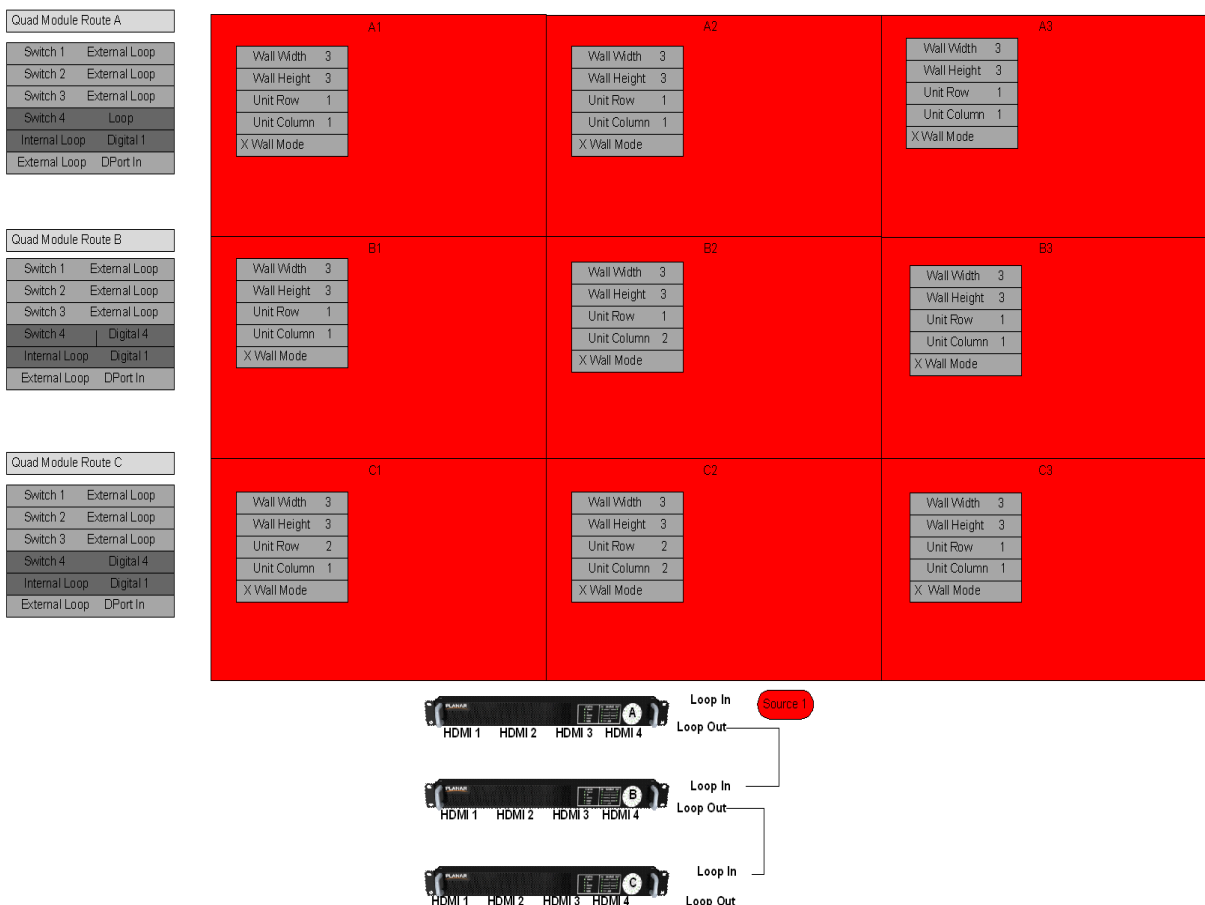

3 x 3 Matrix with dual link source Big Picture.

Cabling Cable the source into the first Quad controller module and then cable the Loop Out to the Loop In on the rest of the modules.

Source Routing Every Switch in Every Quad controller module should be set to External Loop. The External Loop should be set to DPort In.

Wall Settings There is a quick configuration setting for this scenario. Choose the Dp square on the second line from the bottom in the Quick Configuration menu.

Complex Configurations

It is possible to design systems that don't fall into any of the above scenarios, but not all combinations of inputs on sub walls are possible. A system cabled for such a complex configuration may or may not be able to also have some of the simpler configurations.

Scenario 10: Multiple Large Sub Walls



The previous scenario was restricted such that only one sub wall in a Clarity Matrix could be larger than a single Quad controller module. If you want more than one sub wall that is larger than four displays, there are certain restrictions. You must cable the loop connections sequentially among the Quad controller modules that make up each sub wall. Since a sub wall that spans more than one Quad controller module uses the external loop, a sub wall is restricted to using inputs from only the first Quad controller module in the loop through chain.

Quad Module Route A	
Switch 1	External Loop
Switch 2	External Loop
Switch 3	External Loop
Switch 4	External Loop
Internal Loop	Digital 1
External Loop	Digital 2

Quad Module Route B	
Switch 1	External Loop
Switch 2	External Loop
Switch 3	External Loop
Switch 4	External Loop
Internal Loop	Digital 3
External Loop	Digital 3

Quad Module Route C	
Switch 1	External Loop
Switch 2	External Loop
Switch 3	External Loop
Switch 4	External Loop
Internal Loop	Digital 1
External Loop	DPort In


Quad Module Route D	
Switch 1	External Loop
Switch 2	External Loop
Switch 3	External Loop
Switch 4	External Loop
Internal Loop	Digital 1
External Loop	DPort In

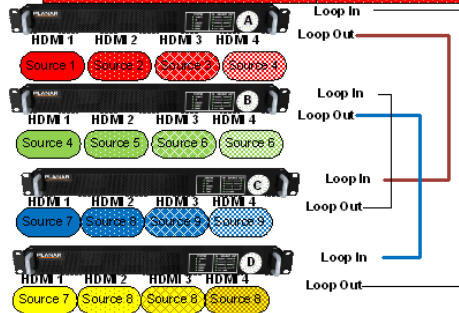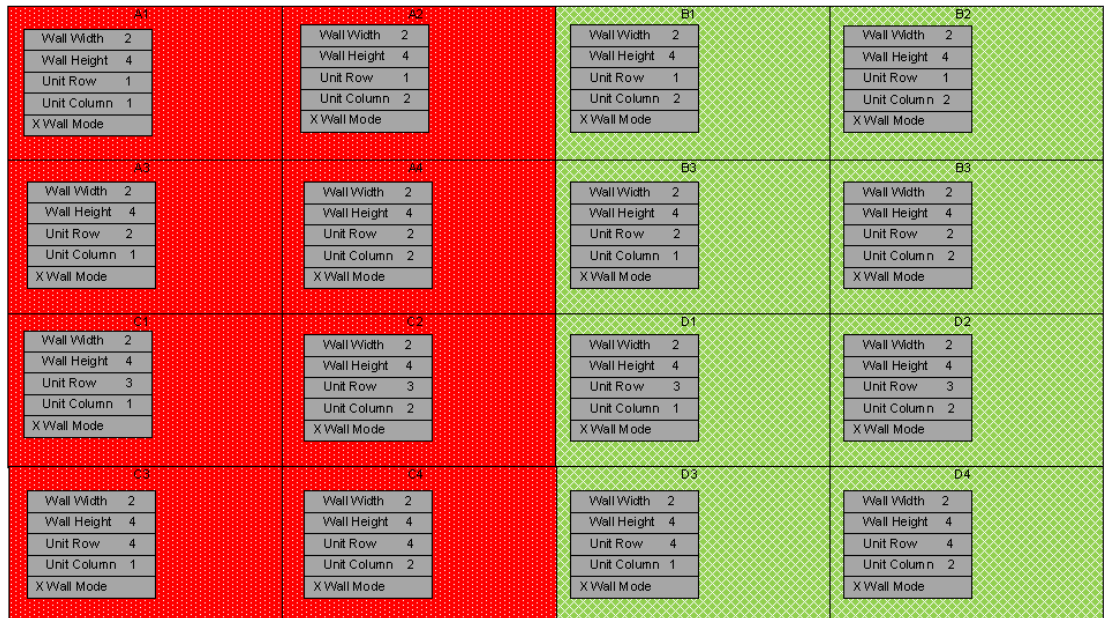

Note the cabling difference. A must loop out to C. B must loop out to D. Any Source from A can be spread on the left half. Any source from B can be spread on the right half.

4 x 4 Matrix with two 4 x 2 sub walls. One Big Picture is also available, but each sub wall is limited to four sources.

Scenario 11: Multiple Large Sub Walls and NO Big Picture

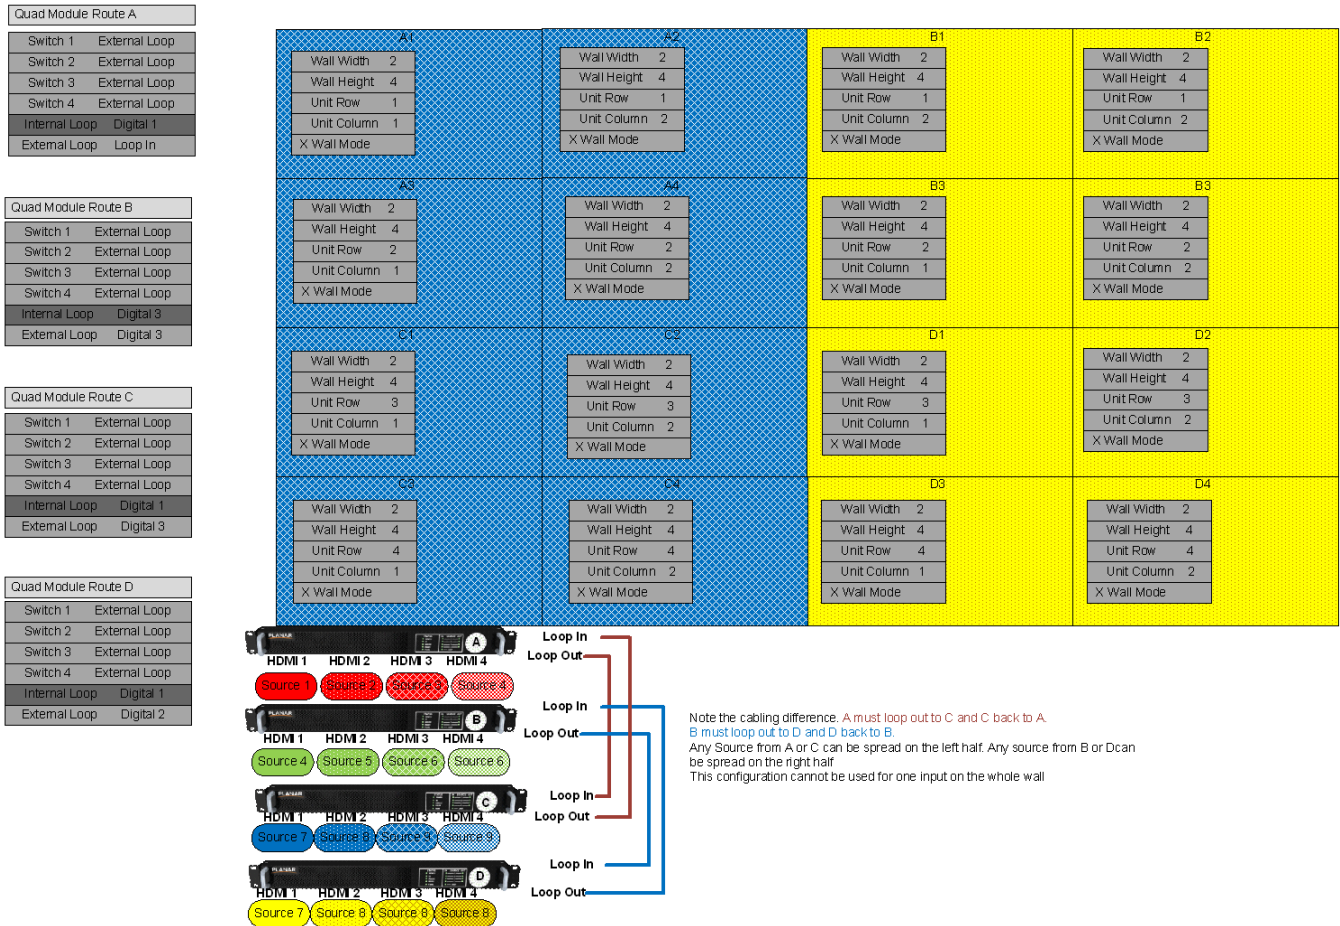

Matrix with two 4 x 2 sub walls. One Big Picture is **not** available, but each sub wall can have eight different sources.

Cabling Cluster the displays into the groups where you want your sub walls, and cable each sub wall to Quad controller module that are sequentially looped together. If you want to be able to also spread an input across the whole wall (Scenario 2), you must complete a single loop.

If you want to be able to spread more inputs across the sub wall than will fit on one Quad controller module, you can split the wall into separate loops.


Source Routing For each display that is part of a large sub wall, set each switch to Loop and External.

Set the External Loop of the Quad controller module that contains the source for a large sub wall to that source. Set the External Loop of all the other Quad controller modules to DPort In. Note that the source for the sub wall must be in the first Quad controller module unless you have looped the sub wall back on itself.

Wall Settings Set the height and width for each display within a sub wall to the height and width of that sub wall and set the unit row and unit column as appropriate.

Understanding the Quad Module Route Menu

Each Quad controller module has five digital video inputs: inputs 1-4 and a Dual Link loop input. Each module has four LCD connections and a Digital Loop Out DVI connector. Within each Quad controller module is a set of electronic switches that allow video to flow from one of the inputs to one of the LCDs and to the Digital Loop Out connector. The example below shows a pictorial representation of these switches. Each circle in the drawing represents one switch. For each switch, you can choose one of the input arrows to flow to the output of that switch, which in turn may flow to another switch or to one of the Quad controller module outputs.

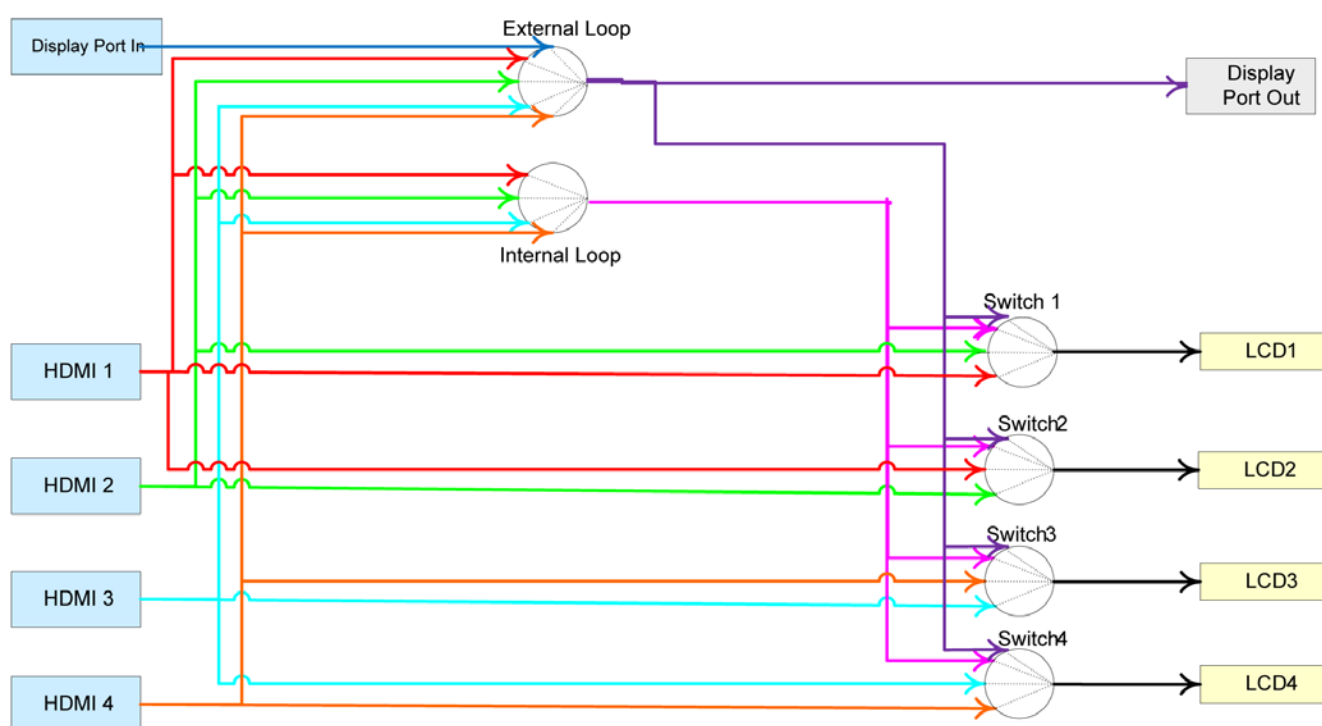

Representation of the Quad controller module video switches.

Keep the following points in mind:

- An LCD can display its own input, its immediate neighbor, or what is on either of the "loops."
- The Loop Out connector always displays what is on the external loop.
- The internal loop can display any of the HDMI connections, but not the DisplayPort connection.
- If you want to display what is on the Loop In connection, you must use the external loop, and it will also be on the Loop Out connector.

The QUAD MODULE ROUTE menu allows you to set these switches. There is one QUAD MODULE ROUTE menu for each Quad controller module in your system. There are two parts to the menu. Each part gives the same information in a different way. The top part of the menu shows you what input (1,2,3,4 or Link In) will be shown on each output (LCD 1, LCD 2, LCD 3, LCD 4 and Loop Out).

The bottom part of the menu shows you how each of the seven switches are set. You can change the switches using either part of the menu. The other part will automatically update. It may be frustrating to try to make changes in the switches using the top part of the menu, because not every combination of input to output is allowed. Changing one line on the top may cause changes in other lines. On the other hand, using the bottom part of the menu sets the switches directly so there are no disallowed states. As you set the switches on the bottom part of the menu, the top part of the menu will change to show the effect of your changes.

All of the scenarios in this section use only the bottom part of the menu to set up source routing.

Quad Module Route A					
	1	2	3	4	Link In
LCD 1	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
LCD 2	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
LCD 3	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
LCD 4	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Loop Out	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<hr/>					
Switch 1					Internal Loop
Switch 2					Internal Loop
Switch 3					Internal Loop
Switch 4					Internal Loop
Internal Loop					Digital 3
External Loop					Digital 4

Configuring High Resolution Inputs

High resolution inputs are any inputs to the Clarity Matrix LCD Video Wall that have a pixel clock greater than 165MHz, have a horizontal resolution greater than 2045 pixels or a vertical resolution greater than 2047 pixels. Such inputs are supported in Clarity Matrix but have limitations and restrictions as described in this section.

Hardware Limitation


The Image Processing chip used in the Clarity Matrix design has an input limitation of 165Mhz pixel clock and 2047 pixel horizontal or vertical resolution. However, be aware that the Clarity Matrix is a system of multiple chips each supporting a separate LCD display, we can still display such resolutions by spreading that image over more than one display in the system. We just need to provide the correct portion of the image for each display. This is accomplished through front-end FPGA (field programmable gate array) logic in the Quad controller module and communication amongst the processors via the RS485 link.

High Resolution Setup

Wall Configuration	PLANAR
Quick Configure Big Picture A3	Big Picture ▶
Big Picture Setup	▶
Matrix Layout	▶
Quad Module A Route	▶
Quad Module B Route	▶
Quad Module C Route	▶
Synchronize High Resolutions	

A high resolution input must use the Clarity Big Picture capability, either spreading the picture across the entire wall of displays or across some subset of displays, but it must be more than one. If a high resolution input is received and wall mode is not enabled, you will see only half of the image. In this case the message “Image truncated – Must use Big Picture” will appear on the BIG PICTURE SETUP menu and also on the UNIT STATUS menu.

The simplest way to set up the Big Picture is with the QUICK CONFIGURE BIG PICTURE menu (MAIN MENU > WALL CONFIGURATION menu). If your high resolution input is on the LOOP IN, spread it across the whole wall by choosing the DPORT button on the left edge of the menu. If you want to spread it to only the Quad controller module (e.g. when using a video processor), use the DPORT button on the bottom row of the menu.

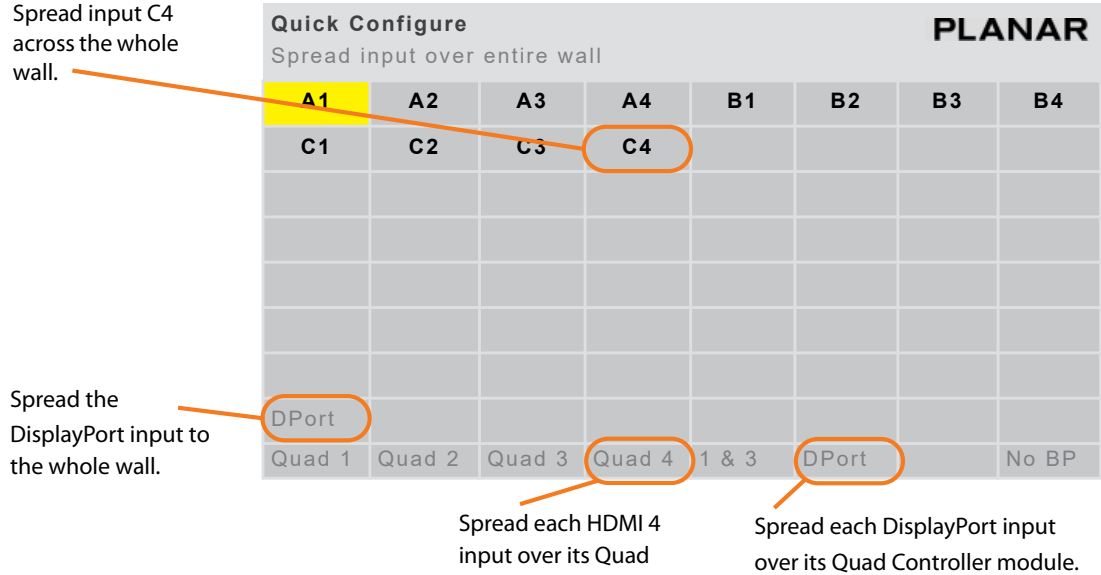

Single link high resolution inputs must also be Big Pictured. Use the buttons on the QUICK CONFIGURE menu to choose the input you want to Big Picture. Auto layout discovery must be completed on the wall before quick configure setup can work properly. See "Matrix Layout Menu" on page 91 for more details about auto layout discovery.

Dual Link vs. Single Link

High resolution inputs can be used on any of the five inputs to the Quad controller module. However, when using the single link inputs (HDMI 1 through 4) the pixel clock may not exceed 165MHz. Clock speeds greater than 165MHz require additional hardware referred to as Dual Link which is not supported on these HDMI inputs. The DisplayPort input *does* support this higher clock speed. Almost by definition, any high resolution input running at 60 frames per second will exceed this limit. However, there are many high resolution inputs at lower frame rates that can be input to the single link input.

Cabling for High Resolution

The DisplayPort Loop In of the Quad Controller module is also the input used to loop signals from one Quad Controller to the next. The DisplayPort connection is the only one that can handle high speed (pixel clock greater than 165MHz) signals. That means that only one high speed source can be used when enabling the Planar's Big Picture.

Note: Be sure you are using DisplayPort cables.

Connect the signal to any of the Quad Controller modules and cable the Loop Out of that controller to the Loop In of the next controller, and so on. The Loop Out connection of the last Quad Controller will remain unconnected.

Multiple DisplayPort sources may be used in the system if each one is connected to a different Quad Controller. A typical application for this would be a system with an external video processor. By using one high resolution output of the processor per Quad Controller, the overall number of processor outputs needed will be reduced. In this situation, no loop through cables are needed.

Configuring a New High Resolution Input

When a new signal is acquired or the Big Picture setup has changed, the processors must communicate various information to each other. Because of limitations in the RS485 link, this communication can take several seconds to occur. During this time, the image on the wall may not be scaled correctly. You will see each display pop into place as the RS485 communication completes. Once you have made a change, you can speed up this period of resynchronization by pressing ENTER on the SYNCHRONIZE HIGH RESOLUTIONS line in the WALL CONFIGURATION menu. Be aware that the same processing must happen when switching to a low resolution input after displaying a high resolution input, and this control may be used in that case as well.

When using the quick configure option, the system will synchronize automatically. When a configuration is saved in a slot, the necessary information about high resolution inputs is saved as well. Once a configuration is set up, the easiest way to return to that configuration later is to recall it from a slot (see "Saving Configurations" on page 134). You must have the input in place at the connector before recalling the slot.

Handling Vertical Resolutions Greater Than 2047 Pixels

The processing chip has a 2047 line limitation in detecting a video source. If it gets a source that is greater than 2047 lines, the reported line total is the actual total minus 2048. The firmware works around this limitation by making educated guesses about the true total. Since the majority of applications will want to display native resolution on the Clarity Matrix, the firmware specifically looks for input resolutions that are multiples of native resolution. So, if it sees a reported input resolution of 1366 x 256, it will assume that the actual input resolution is 1366 x 2304 (a 1x3 column of native resolution). Similarly, it will assume 1366 x 1024 is actually 1366 x 3072. The only resolutions that have a vertical line count greater than 2047 are those that are multiples of potential native resolutions: 1366 x 768 or 1920 x 1080.

Supported Resolution Summary

Up to 2045 pixels horizontal 400 to 2047 pixels vertical Pixel clock less than 165MHz	Supported on all inputs
2046 to 4097 pixels horizontally 2048 to 2448 pixels vertically Pixel clock less than 165MHz	<ul style="list-style-type: none"> Supported on all inputs. Big Picture (Wall mode) must be selected to spread image over more than one display horizontally. System will take several seconds to scale correctly.
Up to 2045 pixels horizontal 2048 to 2448 lines vertically Pixel clock less than 165MHz	<ul style="list-style-type: none"> Supported on all inputs. Big Picture (Wall mode) must be selected to spread image over more than one display horizontally System will take several seconds to scale correctly.
2046 to 4096 pixels horizontally 2048 to 2448 lines vertically Pixel clock less than 165MHz	<ul style="list-style-type: none"> Supported on all inputs. Big Picture (Wall mode) must be selected to spread image over more than one display horizontally. System will take several seconds to scale correctly.
Up to 4096 pixels horizontally 400 to 2047 lines vertically Pixel clock greater than 165MHz and less than 330MHz	<ul style="list-style-type: none"> Supported only on Dual Link (Display Port) Input. Big Picture (Wall mode) must be selected to spread image over more than one display horizontally. Note: Even if the horizontal resolution is less than 1920, it still must be spread horizontally. Therefore, 1920x2160 @60Hz Cannot be displayed 1:1. System will take several seconds to scale correctly
Up to 4096 pixels horizontally 2048 to 2448 lines vertically Pixel clock greater than 165MHz and less than 330MHz	<ul style="list-style-type: none"> Supported only on Dual Link (Display Port) Input. Big Picture (Wall mode) must be selected to spread image over more than one display horizontally and vertically. System will take several seconds to scale correctly.

The table below lists some of the commonly used Planar’s Big Picture resolutions and shows the maximum refresh rate allowed to stay within the limits for HDMI and DisplayPort connections.

Commonly Used Big Picture resolutions

Big Picture Size	Resolution	Maximum for HDMI	Maximum for DisplayPort
1 x 2	1920 x 2160	30Hz	30Hz
	1366 x 1536	60Hz	60Hz
1 x 3	1920 x 3240	24Hz	24Hz
	1366 x 2304	50Hz	50Hz
	960 x 3240	48Hz	48Hz
1 x 4	1366 x 3072	30Hz	30Hz
	960 x 2160	60Hz	60Hz
2 x 1	3840 x 1080	30Hz	60Hz
	2732 x 768	60Hz	60Hz
	1920 x 540	60Hz	60Hz
2 x 2	3840 x 2160	Not supported	30Hz
	2732 1536	30Hz	60Hz
2 x 3	2732 x 2304	24Hz	30Hz
2 x 4	2732 x 3072	16Hz	30Hz
3 x 1	4096 x 768	50Hz	60Hz
	2880 x 540	60Hz	60Hz
4 x 1	3840 x 540	60Hz	60Hz

On-Screen Menus

If you are viewing this as a PDF, you can click on an active line in a menu and go to the submenu. Active lines are the ones with arrows. You can also click on the heading of a menu and go back to its parent menu.



- Solid black arrows ► lead to navigational menus.
- Hollow blue arrows > lead to status menus.
- Hollow green arrows ▷ lead to slave menus.

Main Menu	PLANAR
Wall Configuration	►
Picture	►
Memory	►
Diagnostics	►
Advanced Options	►
Program Information	>

Program Information	PLANAR
Planar Systems, Inc. Control Room & Digital Signage Division 1195 NW Compton Drive Beaverton, OR 97006-1992 USA +1.866.475.2627 +503.748.1100 www.planar.com	
Matrix	1920 x 1080 010-1409 Rev 01
Code Generated Date:	Oct 24 2013 at 13:Q44:10
LCD Interface:	1456-01:Oct 01 2013 17:55:09
Valens: V5010TX	10200523 2013-2-17
VS100RX	00200513 2013-2-17

Wall Configuration		PLANAR
Set up whole wall		
Quick Configure Big Picture	Big Picture A1	▶
Big Picture Setup		▶
Matrix Layout		▶
Quad Module A Route		▶
Quad Module B Route		▶
Quad Module C Route		▶
Synchronize High Resolutions		

Quick Configure								PLANAR
Spread input over entire wall								
A1	A2	A3	A4	B1	B2	B3	B4	
C1	C2	C3	C4					
Dp								
Quad 1	Quad 2	Quad 3	Quad 4	1 & 3	Dp			No BP

Big Picture Setup		PLANAR
Matrix Position	3x3	1:1
Wall Width		3
Wall Height		3
Unit Column		1
Unit Row		1
<input type="checkbox"/>	Wall Mode	
<input type="checkbox"/>	Frame Compensation	
	Frame Height	10 pixels
	Frame Width	10 pixels
<input type="checkbox"/>	Frame Compensation	
* *** Copy Settings to All Displays		

Matrix Layout

<Enter> to update matrix layout

PLANAR

Auto			Quick			Reset		**
A1	A2	A3						
B1	B2	B3						
C1	C2	C3						

Quad Module Route A

PLANAR

	1	2	3	4	Link In
LCD 1	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
LCD 2	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
LCD 3	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
LCD 4	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Loop Out	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Switch 1	External Loop				
Switch 2	External Loop				
Switch 3	External Loop				
Switch 4	External Loop				
Internal Loop	Digital 1				
External Loop	Digital 1				

Quad Module Route B

PLANAR

	1	2	3	4	Link In
LCD 1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
LCD 2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
LCD 3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
LCD 4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Loop Out	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Switch 1	External Loop				
Switch 2	External Loop				
Switch 3	External Loop				
Switch 4	External Loop				
Internal Loop	Digital 1				





Quad Module Route C


PLANAR

	1	2	3	4	Link In
LCD 1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
LCD 2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
LCD 3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
LCD 4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Loop Out	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Switch 1	External Loop				
Switch 2	External Loop				
Switch 3	External Loop				
Switch 4	External Loop				
Internal Loop	Digital 1				

Picture	PLANAR
Set Colorspace/Levels	
Picture Information	>
Picture Setup	>
Aspect Ratio	>

Picture Information	PLANAR
Sync	Progressive
Vertical Frequency	60Hz
Horizontal Frequency	50.00kHz
Pixel Frequency	80.10MHz
Horizontal Resolution	1920
Vertical Resolution	1080
8bpc	

Picture Setup	PLANAR		
 Colorspace	RGB		
Center Point	255	255	255
 Black Level (offset) - All	- [Slider] +		
Red	- [Slider] + 128		
Green	- [Slider] + 128		
Blue	- [Slider] + 128		
 White Level (gain) -All	- [Slider] + 132		
Red	- [Slider] + 120		
Green	- [Slider] + 154		
Blue	- [Slider] + 122		
 Set to Nominal for RGB Levels (0-255)			
* ***	Copy Settings to All Displays		

Aspect Ratio	PLANAR	
<input checked="" type="checkbox"/> Scale Mode	16 x 9	
Justify	Center	
Overscan	0%	
 Sharpness	- [Slider] +	4
* ***	Copy Settings to All Displays	

Memory		PLANAR
Recall		▶
Save		▶
Delete		▶

Recall		PLANAR							
<input checked="" type="checkbox"/>	1	<input checked="" type="checkbox"/>	9	<input checked="" type="checkbox"/>	17	<input type="checkbox"/>	25	<input type="checkbox"/>	33
<input checked="" type="checkbox"/>	2	<input checked="" type="checkbox"/>	10	<input type="checkbox"/>	18	<input type="checkbox"/>	26	<input type="checkbox"/>	34
<input type="checkbox"/>	3	<input checked="" type="checkbox"/>	11	<input type="checkbox"/>	19	<input type="checkbox"/>	27	<input type="checkbox"/>	35
<input type="checkbox"/>	4	<input type="checkbox"/>	12	<input type="checkbox"/>	20	<input type="checkbox"/>	28	<input type="checkbox"/>	36
<input type="checkbox"/>	5	<input type="checkbox"/>	13	<input type="checkbox"/>	21	<input type="checkbox"/>	29	<input type="checkbox"/>	37
<input type="checkbox"/>	6	<input type="checkbox"/>	14	<input type="checkbox"/>	22	<input type="checkbox"/>	30	<input type="checkbox"/>	38
<input type="checkbox"/>	7	<input type="checkbox"/>	15	<input type="checkbox"/>	23	<input type="checkbox"/>	31	<input type="checkbox"/>	39
<input type="checkbox"/>	8	<input type="checkbox"/>	16	<input type="checkbox"/>	24	<input type="checkbox"/>	32	<input type="checkbox"/>	40

Save		PLANAR							
<input type="checkbox"/>	1	<input type="checkbox"/>	9	<input type="checkbox"/>	17	<input type="checkbox"/>	25	<input type="checkbox"/>	33
<input type="checkbox"/>	2	<input type="checkbox"/>	10	<input type="checkbox"/>	18	<input type="checkbox"/>	26	<input type="checkbox"/>	34
<input type="checkbox"/>	3	<input type="checkbox"/>	11	<input type="checkbox"/>	19	<input type="checkbox"/>	27	<input type="checkbox"/>	35
<input type="checkbox"/>	4	<input type="checkbox"/>	12	<input type="checkbox"/>	20	<input type="checkbox"/>	28	<input type="checkbox"/>	36
<input type="checkbox"/>	5	<input type="checkbox"/>	13	<input type="checkbox"/>	21	<input type="checkbox"/>	29	<input type="checkbox"/>	37
<input type="checkbox"/>	6	<input type="checkbox"/>	14	<input type="checkbox"/>	22	<input type="checkbox"/>	30	<input type="checkbox"/>	38
<input type="checkbox"/>	7	<input type="checkbox"/>	15	<input type="checkbox"/>	23	<input type="checkbox"/>	31	<input type="checkbox"/>	39
<input type="checkbox"/>	8	<input type="checkbox"/>	16	<input type="checkbox"/>	24	<input type="checkbox"/>	32	<input type="checkbox"/>	40



 



 



 











Delete		PLANAR							
<input checked="" type="checkbox"/>	1	<input checked="" type="checkbox"/>	9	<input checked="" type="checkbox"/>	17	<input type="checkbox"/>	25	<input type="checkbox"/>	33
<input checked="" type="checkbox"/>	2	<input checked="" type="checkbox"/>	10	<input type="checkbox"/>	18	<input type="checkbox"/>	26	<input type="checkbox"/>	34
<input type="checkbox"/>	3	<input checked="" type="checkbox"/>	11	<input type="checkbox"/>	19	<input type="checkbox"/>	27	<input type="checkbox"/>	35
<input type="checkbox"/>	4	<input type="checkbox"/>	12	<input type="checkbox"/>	20	<input type="checkbox"/>	28	<input type="checkbox"/>	36
<input type="checkbox"/>	5	<input type="checkbox"/>	13	<input type="checkbox"/>	21	<input type="checkbox"/>	29	<input type="checkbox"/>	37
<input type="checkbox"/>	6	<input type="checkbox"/>	14	<input type="checkbox"/>	22	<input type="checkbox"/>	30	<input type="checkbox"/>	38
<input type="checkbox"/>	7	<input type="checkbox"/>	15	<input type="checkbox"/>	23	<input type="checkbox"/>	31	<input type="checkbox"/>	39
<input type="checkbox"/>	8	<input type="checkbox"/>	16	<input type="checkbox"/>	24	<input type="checkbox"/>	32	<input type="checkbox"/>	40








Diagnostics	PLANAR
Unit Status	>
Serial Port Status	>
Test Patterns	>
Setup Summary	>
Hours	>
Networking	▶

Unit Status A1	PLANAR			
Matrix				1920 x 1080
010-1409	Rev 01			
LCD				
Temperature	20 °C	Backlight	OK	
24v Supply	24.40v			
48v Supply	47.31v			
Power	52.26w	MX46HDS		
Quad Module				
Temperature	31 °C	Fan	OK	
Power Supplies				
		Fan	OK	
		PS	OK	

Note: The QUAD MODULE and POWER SUPPLIES lines only appear on processor number 1 of each Quad controller module.

Serial Port Status RS485	PLANAR
<ENTER> to clear; +/- to select different serial port	
Commands Received	34
Replies Sent	34
Last Packet Type	Operation
Last Packet Address	Not Addressed
Bytes Received	921
Bytes Sent	773
UART Framing Errors	4
UART Overflow Errors	0
Group A Unit: 1	19200 Baud
Most Recent	
...115, 111, 108, 117, 105, 111, 110, 63, 13	
.st--1?.st--2?.st--3?.lcd.vertical-resolution?.	

Test Patterns				PLANAR	
<ENTER> to select, None to show picture					
 None	 Red	 Red Scale	 Logo		
 White	 Green	 Green Scale	 Grid		
 Black	 Blue	 Blue Scale	 4x4 Contrast		
 Gray	 Cyan	 Gray Scale	 Uniformity		
 Custom Color	 Yellow	 Colors	 Focus		
	 Magenta	 Color Bars			


























Setup Summary				PLANAR	
Current Setup Information					
Quad Module Route Code	682	2048			
Wall	3 x 3	1:1			
Scale/Justify	Fill Screen/Center				
Position/Overscan	100,100	/0%			
Zoom UL/ LR	+0,+0	/	+0,+0		
Viewport UL/LR	+0,+0	/	+0,+0		
 Sharpness	4				
 Black Level	109	109	109		
 White Level	149	149	149		
 Backlight Intensity					20
 White Balance	100	100	100		
 Gray Balance	7	7	7		
 Backlight Adjustment					+0

Networking		PLANAR	
3.3 Mar 28 2014 15:55:44			
IP Address	192.168.12.12		
MAC Address	00:80:A3A91A99AF2		
Reset to Factory			

Hours		PLANAR	
System Time	00636:45		
Backlight Time	00532:00		
Average Hours Per Day	12		
Number of Days > 20 Hours	0		

Note: The last two lines will only appear on the master (A1) display.

Advanced Options	PLANAR
Color Balance	▶
Size and Position	▶
Miscellaneous Options	▶
Backlight Settings	▶
Serial Port Settings	▶
Set Clock / Schedule Events	▶
EDID	▶
Orbiter	▶

Color Balance		PLANAR
Color Temperature		Native
		White Test Pattern
	White Balance - All (Clipboard)	
Red	 - <input type="text"/> + 	100 (100)
Green	 - <input type="text"/> + 	100 (100)
Blue	 - <input type="text"/> + 	100 (100)
		Gray Test Pattern
	Gray Balance - All	
Red	 - <input type="text"/> + 	7 (7)
Green	 - <input type="text"/> + 	7 (7)
Blue	 - <input type="text"/> + 	7 (7)
	Backlight Adjustment +0	
	Copy to Clipboard	
	Recall From Clipboard	
	Reset to Native	
	Reset to Factory	
		Remove Test Pattern

Miscellaneous Options		PLANAR
<input checked="" type="checkbox"/>	Menu Timeout	Never Time Out
	Rotate Menu	None
<input type="checkbox"/>	Hide Source Absent Message	
<input checked="" type="checkbox"/>	Allow Frame Lock	
	Frame Lock Type	Default
<input checked="" type="checkbox"/>	Allow 10 Bits Per Color	
	Native Frequency	60Hz

Backlight Control		PLANAR
<input checked="" type="checkbox"/>	Auto Backlight on	
<input type="checkbox"/>	Turn Backlight Off When No Source (DPMS)	
	DPMS Delay	1 hr
	Backlight Control Mode	Auto
	Backlight Intensity - <input type="range"/> +	10
	Dimmed Intensity	20
	Ambient Threshold	25
	Ambient Light	

For Auto Mode

For Manual Mode

Backlight Control		PLANAR
<input checked="" type="checkbox"/>	Auto Backlight on	
<input type="checkbox"/>	Turn Backlight Off When No Source (DPMS)	
	DPMS Delay	1 hr
	Backlight Control Mode	Manual
	Backlight Intensity - <input type="range"/> +	10

Serial Port Settings		PLANAR
	ASCII Response Type	Symbolic
	ASCII Response Terminator	CR
	Baud Rate	19200

Set Clock / Schedule Events

PLANAR

Press <ENTER> to set clock and schedule events

Current	Date/Time:	Mon	Feb	28	2010	10:40
01	07:30	Daily				Turn On
02	21:30	Daily				Turn Off
03	12:30	Mondays				Recall #04
04	16:00	Wednes- days				Recall #23
05	02:00	Apr 1	2010			Clk +1 Hr
06	02:00	Oct 28	2010			Clk -1 Hr
07						
08						
09						
10						
11						
12						
13						
14						
15						
16						
17						
18						
19						
20						

EDID

PLANAR

EDID Detailed Timing 1 (Preferred Timing) ▶

EDID Detailed Timing 2 ▶

EDID Has Only Preferred Timing

EDID (Plug and Play) Enabled

Orbiter

PLANAR

Orbiter Enabled

Time Interval 1 Minutes


Shift Size 4 Pixels

EDID Detailed Timing 1		PLANAR
Number of pixels per line		
Update EDID		
Horizontal Active	1920	
Vertical Active	1080	
Vertical Refresh Rate	60Hz	
<input type="checkbox"/> Fully Specified		
Pixel Clock	148.50MHz	
Horizontal Blanking	280	
Horizontal Front	88	
Horizontal Sync Width	45	
Vertical Blanking	45	
Vertical Front Porch	4	
Vertical Sync Width	5	
Revert to Factory		

EDID Detailed Timing 2		PLANAR
Number of pixels per line		
Update EDID		
Horizontal Active	3840	
Vertical Active	2160	
Vertical Refresh Rate	30Hz	
<input type="checkbox"/> Fully Specified		
Pixel Clock	247.0MHz	
Horizontal Blanking	560	
Horizontal Front	60	
Horizontal Sync Width	100	
Vertical Blanking	90	
Vertical Front Porch	2	
Vertical Sync Width	4	
Revert to Factory		

In the **EDID Detailed Timing** menus, when the **Fully Specified** box is checked, all the items below it become active.

Size & Position		PLANAR
Picture Position		▷
Zoom Window Top & Left		▷
Zoom Window Bottom & Right		▷
Viewport Window Top & Left		▷
Viewport Window Bottom & Right		▷
Reset All Windows to Default		
* Copy Settings to All Displays		

Picture Position		PLANAR
Use arrow keys to move image		
		
Horizontal Position		100
Vertical Position		100

Zoom Top & Left PLANAR

Arrows move top and left

 


Image Resolution 1920 x 1080
This Unit 960 x 540

Zoom Bottom & Right PLANAR

Arrows move bottom and right





Image Resolution 1920 x 1080
This Unit 960 x 540

Viewport Top & Left PLANAR


Arrows move top and left



Display Resolution 1920 x 1080
Viewport 1920 x 1080

Viewport Bottom & Right PLANAR

Arrows move bottom and right



Display Resolution 1920 x 1080
Viewport 1920 x 1080

Troubleshooting

Below is a troubleshooting table of some common issues you might encounter when installing or running your Clarity Matrix LCD Video Wall.

What to look for	If you see it	If you don't see it
Blinking Green LED next to Video connection on the LCD interface board	Video connection is good.	Check power and video connections to the LCD and Quad controller module.
Power LED on front panel is green. One address LED is lit	Front panel is connected and working properly. Power is good to the Quad controller module.	Check power to Quad controller module. If you see more than one address LED lit (the ones on the circle) the system is doing an automatic update. Wait up to 20 minutes for it to complete. Do not turn off power during this time.
Blinking RS485 light on all Quad controller modules except A	RS485 connections are good.	You must have one and only one 'A' Quad controller module.
Green LED in Out Column for the LCD	Video connection to LCD is good. 'A' Quad controller module is powered on and cabled to this one via RS485. All Quad controller modules have unique addresses.	If the LED is red, there is communication to the LCD interface, but it is not receiving video. This may indicate a malfunctioning LCD interface or Quad Controller. It can take up to a minute for this LED to reflect the state of the system—you may need to wait if you have just turned on or changed connections.

<p>All LCD backlights turn on with IR remote</p>	<p>IR sensor is connected.</p> <p>Quad controller module A is configured and cabled to the other Quad controller modules.</p> <p>Video connection to LCDs is good.</p>	<p>IR sensor must be plugged in to 'A' Quad controller module or to A1 LCD interface module.</p> <p>Quad controller modules must be cabled together via RS485.</p> <p>There must be one and only one 'A' Quad controller module.</p> <p>If a Quad controller module has been newly connected, you may have to turn off and then back on to synchronize those displays. If in doubt, A/C power cycle the system after all connections have been made.</p>
<p>"Info Pane" appears on all displays when menus are on. (The "info pane" is the gray square which shows the display address, position sensor information and information about the target menu)</p>	<p>Video connection is good.</p>	<p>If some displays do not respond, you may have out of date firmware. All Quad controller modules must have the same revision level of firmware.</p>
<p>Unit Status Menu appears on all displays when the MONITOR button is pressed</p>		<p>If a different menu appears on some displays, you may have mismatched firmware. All Quad controller modules must have the same revision level of firmware, and that firmware must be "cloned" to all 4 of the processors.</p>
<p>Unit Status Menu - Temperature is within reason Backlight shows OK Voltage is >22V</p>	<p>The LCD and its interface board are functioning properly.</p>	<p>These three items are reported to the Quad controller module by the LCD interface board over the Comm connection. If the voltage is 0 the voltage meter is not functioning on the LCD interface board (some early prototype systems did not have this meter). If the voltage is low, there may be too much drop in your power cables.</p>

<p>Unit Status Menu - Quad Module Temperature is within reason and Fan is OK</p>	<p>The Quad controller module cooling system is operating normally.</p>	<p>This portion of the menu only shows up on processor 1 of a Quad controller module. Check for proper fan function and proper cooling of the rack.</p>
<p>Unit Status Menu - Power Supply shows OK and power supply fan is OK</p>	<p>The power supply that are connected together are operating normally.</p>	<p>This portion of the menu only shows up on processor A1. If the message "PS Mon cable is not connected" shows in this menu, there is no power supply monitor cable connected. To be sensed, all power supplies in the system must be chained together via PS Mon cables and connected to the PS Mon connection on Quad Controller A.</p>
<p>Matrix Layout - Auto completes correctly</p>	<p>Position Sensors are aligned and working correctly.</p>	<p>Look at the info pane of each display. It shows you its position as reported by the LCD interface board. These numbers update about once a second.</p> <p>An LCD in service mode will not report the correct position.</p> <p>If a display on the top row shows a row other than 1 or a display on the left side shows a column other than 1, then light energy is causing a false reading. This can happen with some fluorescent lights. Cover the position sensor hole from receiving light.</p> <p>Each row should show columns in order from left to right. If the column number starts again at 1, there is a problem either with the receiver of that display or the transmitter of the display next to it.</p> <p>Check for proper alignment of the displays. Similarly, each column should show row numbers in order from top to bottom.</p>

<p>< > buttons on the IR remote move a slave menu sequentially to each display in the Matrix</p>	<p>Auto Layout has been performed.</p>	<p>If Auto Layout has not been completed or had errors, the menu will appear on each display in address order (A1, A2, A3). If no display is connected for a particular address, the menu will “disappear”. Press the arrow key again to move it to the next one until it comes back. You can see which display is being addressed by watching the info pane on any display. Once auto layout has completed, Quad controller modules that are not connected will be ignored. Even if the position sensors are not working, it will be helpful to attempt auto layout.</p>
<p>Solid Green DC CK LED on the front of the power supply module for each one installed</p>	<p>Power module is supplying +48V VDC.</p>	<p>If LED is blank, that power supply module is not installed. If LED is red, that power supply module is faulty.</p>
<p>Flashing lights at the power meter</p>	<p>Remove some of the load from the power supply</p>	<p>Green and amber lights indicate a properly working system. No lights indicate no load applied.</p>

Common Symptoms and How to Troubleshoot Them

The following section gives you a step by step process to troubleshoot common issues, such as the screen is black. In the examples below, **B2** is the display in question. References to this display are in **red** below. For specific troubleshooting, substitute the desired module and unit address for the display in question. All serial commands must be terminated with a carriage return or linefeed.

Symptom: Black Screen

Question	How to find the answer	Possible actions to take
1 Is the backlight on?	This takes a little practice to determine. Looking at the back of the array, you can see a bit of glow between the displays when the backlight is on. There is also a difference in the "blackness" of the black with the backlight on and off. Try turning the backlights off and back on to see if there is a difference.	<ul style="list-style-type: none"> • Check Power cable to the system. • Check power supply (question 10). • Turn backlight to system off and back on - the display may have become out of sync with the system. • The display may not be receiving commands. See question 5.
2 Is communication reaching the display?	The LED next to the comm. RJ11 cable at the display should be blinking. The response to the command <code>OP B2 S?</code> should be negative (bit 15 is high).	<ul style="list-style-type: none"> • Check video connection • Swap video connection with a known good Quad Controller output.
3 Are menus available at the display?	Press MENU on the remote, or send <code>KY ** MENU.</code>	<ul style="list-style-type: none"> • Swap comm and video cables with a known good Quad Controller output.
4 Is it in the Source Absent state?	Bring up a menu (question 6). The Source Absent message will appear above the display's address.	<ul style="list-style-type: none"> • Check the routing (question 8). • Check the input cabling. • Check the source device.
5 What are the routing settings?	Bring up the QUAD MODULE ROUTE B menu (MAIN MENU > WALL CONFIGURATION) and look for a check mark in the LCD 2 row under the desired input column.	<ul style="list-style-type: none"> • Select the correct switch settings in the menu until the desired source is routed to that output.
6 Can the source be routed to other displays in the system?	Bring up the QUAD MODULE ROUTE B menu (MAIN MENU > WALL CONFIGURATION) and change the switch settings to route the same source to a known working display.	<ul style="list-style-type: none"> • If the source cannot be shown on another display, check the source device.

<p>7 What is the state of the power supply?</p>	<p>Bring up the UNIT STATUS menu (MAIN MENU > DIAGNOSTICS) by pressing the MONITOR button and view the Power Supply states on display A1. Or, send the command op A1 QUAD.PS.STATUS. Note that this command should be sent to the Master A1.</p>	<ul style="list-style-type: none"> • Be sure there are enough supplies in the module to drive the desired number of displays. • Check for errors, failures, faults., see the box "If the Power Supply fan is Failed or shows Fault" on page 184.
<p>8 What is the Big Picture Setup?</p>	<p>Bring up the BIG PICTURE SETUP menu (MAIN MENU > WALL CONFIGURATION) or the SETUP SUMMARY menu (MAIN MENU > DIAGNOSTICS) or read the settings with the following commands: op B2 WALL.MODE? op B2 WALL.WIDTH? op B2 WALL.HEIGHT? op B2 WALL.ROW? op B2 WALL.COLUMN? op B2 WALL.STATUS?</p>	<ul style="list-style-type: none"> • The portion of the input video shown on this piece of a wall could be black. Turn wall mode off to view the entire image. • If WALL.STATUS is not 0, or the message "Can't display -- change Scale Mode--" appears on the menu, then the Big Picture scaler is not able to display the image at these settings.
<p>9 What are the zoom/viewport settings?</p>	<p>Bring up the SETUP SUMMARY menu (MAIN MENU > DIAGNOSTICS) or read the settings with the following commands: op B2 VIEWPORT.WINDOW.BOTTOM? op B2 VIEWPORT.WINDOW.LEFT? op B2 VIEWPORT.WINDOW.RIGHT? op B2 VIEWPORT.WINDOW.TOP? op B2 ZOOM.WINDOW.BOTTOM? op B2 ZOOM.WINDOW.LEFT? op B2 ZOOM.WINDOW.RIGHT? op B2 ZOOM.WINDOW.TOP?</p> <p>op B2 OVERSCAN? op B2 POSITION.VERTICAL? op B2 POSITION.HORIZONTAL?</p>	<ul style="list-style-type: none"> • Under normal circumstances, all zoom, viewport and overscan settings should be at 0. Position should be 100. Abnormal settings could prevent the picture from displaying properly.

<p>10 What are the picture settings?</p>	<p>Bring up the SETUP SUMMARY menu (MAIN MENU > DIAGNOSTICS) and read the black level and white level settings or read the following settings with the following commands: op B2 OFFSET.RED? op B2 OFFSET.GREEN? op B2 OFFSET.BLUE? op B2 GAIN.RED? op B2 GAIN.GREEN? op B2 GAIN.BLUE?</p>	<ul style="list-style-type: none"> Under normal circumstances, the gains (white level) should be 128 or 149 and the offsets (black level) should be 128 or 109 Abnormal settings could prevent the image from displaying properly.
<p>11 Is a test pattern being viewed?</p>	<p>Bring up the TEST PATTERNS menu (MAIN MENU > DIAGNOSTICS), or send the following command : op B2 PATTERN?</p>	<ul style="list-style-type: none"> Choose None on the menu or send the command op B2 PATTERN=NONE

If the Power Supply fan is Failed or shows Fault

If the Power Supply fan is “**failed**”:

- Make sure *all* Power Supply Modules are On.
- Make sure **PS Mon** in the master Quad Controller is connected.
- Check the fan indicator on *all* Power Supply Modules. If any are red, replace that Power Supply Module.

If the Power Supply shows “**fault**,”

- Make sure *all* Power Supply Modules are On.
- Make sure **PS Mon** on the master Quad Controller is connected.
- Check “**DC OK**” indicators on *all* Power Supply Modules
 - If one is **red**, replace that module.
 - If **all are red**, check the power meter on the rear of the modules.
 - If *all* lights are blinking rapidly, remove the last display panel in the loop to see if the problems is fixed.
 - If the problem is *not* fixed, remove *all* power connectors from the module to see if the problem is fixed.
 - If the problem is fixed, rebalance the load on that module.
 - If it is *not* fixed, replace the module.

Symptom: Picture Is Not Displaying Correctly

Question	How to find the answer	Possible actions to take
1 Is the colorspace correct?	Bring up the SETUP SUMMARY menu (MAIN MENU > DIAGNOSTICS) or read the setting with the following command: op B2 COLORSPACE?	<ul style="list-style-type: none"> • Computer sources are usually RGB colorspace. Some video sources are YPbPr, if you see the image but the colors are wrong, try changing this setting.
2 Are the gains and offsets correct for video vs. RGB levels?	See question 13 of the previous section.	<ul style="list-style-type: none"> • Some video sources use a code of 16 instead of 0 for black and 235 instead of 255 for white. If this is the case, the image may appear to be washed out. In the Input Levels menu, choose "Set to Nominal for Video Levels (16-235) to display the image correctly. Conversely, computer sources will need to be set to RGB levels in order to display correctly.
3 Is my source very high resolution or dual link?	If your source is more than 2047 pixels wide or tall or your source's input clock is higher than 165 MHz, it needs special treatment.	<ul style="list-style-type: none"> • See "Configuring High Resolution Inputs" on page 161.
4 Is the EDID correct for my source?	Open the EDID menu (MAIN MENU > ADVANCED OPTIONS > EDID).	<ul style="list-style-type: none"> • Your computer is probably using Detailed Timing 1 or Detailed Timing 2 of the EDID to determine what resolution to output. If possible, set this menu to match the resolution you desire. See "Controlling EDID Behavior" on page 114.


Servicing

You can remove or simply get access to the LCDs without removing other LCDs in the wall. Starting at the top of the wall, pull up and out to place them in service mode, allowing you to get to the LCDs below.

You can also completely remove and replace an LCD very quickly this way. Because of their streamlined design, they weigh less than typical LCD displays and are more easily handled.

Lift the top display and bring it forward about one inch (3cm). Lower it into the mount's hook or notch. Tilt the bottom of the display forward and lower the service mode arms on both sides.

Caution: When the LCD is in service mode, **do not unplug power while the LCD is on.** Use the remote control to turn off the LCD and *then* unplug the power cable. If you unplug the power cable when the LCD is still on, it could damage the LCD.

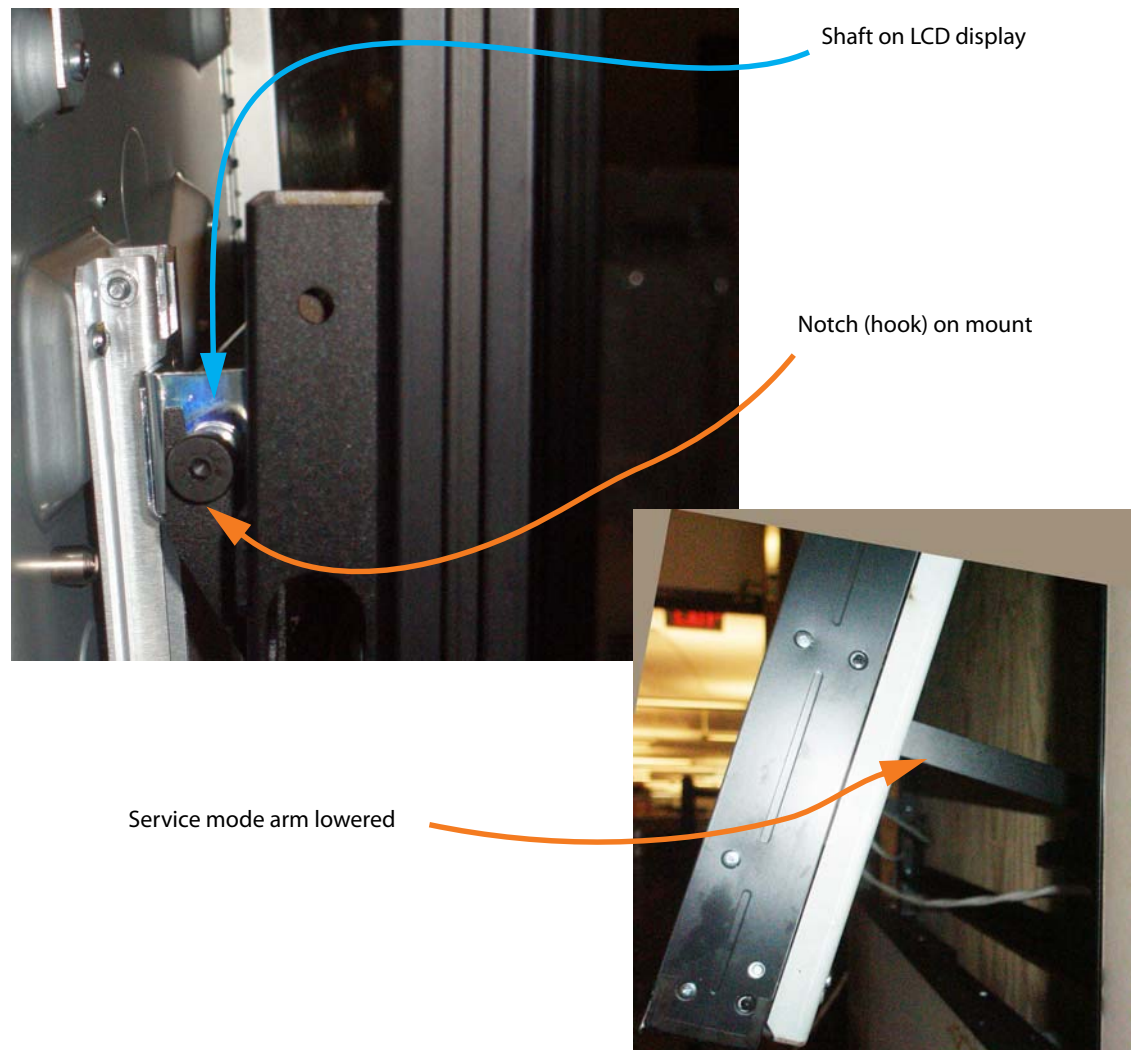


Servicing the MX46HDX

You can remove or simply get access to the LCDs without removing other LCDs in the wall. Starting at the top of the wall, pull up and out to place them in service mode, allowing you to get to the LCDs below.

You can also completely remove and replace an LCD very quickly this way. Because of their streamlined design, they weigh less than typical LCD displays and are more easily handled.

To put a panel in service mode:

- 1 Release the scissor by pulling upward on the scissor locks.

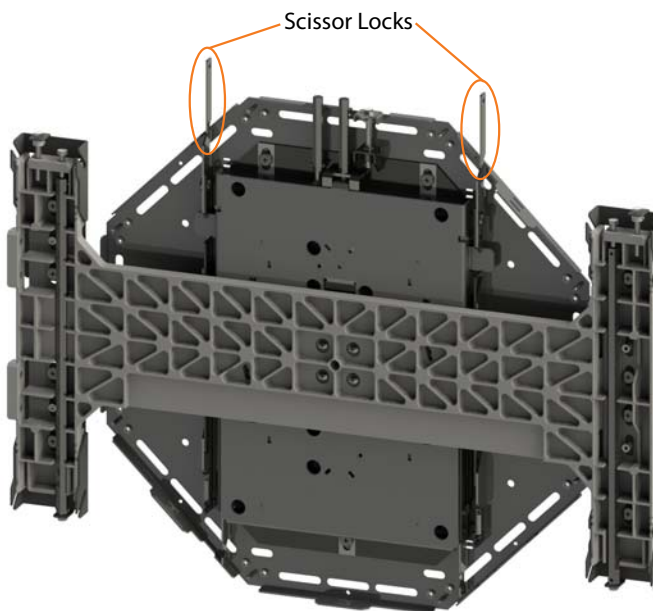

- 2 Carefully pull the display outward and lock it in the extended position by rotating the scissor braces up.
- 3 If the panel is in portrait mode, release the rotation lock and rotate into landscape.
- 4 Release the bottom lock brackets by pulling the spring pins up and sliding the brackets downward.

- 5 Swing the bottom of the panel outward. Kickstands from the panel side rotate down to prop the panel in place against the bottom edge of the cast aluminum part.



Caution: When the LCD is in service mode, **do not unplug power while the LCD is on.** Use the remote control to turn off the LCD and *then* unplug the power cable. If you unplug the power cable when the LCD is still on, it could damage the LCD.

Specifications

LCD Module Specifications for MX46HDS, MX55HDS, MX46HDX

Model Number >	MX46HDS		MX55HDS		MX46HDX	
Dimensions in >	in/lbs	mm/kg	in/lbs	mm/kg	in/lbs	mm/kg
Panel						
Width	40.3"	1024mm	47.8"	1215mm	40.2"	1020mm
Height	22.7"	579mm	27"	686mm	22.6"	575mm
Diagonal overall	46"	1168mm	55"	1396mm	46"	1168mm
Depth installed	3.5"	90mm	3.5"	90mm	3.6"	91mm
Weight	36lbs	16.3kg	52lbs	23.5kg	33lbs	15.0kg
LCD Mount						
Width - Landscape	31.9"	809mm	32.9"	837mm	23.5"	597mm
Height - Landscape	20.8"	528mm	25"	636mm	18.9"	480mm
Width - Portrait	22.7"	576mm	26.6"	677mm	17.7"	451mm
Height - Portrait	38.3"	973mm	45.9"	1165mm	24.3"	619mm
Weight - Landscape	7lbs	3.2kg	8lbs	3.6kg	24lbs	10.9kg
Weight - Portrait	9lbs	3.9kg	10lbs	4.5kg	24lbs	10.9kg
Orientation	Landscape or Portrait, Max vertical tilt of +/- 10°					
Maximum stack height	Unlimited landscape portrait					
Rear clearance required	None					
Aspect ratio	16:9 (landscape) 9:16 (portrait)					
Backlight life	50,000 (half brightness)					

LCD Module Specifications for LX46HDU, MX46HDU, LX55HDU, MX55HDU, LX55HDX, MX55HDX

Model Number >	LX/MX46HDU		LX/MX55HDU		LX/MX55HDX	
Dimensions in >	in/lbs	mm/kg	in/lbs	mm/kg	in/lbs	mm/kg
Panel						
Width	40.2"	1022mm	47.8"	1213mm	47.7"	1211.8mm
Height	22.7"	577mm	26.9"	684mm	26.9"	682.6mm
Diagonal overall	46"	1168mm	55"	1396mm	55"	1168mm
Depth installed	3.5"	90mm	3.6"	90mm	3.6"	90mm
Weight	34lbs	15.4kg	46lbs	21kg	46lbs	21 kg
LCD Mount						
Width - Landscape	31.9"	809mm	32.9"	837mm	32.9"	837mm
Height - Landscape	20.8"	528mm	25"	636mm	25"	636mm
Width - Portrait	22.7"	576mm	26.6"	677mm	26.6"	677mm
Height - Portrait	38.3"	297mm	45.9"	1165mm	45.9"	1165mm
Weight - Landscape	7lbs	3.2kg	8lbs	3.6kg	8lbs	3.6kg
Weight - Portrait	9lbs	3.9kg	10lbs	4.5kg	10lbs	4.5kg
Orientation	Landscape or Portrait, Max vertical tilt of +/- 10°					
Maximum stack height	Unlimited landscape portrait					
Rear clearance required	None					
Aspect ratio	16:9 (landscape) 9:16 (portrait)					
Backlight life	50,000 (half brightness)					

LCD Module Specifications for LX46HDS, LX55HDS

Model Number >	LX46HDS		LX55HDS	
Dimensions in ...	in/lbs	mm/kg	in/lbs	mm/kg
Panel				
Width	40.3"	1024mm	47.8"	1215mm
Height	22.7"	579mm	27"	686mm
Diagonal overall	46"	1168mm	55"	1396mm
Depth installed	4.2"	107mm	4.2"	107mm
Weight	38lbs	17.2kg	50lbs	22.2kg
LCD Mount				
Width - Landscape	31.9"	809mm	32.9"	837mm
Height - Landscape	20.8"	528mm	25"	636mm
Width - Portrait	22.7"	576mm	26.6"	677mm
Height - Portrait	38.3"	973mm	45.9"	1165mm
Weight - Landscape	7lbs	3.2kg	8lbs	3.6kg
Weight - Portrait	9lbs	3.9kg	10lbs	4.5kg
Orientation	Landscape or portrait			
Maximum stack height	Unlimited landscape portrait			
Rear clearance required	None			
Aspect ratio	16:9 (landscape) 9:16 (portrait)			
Backlight life	50,000 (half brightness)			

LCD Module Specifications for LX46S-3D, LX46HDU-3D

Model Number >	LX46S-3D		LX46HDU-3D	
Dimensions in ...	in/lbs	mm/kg	in/lbs	mm/kg
Panel				
Width	40.4"	1026mm	40.2"	1022mm
Height	22.8"	580mm	22.7"	577mm
Diagonal overall	46"	1168mm	46"	1168mm
Depth installed	3.6"	90mm	3.6"	91mm
Weight	37lbs	16.6kg	35lbs	15.9kg
LCD Mount				
Width - Landscape	30.4"	773mm	31.9"	809mm
Height - Landscape	20"	508mm	20.8"	528mm
Weight - Landscape	8lbs	3.6kg	7lbs	3.2kg
Orientation	Landscape (only)			
Maximum stack height	Unlimited landscape			
Rear clearance required	None			
Aspect ratio	16:9 (landscape)			
Backlight life	50,000 (half brightness)			

Quad Controller Module Specifications

Specification	MG2-QC		Connector	Notes
Dimensions	in/lbs	mm/kg		
Width	19"	483mm		
Height	1.7"	44mm		
Depth	18.2"	463mm		
Weight	13lbs	5.8kg		
Power In			Mini DIN	24-48V, 4A max
RS232 In/Out			RJ45	
RS485 In/Out			RJ45	
Video Input			HDMI	
Dual Link In			DisplayPort	
Video Loop Out			DisplayPort	
IR			3.5mm	
PS Mon			RJ45	
Video Out			RJ45	

Power Supply Module Specifications

Specification	MG2-PSX		Connector	Notes
Dimensions	in/lbs	mm/kg		
Width	19"	483mm		
Height	1.7"	44mm		
Depth	18.2	463mm		
Weight				
PS3	16.7lbs	7.6kg		
PS3/R	18.5lbs	8.4kg		
Power In			C20 AC Inlet	
Output to Quad Controller			Mini DIN	
Output to LCD module			Mini-Fit Sr	
PS Monitor Output			RJ45	
Input Ratings				
Input voltage			100-240 VAC	

Power Supply Module Specifications

Specification	MG2-PSX	Connector	Notes
Input frequency		50-60 Hz	
Input current			Under normal usage, AC should not exceed 16A at 120 VAC.
115 VAC	10.8A typ.	PS3 and PS3/R	
230 VAC	5.4A typ.	PS3 and PS3/R	
Inrush current 230 VAC	<60A		
Output Ratings			
Output voltage		48 VDC	
Output current		25A 2A	PS3 and PS3/R max Per Quad Controller

LCD Optical Specifications

Specification	Maximum	Minimum	Typical
Screen brightness			
MX46HDS, MX55HDS, MX55HDU, MX46HDU, MX55HDX, MX46HDX		600 cd/m	800 cd/m
LX46HDS, LX55HDS, LX55HDU, LX46HDU, LX55HDX		450 cd/m	500 cd/m
LX46S-3D		210 cd/m	250 cd/m
LX46HDU-3D (Thru circular polarized glasses combined left eye/right eye)			190 cd/m
Contrast ratio			
MX46HDS, LX46HDS, LX55HDS, MX55HDU, MX55HDX, LX55HDU, MX46HDU, LX46HDU, LX55HDX		2500:1	3500:1
MX55HDS		3000:1	3500:1
LX46HDU-3D Cross Talk % (white/black)			40:1
Uniformity		75%	
Viewing Angle, horizontal & vertical unless otherwise noted below LX46HDU-3D (Vertical View Angle @ 20% Cross Talk)			±178° ±16°
Color gamut			72% NTSC 100% EBU

LCD Optical Specifications (Continued)

Specification	Maximum	Minimum	Typical
Color CIE - Native			
MX46HDS LCD module			
Red (x,y)			0.646, 0.335
Green (x,y)			0.310, 0.597
Blue (x,y)			0.151, 0.068
White (x,y)			0.280, 0.290
MX46HDU LCD module			
Red (x,y)			0.638, 0.331
Green (x,y)			0.300, 0.608
Blue (x,y)			0.153, 0.055
White (x,y)			0.263, 0.268
MX55HDS LCD module			
Red (x,y)			0.620, 0.330
Green (x,y)			0.303, 0.630
Blue (x,y)			0.150, 0.550
White (x,y)			0.280, 0.290
MX55HDU LCD Module			
Red (x,y)			0.620, 0.330
Green (x,y)			0.303, 0.630
Blue (x,y)			0.150, 0.055
White (x,y)			0.280, 0.290
LX46HDS LCD module			
Red (x,y)			0.646, 0.335
Green (x,y)			0.310, 0.597
Blue (x,y)			0.151, 0.068
White (x,y)			0.280, 0.290
LX46HDU LCD module			
Red (x,y)			0.640, 0.330
Green (x,y)			0.300, 0.600
Blue (x,y)			0.150, 0.060
White (x,y)			0.280, 0.290
LX55HDS LCD module			
Red (x,y)			0.644, 0.335
Green (x,y)			0.307, 0.597
Blue (x,y)			0.151, 0.063
White (x,y)			0.280, 0.280
LX55HDU LCD module			
Red (x,y)			0.640, 0.328
Green (x,y)			0.295, 0.622
Blue (x,y)			0.156, 0.048
White (x,y)			0.277, 0.301
LX46S-3D LCD module			
Red (x,y)			0.643, 0.328
Green (x,y)			0.271, 0.599
Blue (x,y)			0.143, 0.060
White (x,y)			0.280, 0.290
LX/MX55HDX LCD module			
Red (x,y)			0.646, 0.337
Green (x,y)			0.303, 0.615
Blue (x,y)			0.152, 0.060
White (x,y)			0.284, 0.297
LX46HDU-3D LCD module			
Red (x,y)			0.644, 0.339
Green (x,y)			0.306, 0.613
Blue (x,y)			0.151, 0.061
White (x,y)			0.285, 0.307

LCD Optical Specifications (Continued)

Specification	Maximum	Minimum	Typical
Color Temperature Presets			3200K, 5500K, 6500K, 8500K
Native color temperature			10,000K
Number of colors			16.7M
Native resolution			
MX**HDS			1920 x 1080 pixels
LX**HDS			1920 x 1080 pixels
MX**HDX			1920 x 1080 pixels
LX46S			1336 x 768 pixels
LX**HDX			1920 x 1080 pixels
LX/MX55HDX			1920 x 1080 pixels

Environmental Specifications

Specification	Maximum	Minimum	Optimal	Notes
Temperature				All performance specifications are maintained within this temperature range.
operating, LCD module	35° C 95° F	5° C 41° F	20° C +/- 3° C	
operating, Quad Controller module	40° C 104° F	10° C 50° F	20° C 68° F	
operating, Power supply module	40° C 104° F	10° C 50° F	20° C 68° F	
non-operating, LCD module	50° C 122° F	-20° C -4° F	20° C +/- 10° C	
non-operating, Quad Controller module	85° C 185° F	-20° C -4° F		
non-operating, Power supply module	85° C 185° F	-20° C -4° F		
Fan Noise				
LCD module	N/A - no fan			
Quad Controller module	45dB			
Power supply module	45dB			

Environmental Specifications (Continued)

Specification	Maximum	Minimum	Optimal	Notes
Altitude (barometric pressure)	2000m			Above sea level, or equivalent barometric pressure. De-rate temperature 10° for every 1km above 1000m.
Humidity				
operating, LCD module	80% R.H.	20% R.H.		non-condensing
operating, Quad Controller module	80% R.H.	20% R.H.		
operating, Power supply module	80% R.H.	20% R.H.		

Note: This is the minimum supported signal mode table. Signal timings and formats other than those listed below may also be supported.

* RB = Reduced Blanking

Signal Compatibility

Signal Type	Resolution	Frame Rate (Hz)	Line Rate (kHz)	Pixel Rate (MHz)	HDMI – RGB	HDMI – YUV	DisplayPort – RGB	DisplayPort – YUV	References
PC	640x480	59.94	31.47	25.175	x	x	x	x	VESA DMT
	640x480	72	37.86	31.5	x		x		VESA DMT
	640x480	74.99	37.5	31.5	x		x		VESA DMT
	640x480	85	43.27	36	x		x		VESA DMT
	800x600	56	35.16	36	x		x		VESA DMT
	800x600	60.32	37.89	40	x		x		VESA DMT
	800x600	72	48.08	50	x		x		VESA DMT
	800x600	75	46.88	49.5	x		x		VESA DMT
	800x600	85.06	53.67	56.25	x		x		VESA DMT
	848x480	60	30	21.68	x		x		VESA CVT
	1024x768	50	40.6	54.57	x		x		VESA CVT-R
	1024x768	60	47.82	63.5	x		x		VESA CVT
	1024x768	60	48.36	65	x		x		VESA DMT
	1024x768	70	56.48	75	x		x		VESA DMT
	1024x768	75.03	60.02	78.75	x		x		VESA DMT
	1024x768	85.03	68.68	94.5	x		x		VESA DMT
	1024x1024	60	32.33	42.677	x		x		VESA DMT
	1152x864	70.01	63.85	94.5	x		x		VESA DMT
	1152x864	75	67.5	108	x		x		VESA DMT
1152x864	85	77.09	121.5	x		x		VESA DMT	

Signal Compatibility (cont.)

Signal Type	Resolution	Frame Rate (Hz)	Line Rate (kHz)	Pixel Rate (MHz)	HDMI – RGB	HDMI – YUV	DisplayPort – RGB	DisplayPort – YUV	References
PC (cont.)	1280x768	60	47.4	68.25	x		x		VESA DMT
	1280x768	60	47.78	79.5	x		x		VESA CVT
	1280x768	74.89	60.29	102.25	x		x		VESA CVT
	1280x768	84.84	68.63	117.5	x		x		VESA CVT
	1280x960	60	60	108	x		x		VESA DMT
	1280x960	75	75	126	x		x		VESA DMT
	1280x960	85	85.94	148.5	x		x		VESA DMT
	1280x1024	60.02	63.98	108	x		x		VESA DMT
	1280x1024	75.02	79.98	135	x		x		VESA DMT
	1280x1024	85.02	91.15	157.5	x		x		VESA DMT
	1360x768	60	47.71	85.5	x		x		VESA DMT
	1366x768	60	50	80	x		x		VESA DMT
	1400x1050	49.97	54.11	100	x		x		VESA CVT
	1400x1050	60	64.7	101	x		x		VESA CVT-R
	1400x1050	60	65.32	121.75	x		x		VESA CVT
	1400x1050	74.87	82.28	156	x		x		VESA CVT
	1600x1200	60	75	162	x		x		VESA DMT
	1680x1050	49.97	54.12	119.5	x		x		VESA CVT-R
	1680x1050	59.95	65.29	146.25	x		x		VESA CVT
	1920x1080	49.93	55.62	141.5	x		x		VESA CVT
	1920x1080	59.95	66.59	138.5	x		x		VESA CVT-R
	1920x1200	49.93	61.82	158.25	x		x		VESA CVT
	1920x1200	59.95	74.04	154	x		x		VESA CVT-R
2560x1440	59.95	88.79	241.5			x		VESA CVT-R	
2560x1600	59.97	98.71	268.5			x		VESA CVT-R	

Signal Compatibility (cont.)

Signal Type	Resolution	Frame Rate (Hz)	Line Rate (kHz)	Pixel Rate (MHz)	HDMI – RGB	HDMI – YUV	DisplayPort – RGB	DisplayPort – YUV	References
Specialty	960x1080	60	67.2	86.01	x		x		VESA CVT
	960x2160	60	132	148.5	x		x		VESA CVT-R
	2732x1536	30	46.88	162.68	x		x		VESA CVT-R
	2732x1536	60	94.8	274.54			x		VESA CVT-R
	4080x768	30	23.45	115.61	x		x		VESA CVT-R
	4080x768	60	47.7	254.96			x		VESA CVT-R
	1366x2304	30	70.12	107.15	x		x		VESA CVT-R
	3840x1080	30	32.97	131.88	x		x		VESA CVT-R
	3840x1080	60	67.5	297			x		CEA-861-E, VIC 16, with horizontal parameters doubled
	1920x2160	30	65.73	136.72	x		x		VESA CVT-R
	1920x3240	24	78.65	163.58	x		x		VESA CVT-R
Apple Mac	640x480	60	31.5	25.2	x		x		VESA DMT
	1024x768	59.28	48.19	64	x		x		VESA DMT
	1024x768	74.93	60.24	80	x		x		VESA CVT
	1152x870	60	54.17	82.34	x		x		VESA DMT
	1152x870	75.06	68.32	104.94	x		x		VESA DMT
	1280x800	60	49.7	83.499	x		x		VESA DMT
	1440x900	60	55.94	106.5	x		x		VESA CVT
	1600x900	60	56	118.35	x		x		VESA DMR
	1680x1050	60	65.34	146.36	x		x		VESA CVT
	2560x1440	60	86	241.7			x		VESA CVT-R
2560x1600	60	98.76	268.63			x		VESA CVT-R	

Signal Compatibility (cont.)

Signal Type	Resolution	Frame Rate (Hz)	Line Rate (kHz)	Pixel Rate (MHz)	HDMI – RGB	HDMI – YUV	DisplayPort – RGB	DisplayPort – YUV	References
SDTV	480p	59.94			x	x	x	x	SMPTE 293M, CEA-861-E
EDTV	576p	50			x	x	x	x	ITU-R BT.1358, CEA-861-E
HDTV	1080i	50			x	x	x	x	SMPTE 274M, CEA-861-E
	1080i (Aus)	50			x	x	x	x	SMPTE 295M, AS 4933.1-2005, CEA-861-E
	1080i	60			x	x	x	x	SMPTE 274M, CEA-861-E
	720p	50			x	x	x	x	SMPTE 296M, CEA-861-E
	720p	60			x	x	x	x	SMPTE 296M, CEA-861-E
	1080p	24			x	x	x	x	SMPTE 274M, CEA-861-E
	1080p	25			x	x	x	x	SMPTE 274M, CEA-861-E
	1080p	30			x	x	x	x	SMPTE 274M, CEA-861-E
	1080p	50			x	x	x	x	SMPTE 274M, CEA-861-E
UHDTV	3840x2160	24	52.44	209.75			x	x	VESA CVT-R
	3840x2160	24	54	297			x	x	SMPTE ST 2036-1:2009, HDMI 1.4b VIC 1
	3840x2160	25	56.25	297			x	x	SMPTE ST 2036-1:2009, HDMI 1.4b VIC 2
	3840x2160	25	54.63	218.5			x	x	VESA CVT-R
	3840x2160	30	65.69	262.75			x	x	VESA CVT-R
	3840x2160	30	67.5	297			x	x	SMPTE ST 2036-1:2009, HDMI 1.4b VIC 3

Input Minimum Sync and Blanking Specifications

Parameter	Symbol	Minimum Horizontal Setting	Minimum Vertical Setting
Sync pulse width	T_{SY}	2 pixels	2 lines
Sync back porch width	T_{BP}	20 pixels 64 (tri-level sync)	3 lines
Sync front porch width	T_{FP}	1% of HRes	1 line

Note: The following illustration shows the timing characteristics for the Input Sync, Front Porch and Back Porch.

The diagram illustrates the timing relationship between the SYNC and DATA signals. The SYNC signal is shown as a pulse with a width T_{SY} , followed by a back porch of width T_{BP} , and then a front porch of width T_{FP} . The DATA signal is shown as a horizontal line that is labeled as 'VALID' during the active period of the SYNC signal, which includes the sync pulse and the back porch.

Cleaning the ERO Clarity Matrix Wall

Required Materials

- IPA (Isopropyl Alcohol)
- Filtered Water
- Non-Abrasive cloth (cotton or polyester based)
- Nitrile/Latex Gloves


Silicone Removal

Note: Wear gloves to protect your skin from IPA and to reduce fingerprints.

- 1 Fold a small cloth into a small square as shown.



- 2 Wet the cloth with IPA. *Do not soak* the cloth. Cloth must be dampened, but not have excess IPA running off into the bond area at the edges of the screen.
- 3 *Using one motion in one direction*, wipe along the edge of the display to remove silicone. Do not rub the cloth back and forth; that will smear the silicone.

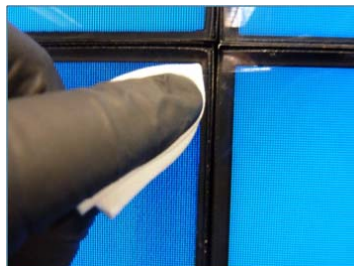

- 4 Do not exceed two wipes per surface of the cloth. Turn over, fold, or use a new cloth for the next wipes



Caution: Do not wipe the seam between the displays. This can pull material out of the seam and spread it onto the display.

Caution: Be careful not to remove too much material from the seam.

WARNING Abrasive cleaning or too much pressure may cause damage to the glass coating.

WARNING Do not stick anything between the displays. This can pull the mullion away from the display or pull material out of the seam.

Cleaning the Glass

- To remove difficult water spots or fingerprints, wipe with filtered water followed immediately with IPA.
- Wipe gently and in a uniform motion across the glass to prevent streaking.

Matrix Drawings

Click below to go to the drawings you want.

Drawings of LCD Displays

- MX46HDS Dimensions – Landscape
- MX46HDS Dimensions – Portrait
- MX55HDS Dimensions – Landscape
- MX55HDS Dimensions – Portrait
- LX46HDS Dimensions – Landscape
- LX46HDS Dimensions – Portrait
- LX55HDS Dimensions – Landscape
- LX55HDS Dimensions – Portrait
- LX46S-3D Dimensions Landscape (only))
- LX/MX46HDU, LX46HDU-3D Dimensions – Landscape
- LX/MX46HDU Dimensions – Portrait
- LX/MX55HDU Dimensions – Landscape
- LX/MX55HDU Dimensions – Portrait
- LX/MX55HDX Dimensions – Landscape
- LX/MX55HDX Dimensions – Portrait
- MX46HDX Dimensions – Landscape
- MX46HDX Dimensions – Portrait

Drawings of Display Mounts

- LX/MX55HDU, LX/MX55HDX, and LX55HDS – Landscape
- LX/MX55HDU, LX/MX55HDX, and LX55HDS – Portrait
- LX/MX46HDU, LX46HDU-3D, MX46HDS, and LX46HDS – Landscape
- LX/MX46HDU, MX46HDS, and LX46HDS – Portrait
- MX55HDS – Landscape
- MX55HDS – Portrait
- LX46S-3D – Landscape (only)
- MX46HDX – Landscape
- MX46HDX – Portrait


Dimensions of Electronic Components

- Power Supply Module
- Quad Controller Module
- Main DC Power Cable
- Power Supply to Quad Power Cable


Note: More drawings are available online as CADs if you need further details.

MX46HDS Dimensions – Landscape


MX46HDS Front, Top, and Bottom Views – Landscape

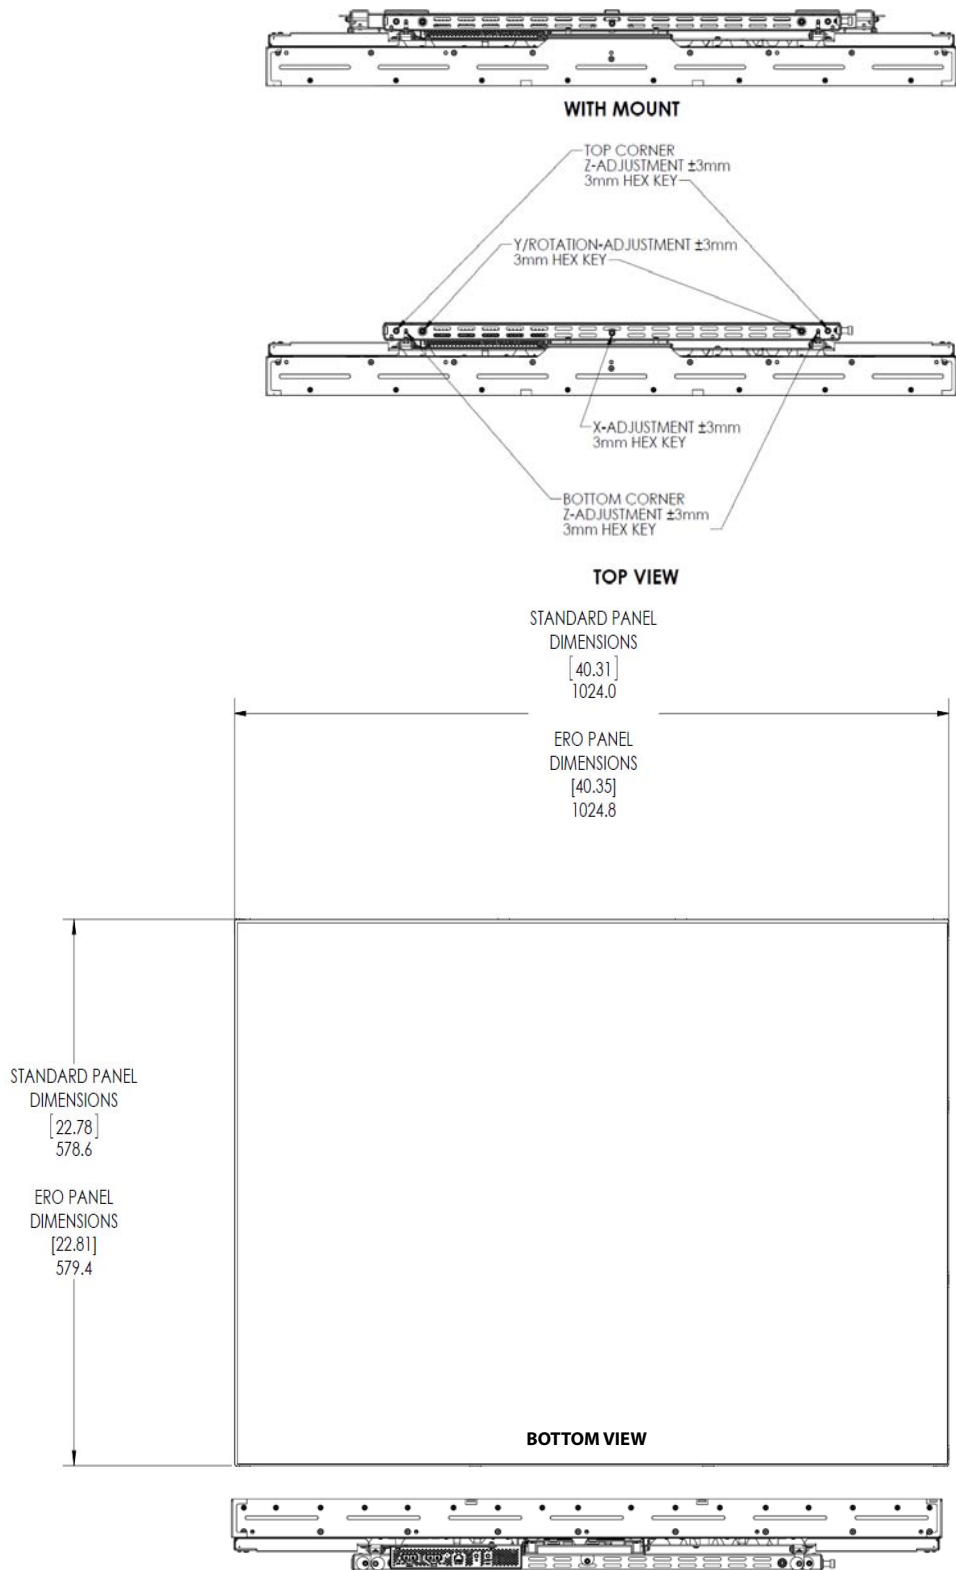

MX46HDS Rear View – Landscape

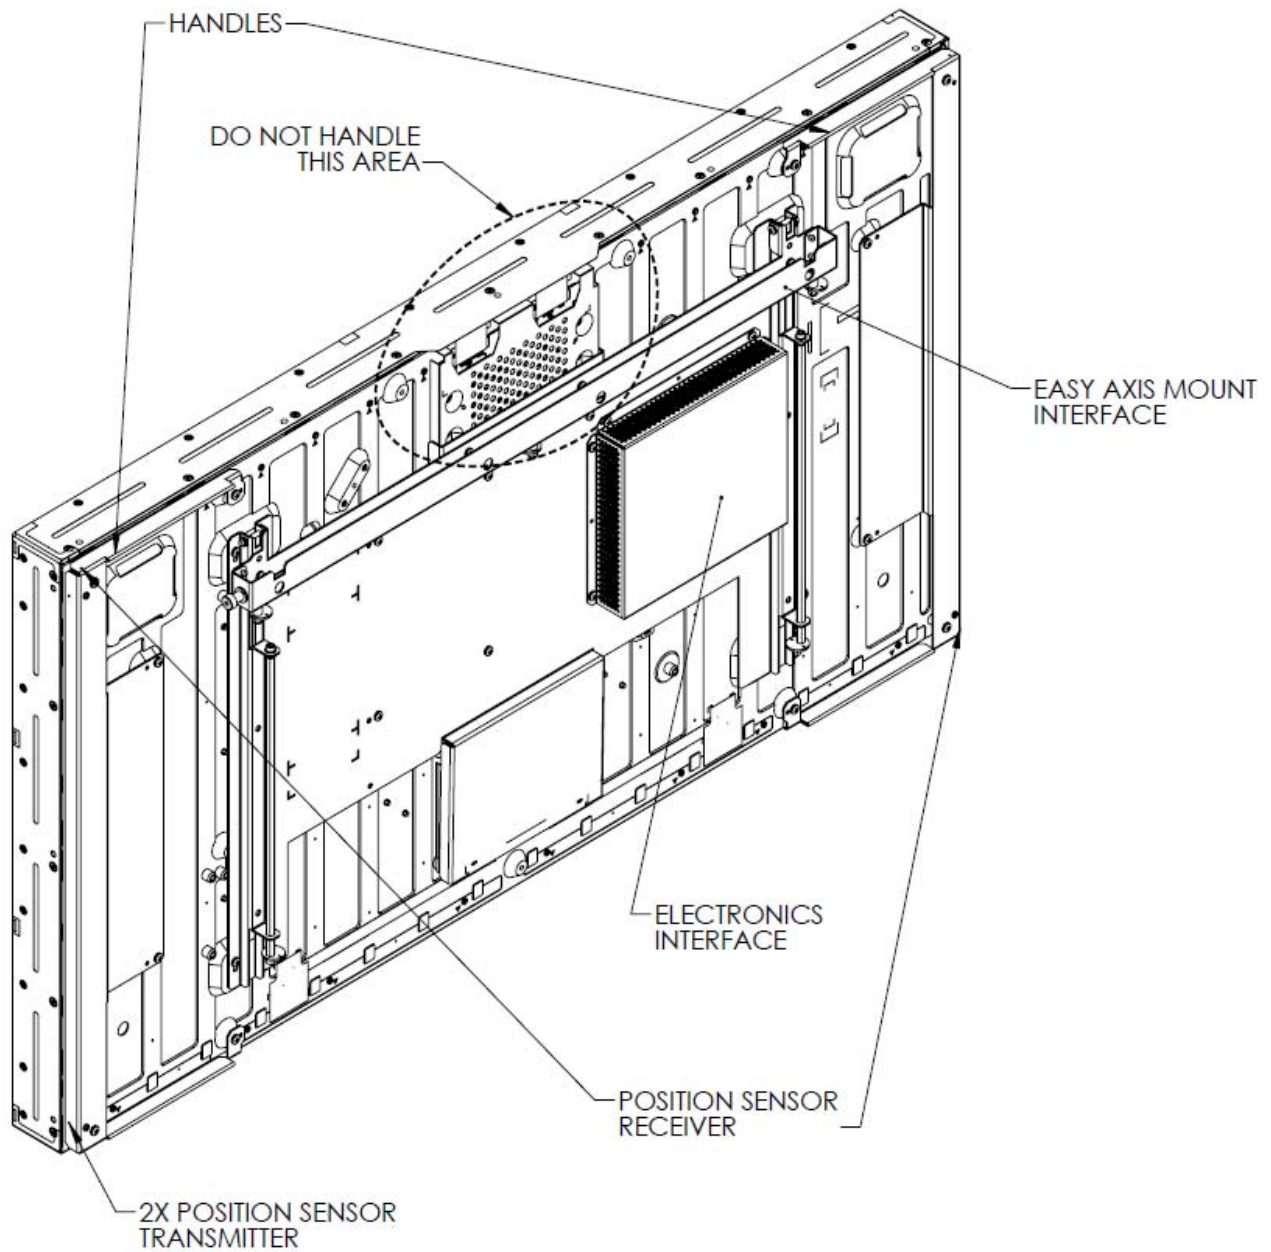


MX46HDS Side View – Landscape

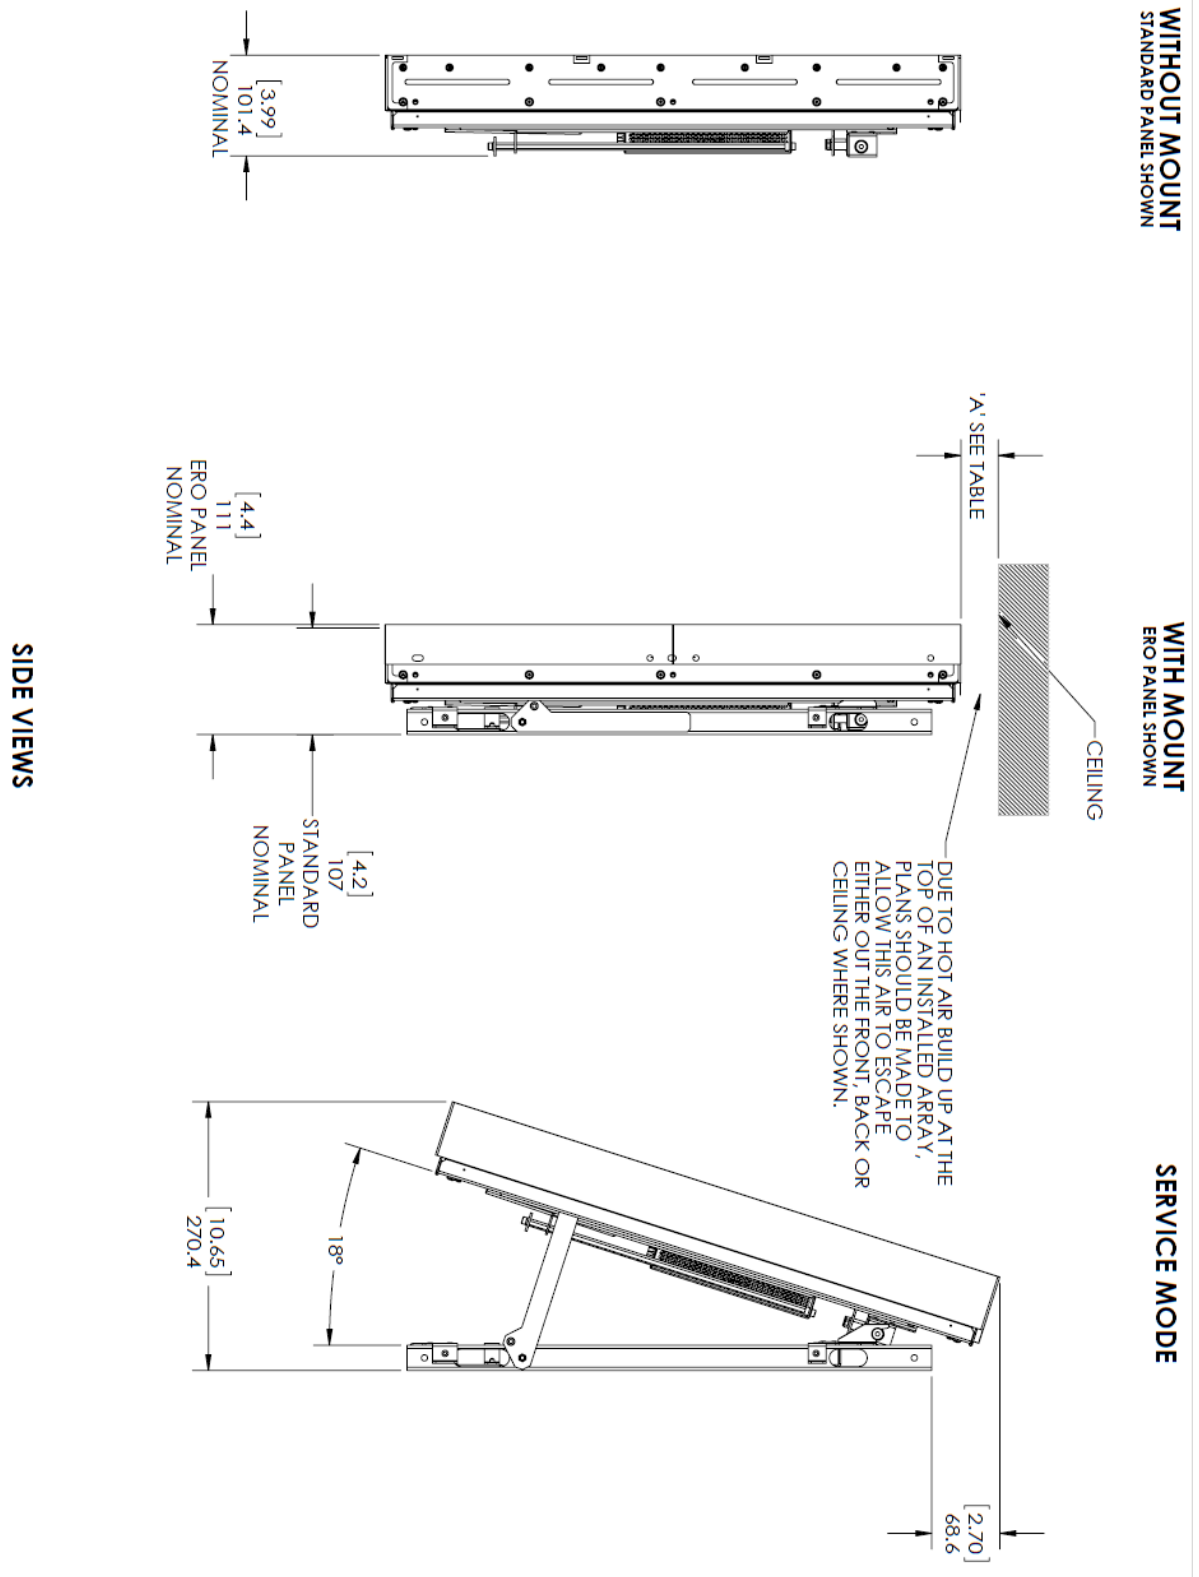


MX46HDS Dimensions – Portrait


MX46HDS Top and Bottom Views – Portrait

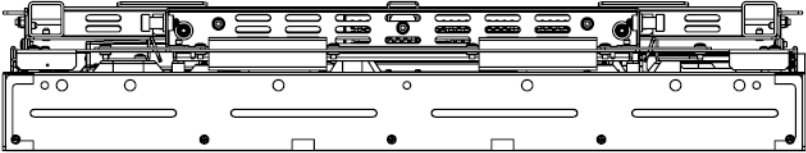

WITH MOUNT

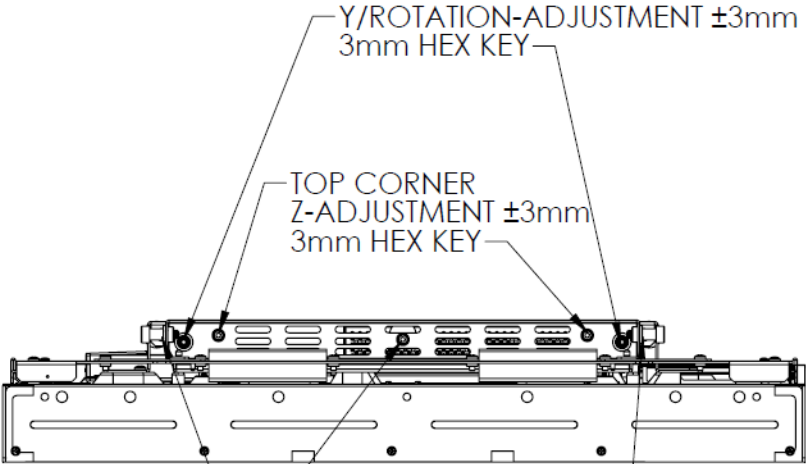


TOP VIEW

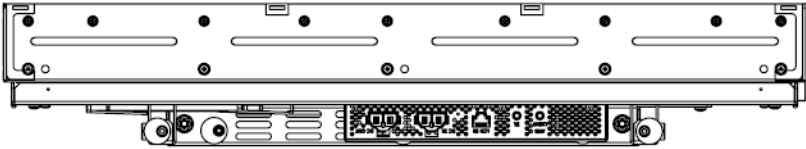


BOTTOM VIEW

MX46HDS Front View – Portrait

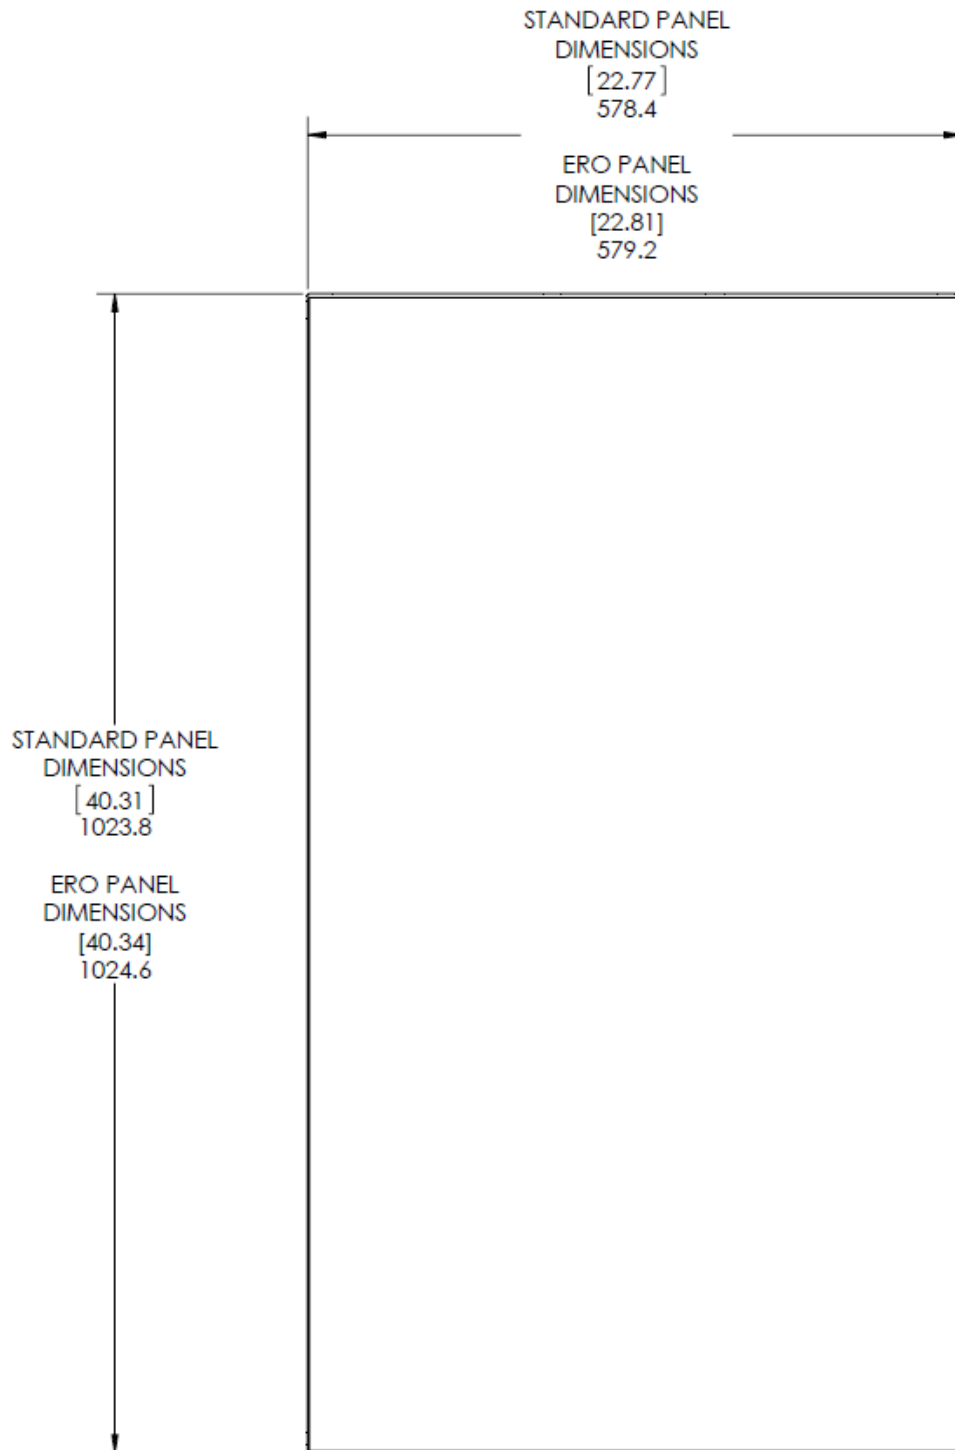

FRONT VIEW
STANDARD PANEL SHOWN

MX46HDS Rear View – Portrait

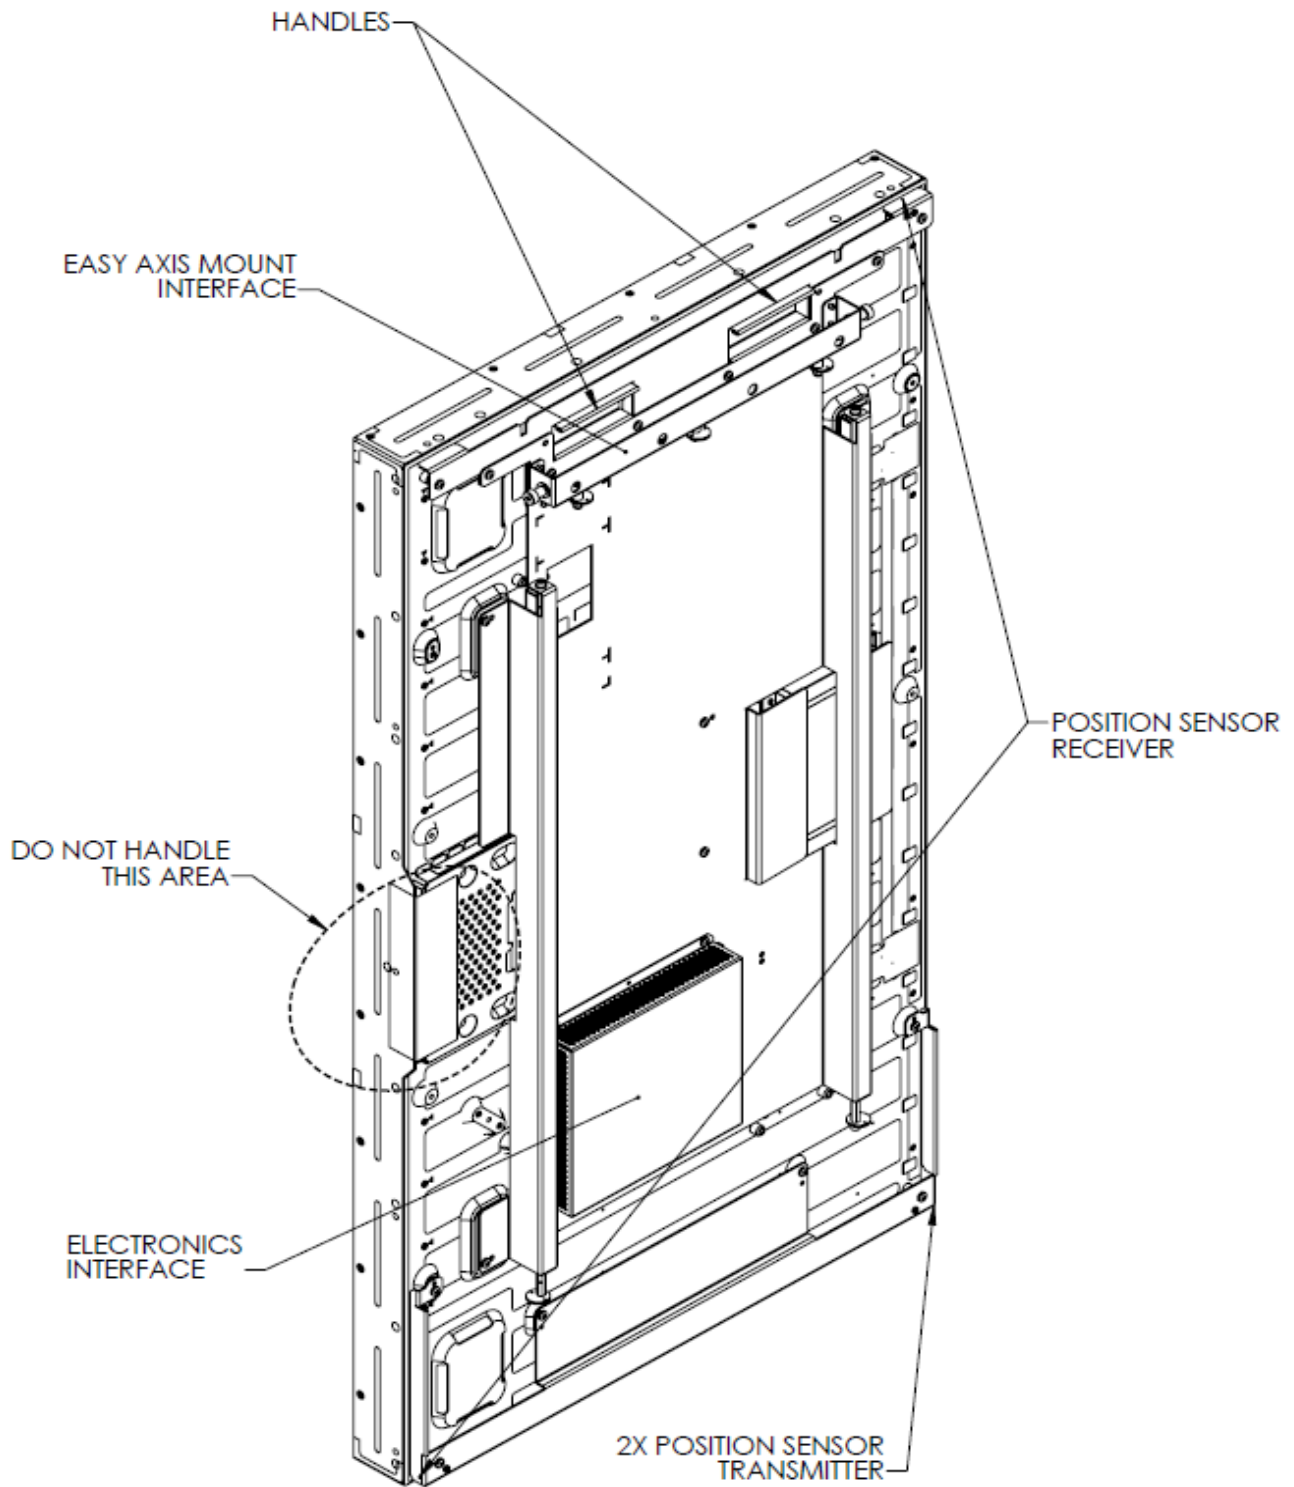


MX46HDS Side View – Portrait

WITHOUT MOUNT
STANDARD PANEL SHOWN





WITH MOUNT
ERO PANEL SHOWN

SERVICE MODE

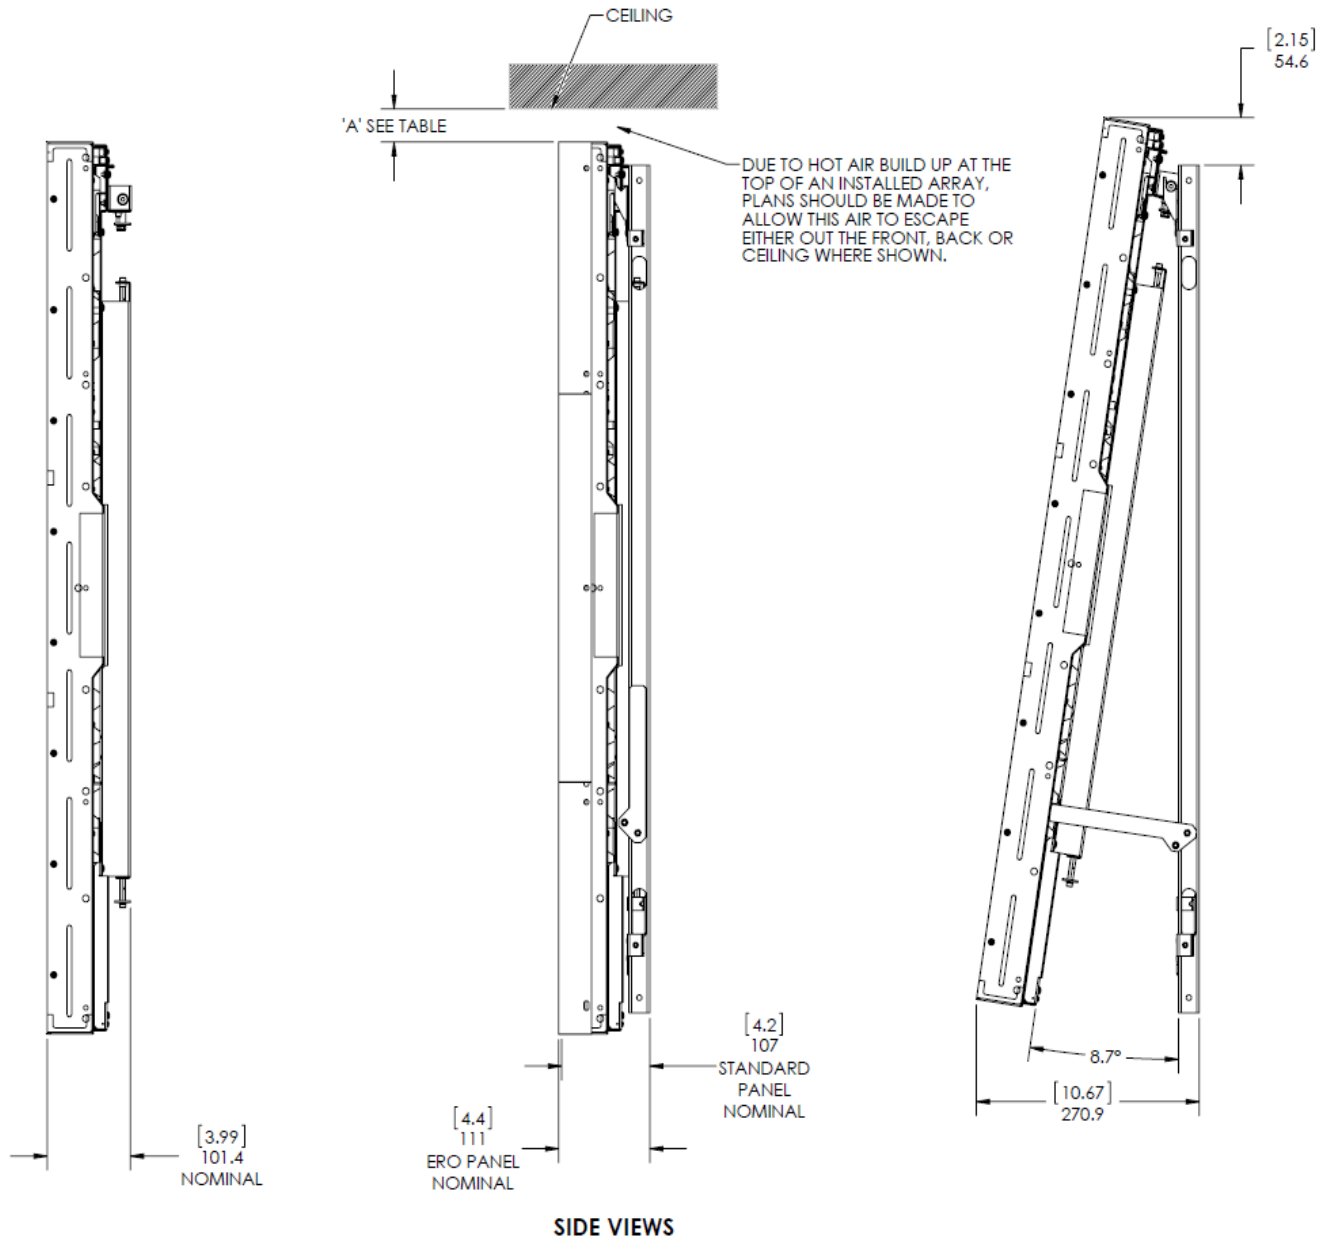


MX55HDS Dimensions – Landscape


MX55HDS Top, Front, and Bottom Views – Landscape

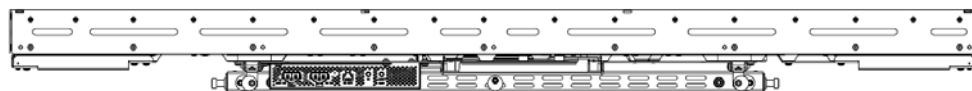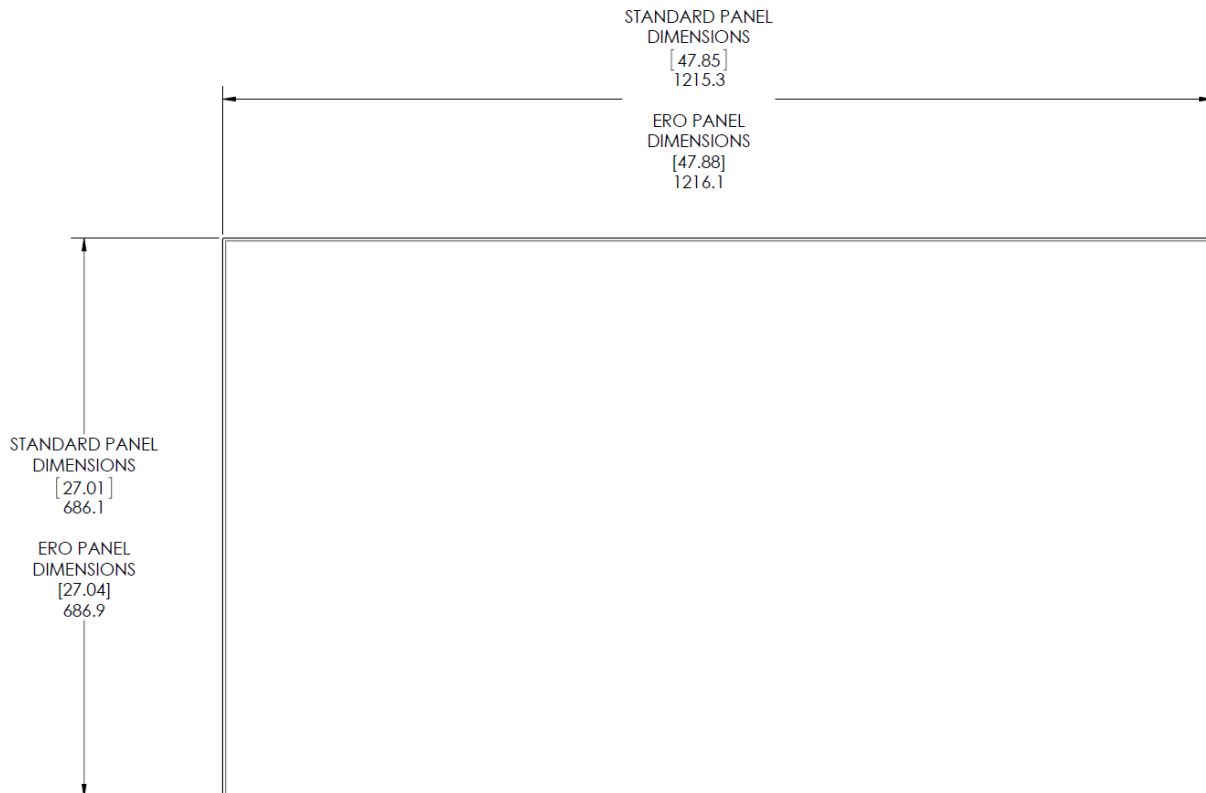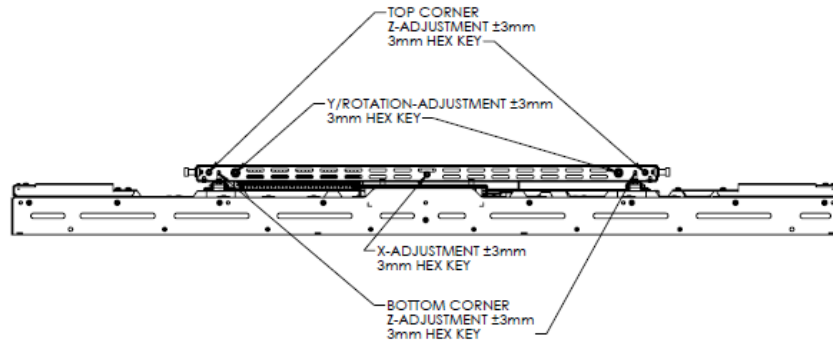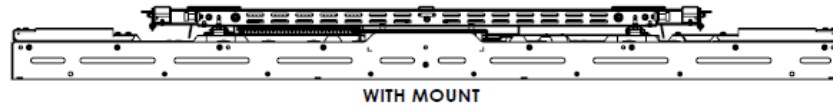

MX55HDS Rear View – Landscape

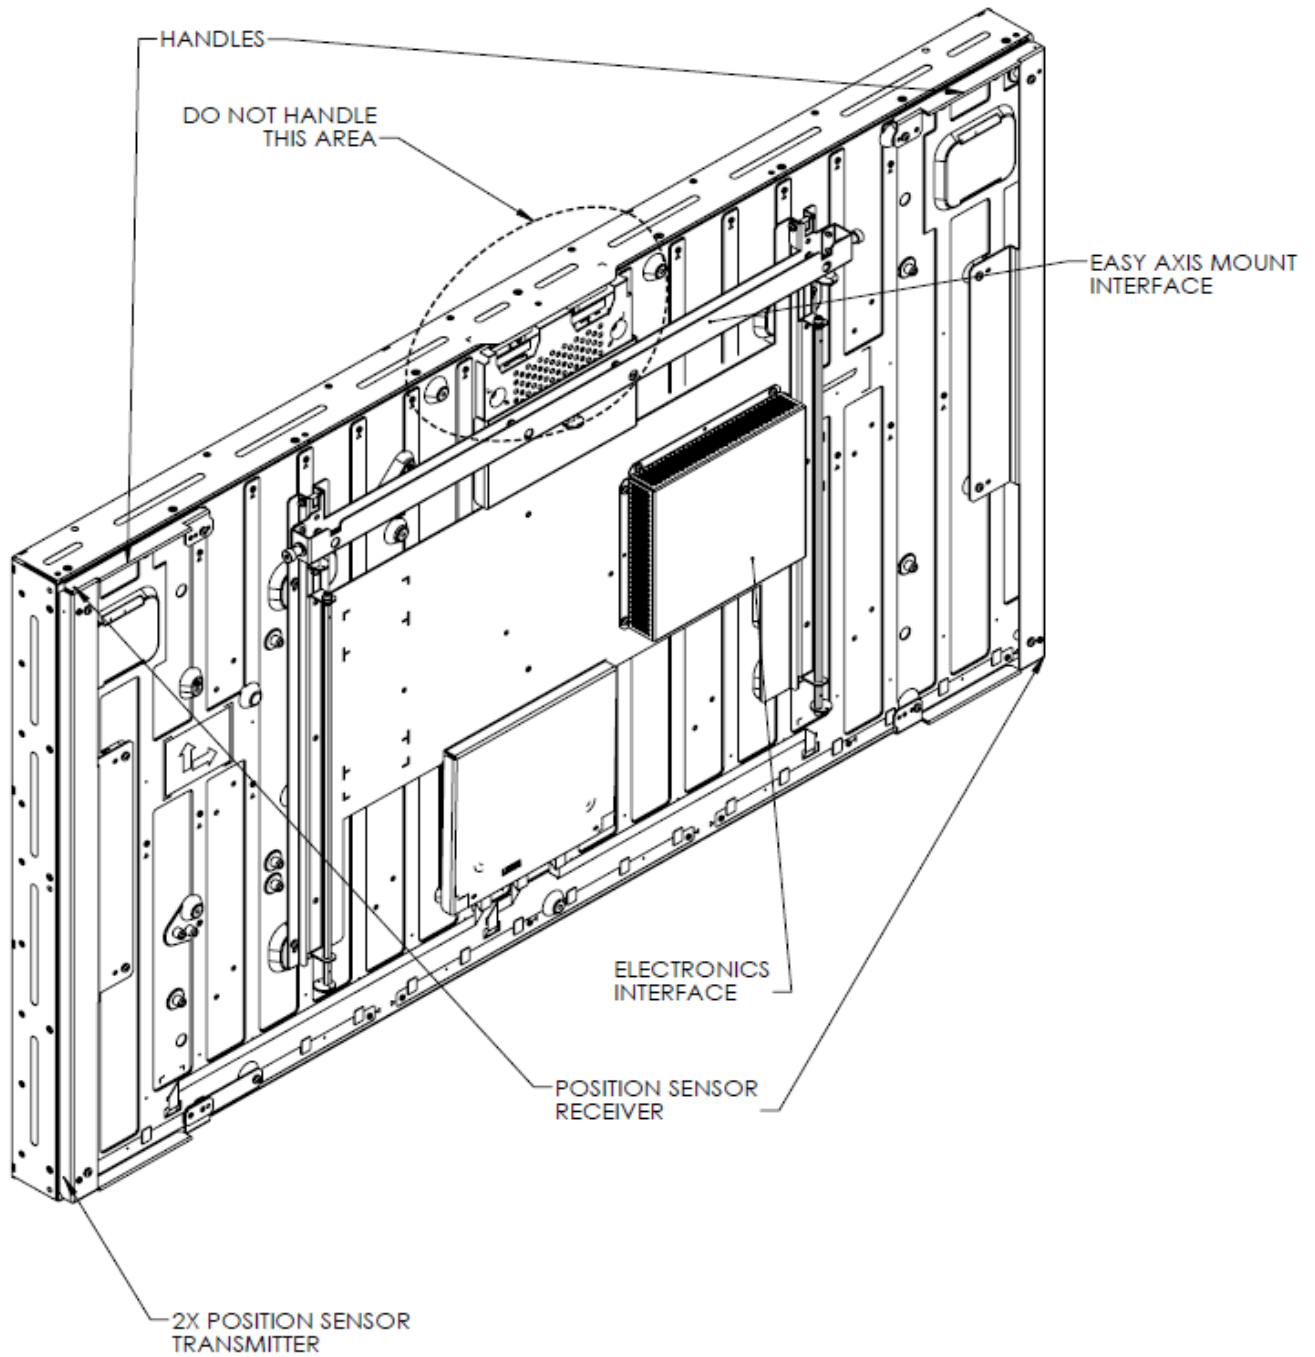


MX55HDS Side View – Landscape


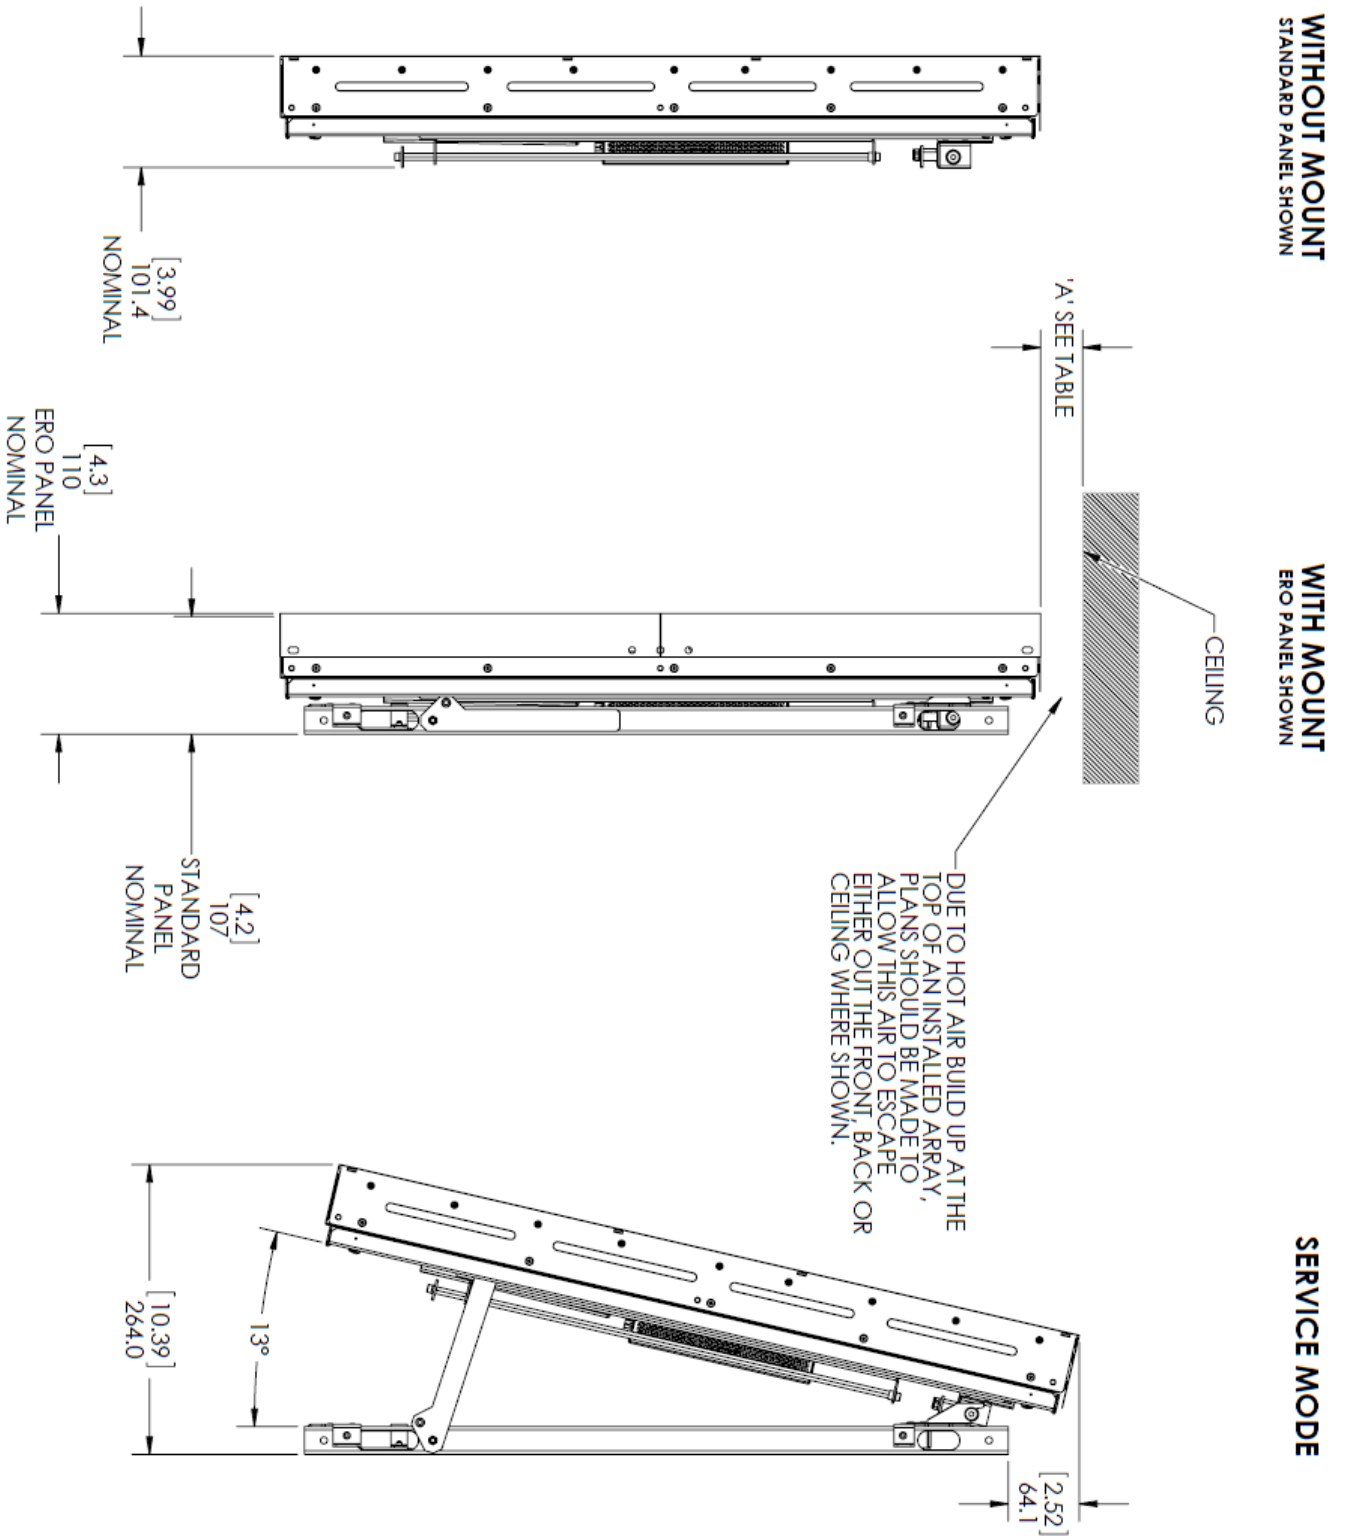


MX55HDS Dimensions – Portrait


MX55HDS Top and Bottom – Portrait

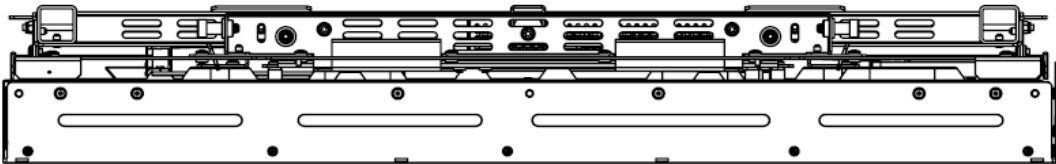


WITH MOUNT

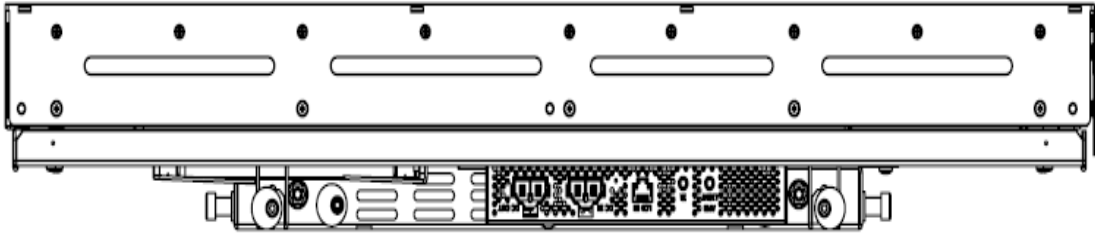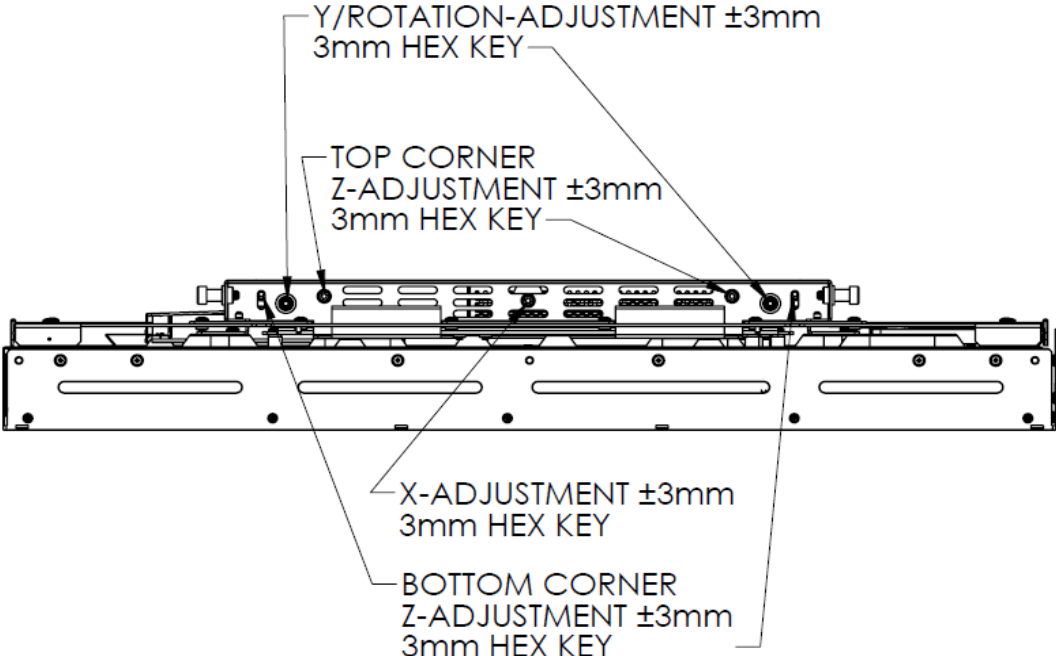


MX55HDS Front View – Portrait

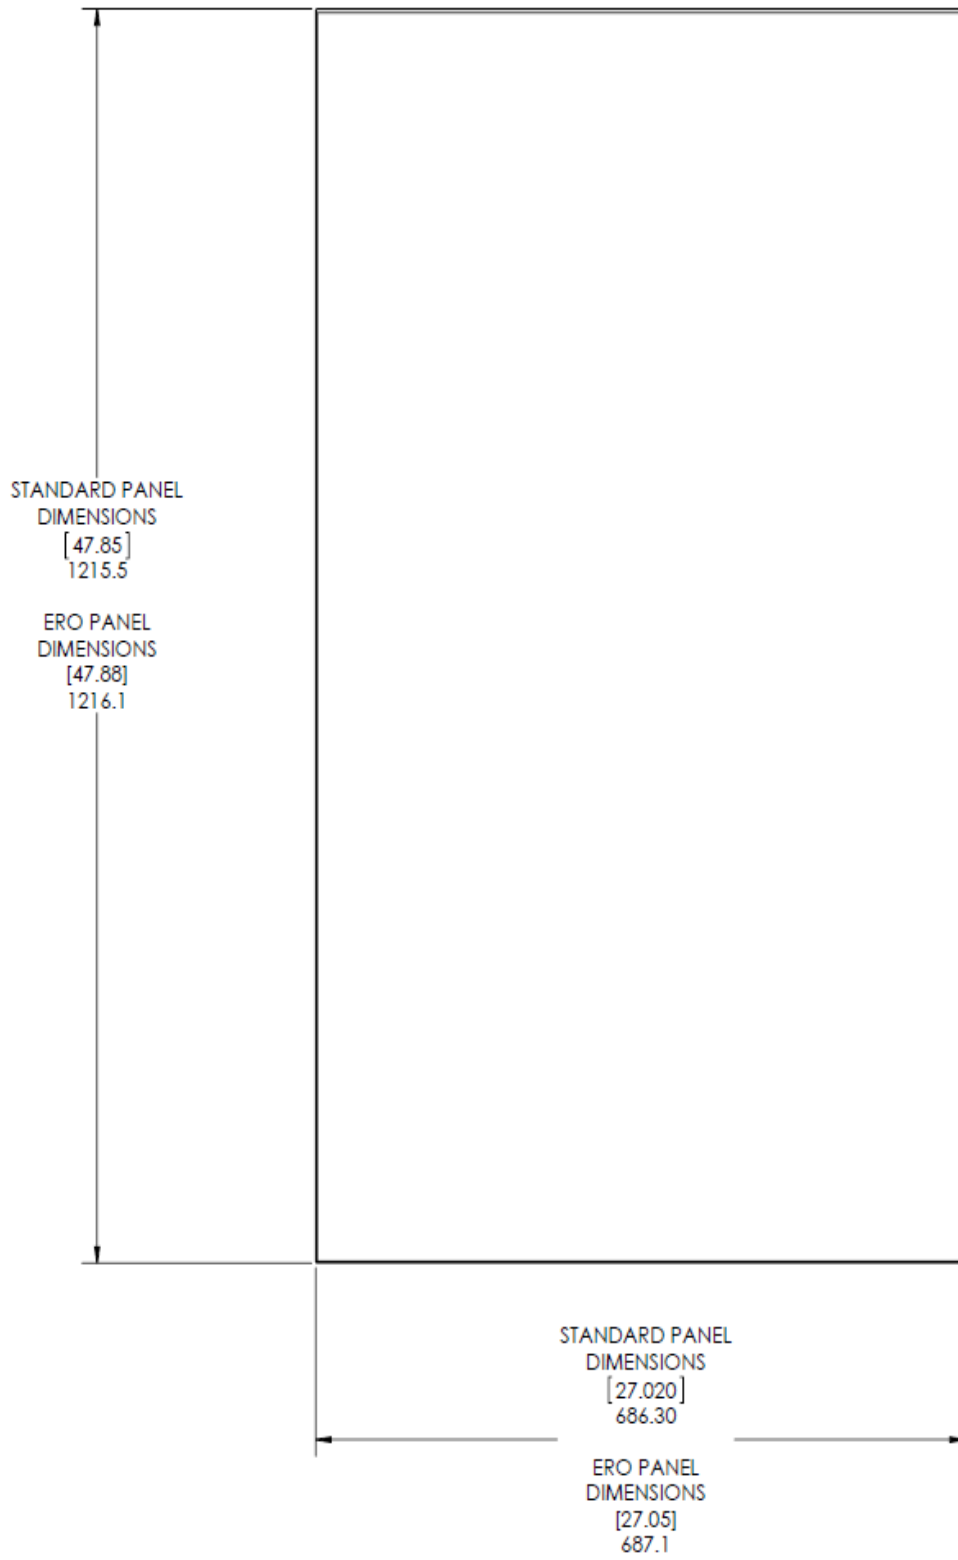

MX55HDS Rear View – Portrait

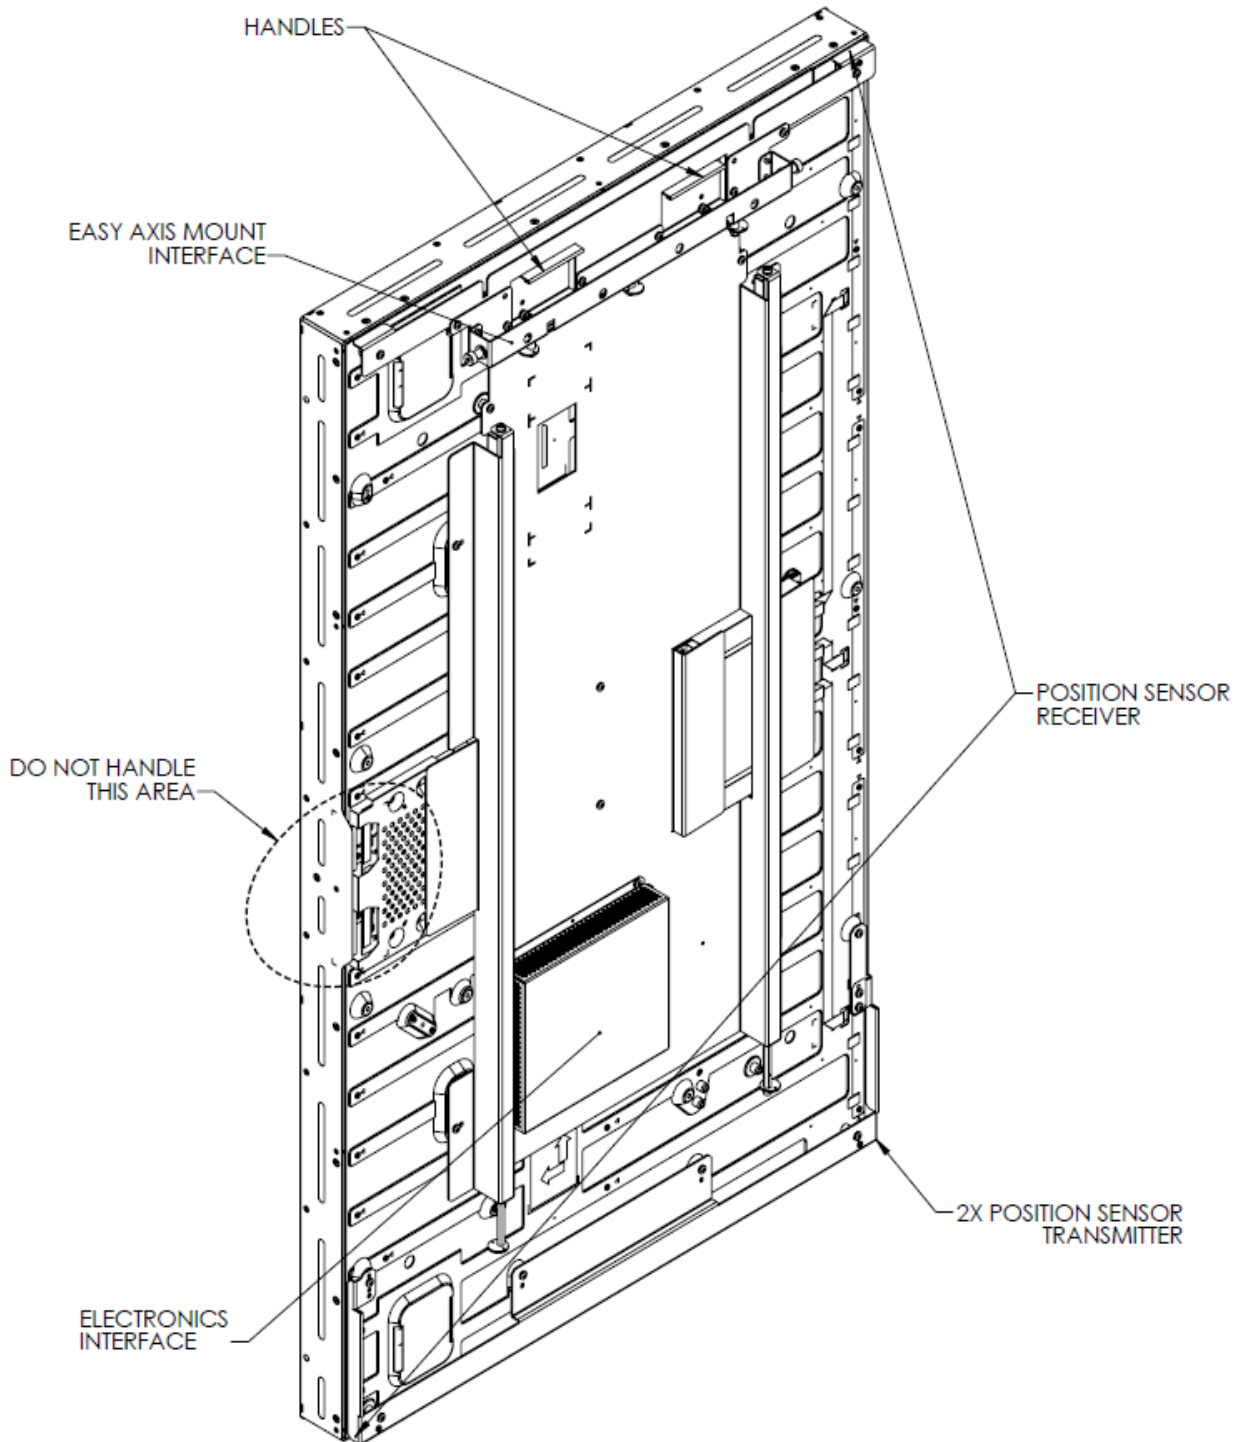


MX55HDS Side Views – Portrait

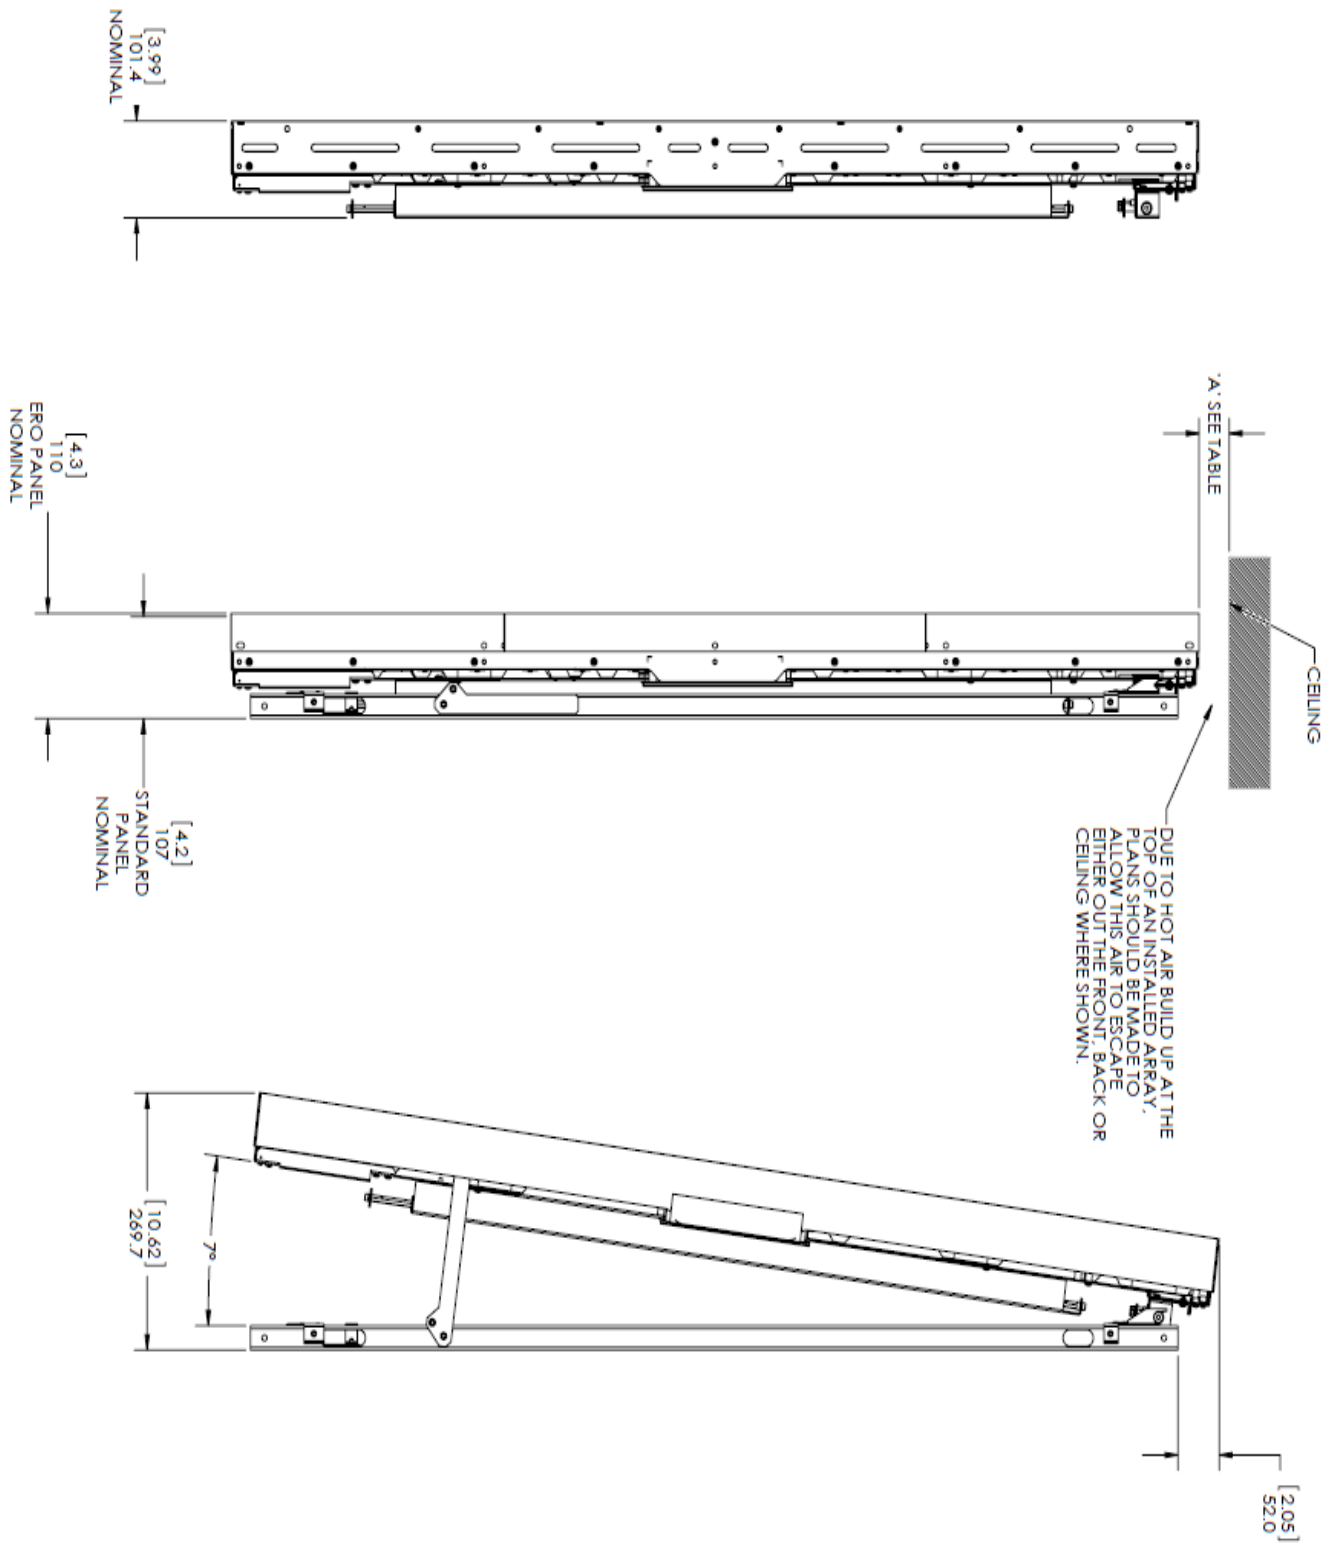


LX46HDS Dimensions – Landscape

LX46HDS Front, Top, and Bottom Views – Landscape

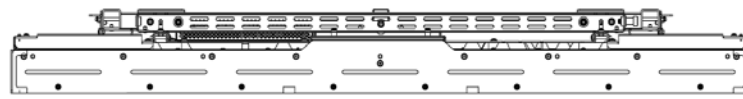

WITH MOUNT

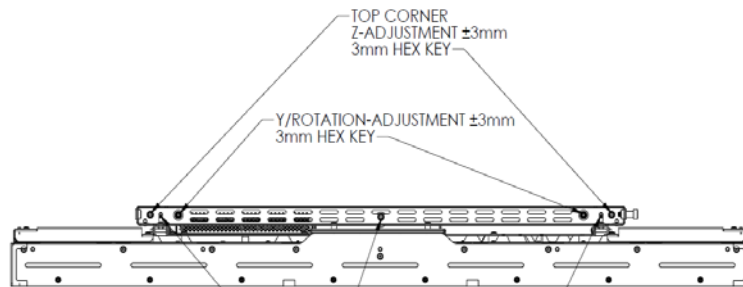

TOP CORNER
Z-ADJUSTMENT $\pm 3\text{mm}$
3mm HEX KEY

Y/ROTATION-ADJUSTMENT $\pm 3\text{mm}$
3mm HEX KEY

X-ADJUSTMENT $\pm 3\text{mm}$
3mm HEX KEY

BOTTOM CORNER
Z-ADJUSTMENT $\pm 3\text{mm}$
3mm HEX KEY

TOP VIEW

STANDARD PANEL
DIMENSIONS

[40.31]
1024.0

ERO PANEL
DIMENSIONS

[40.35]
1024.8


STANDARD PANEL
DIMENSIONS
[22.78]
578.6

ERO PANEL
DIMENSIONS
[22.81]
579.4




BOTTOM VIEW

LX46HDS Rear View – Landscape

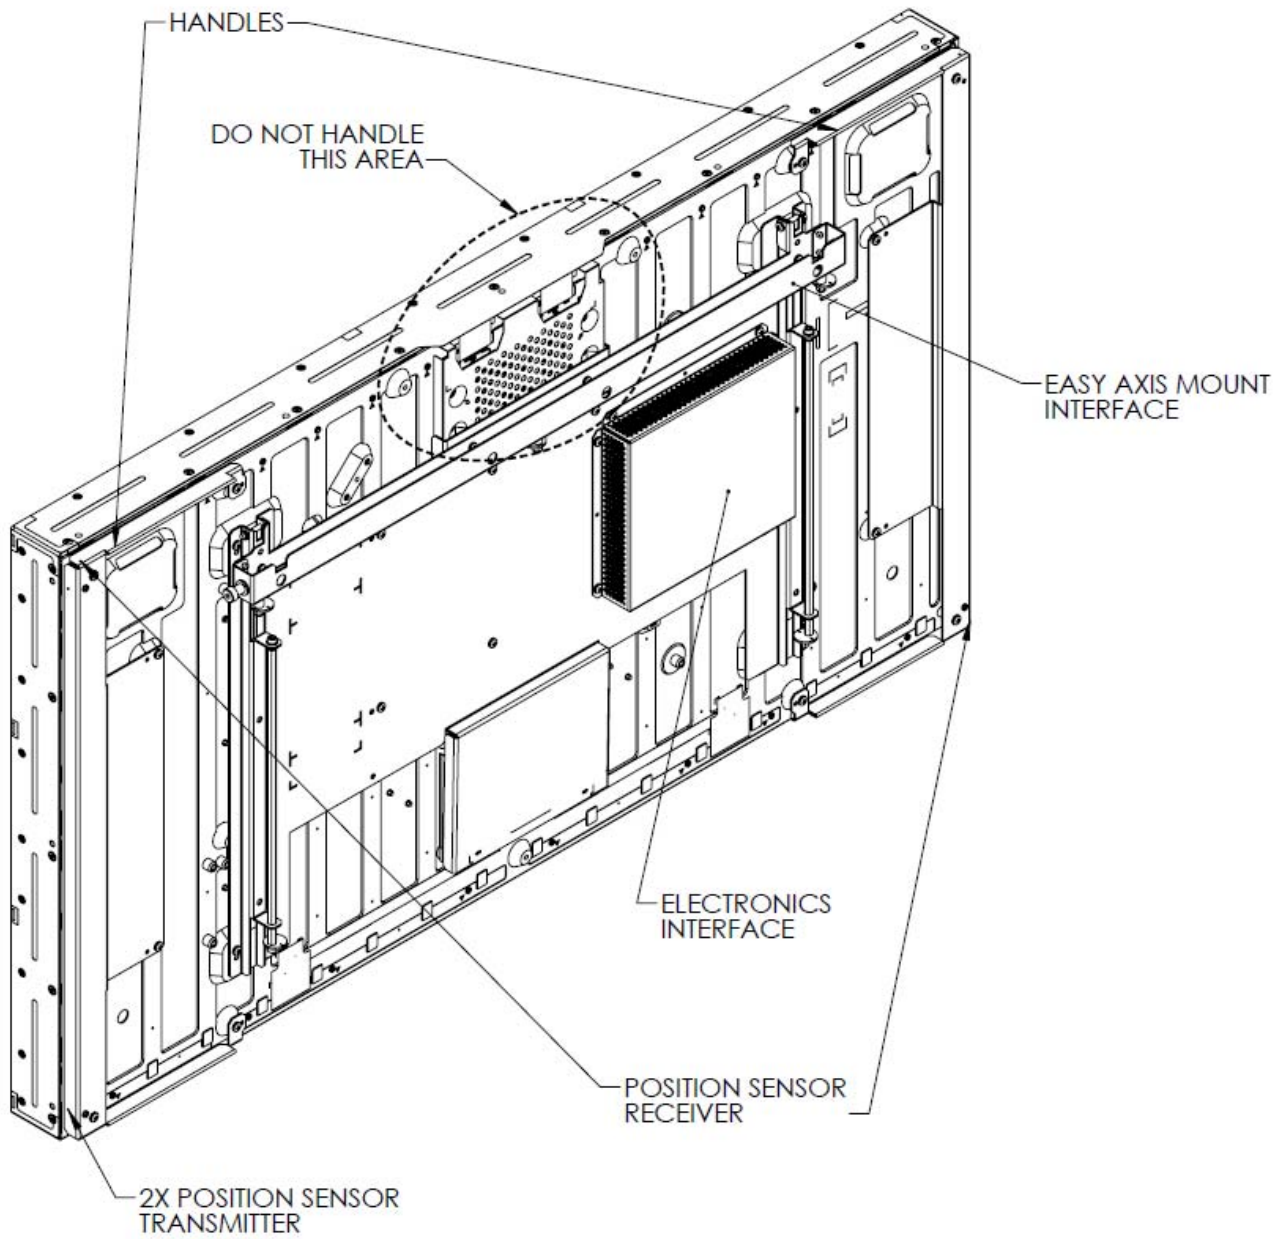


LX46HDS Side Views – Landscape

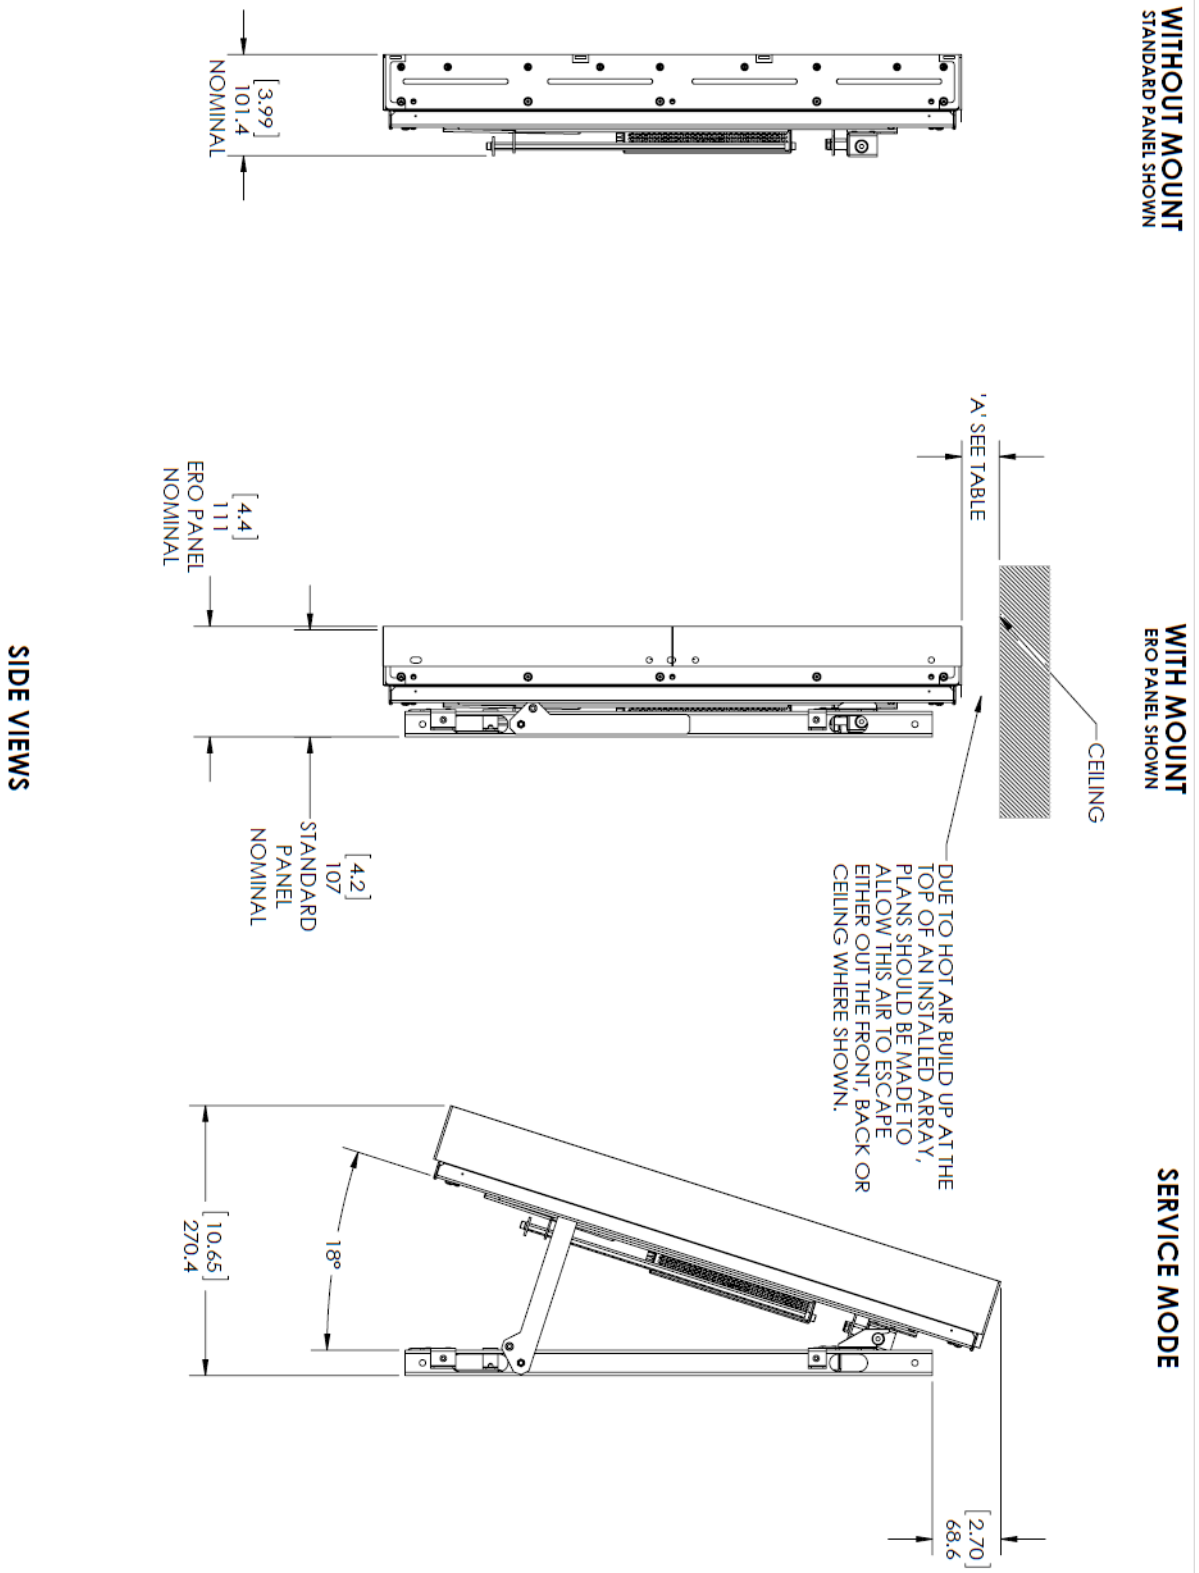


LX46HDS Dimensions – Portrait

LX46HDS Front and Side Views – Portrait

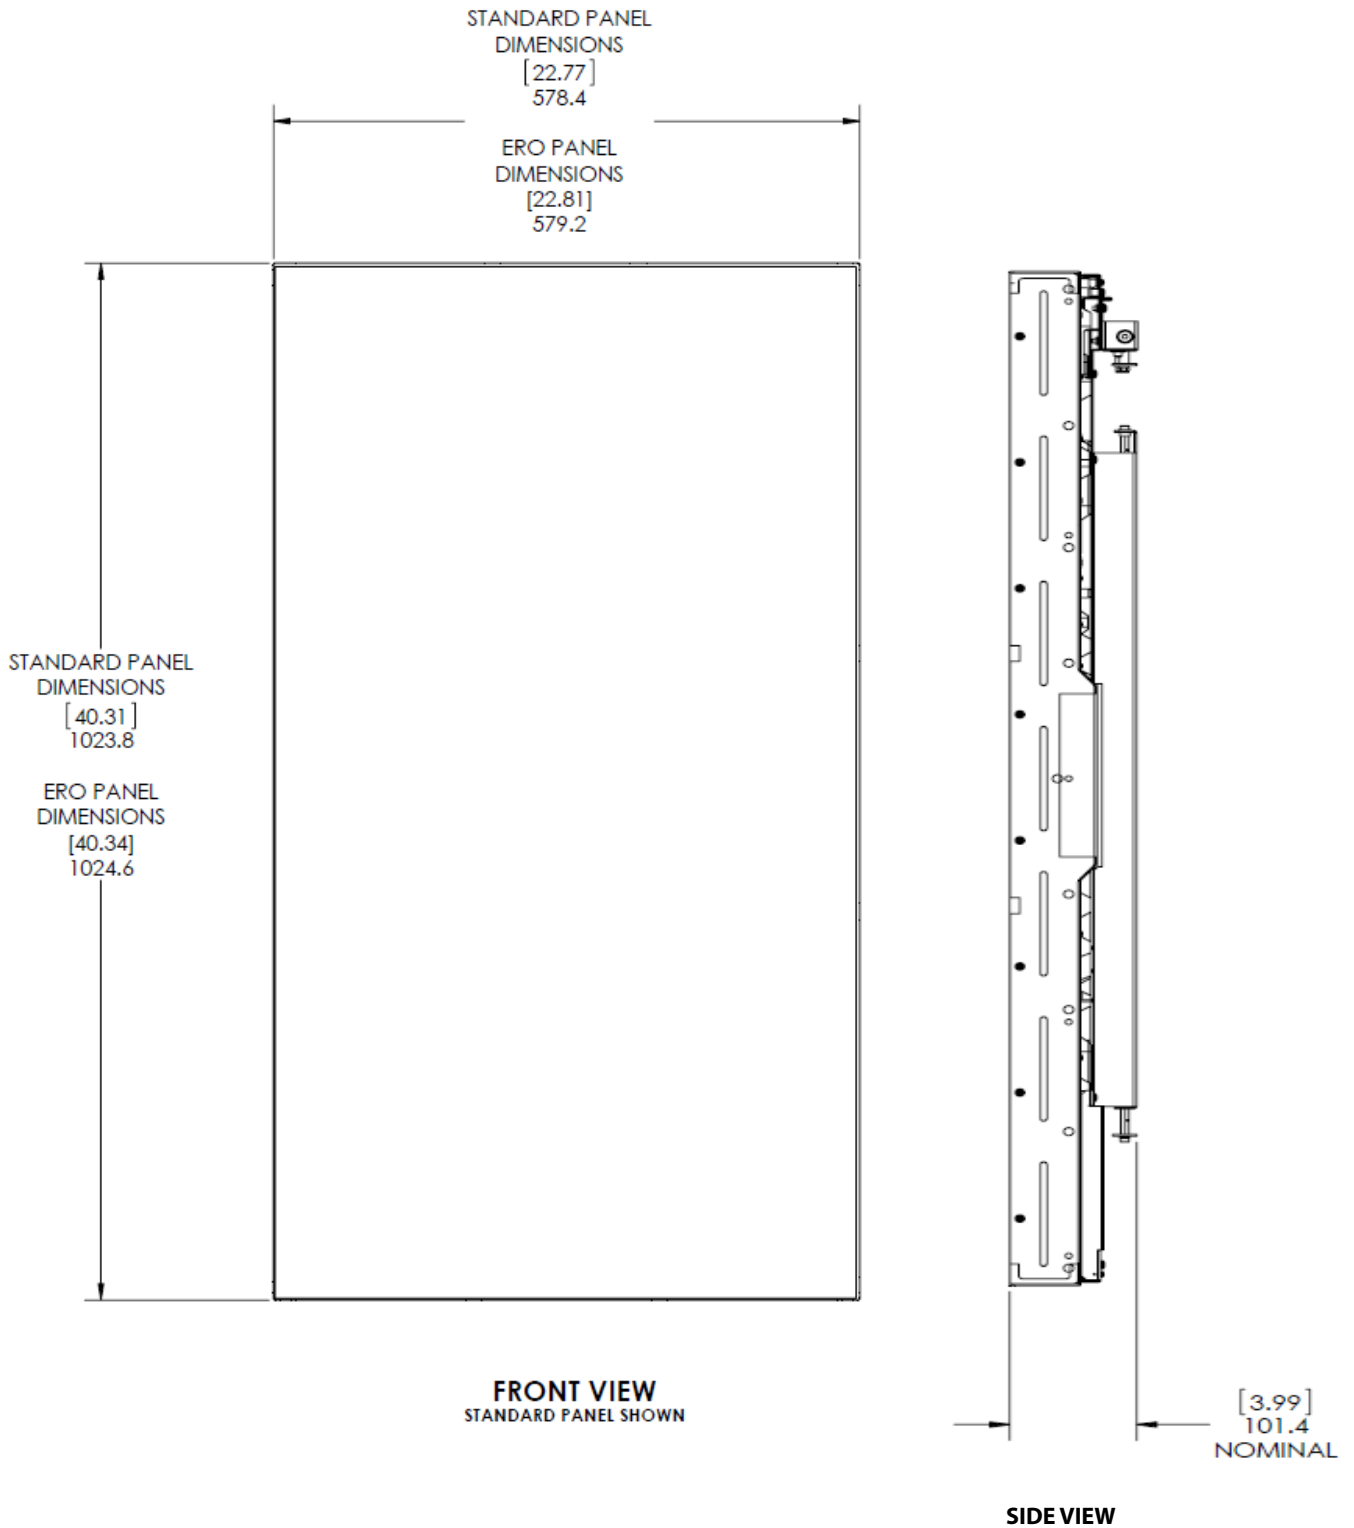


LX46HDS Rear View – Portrait

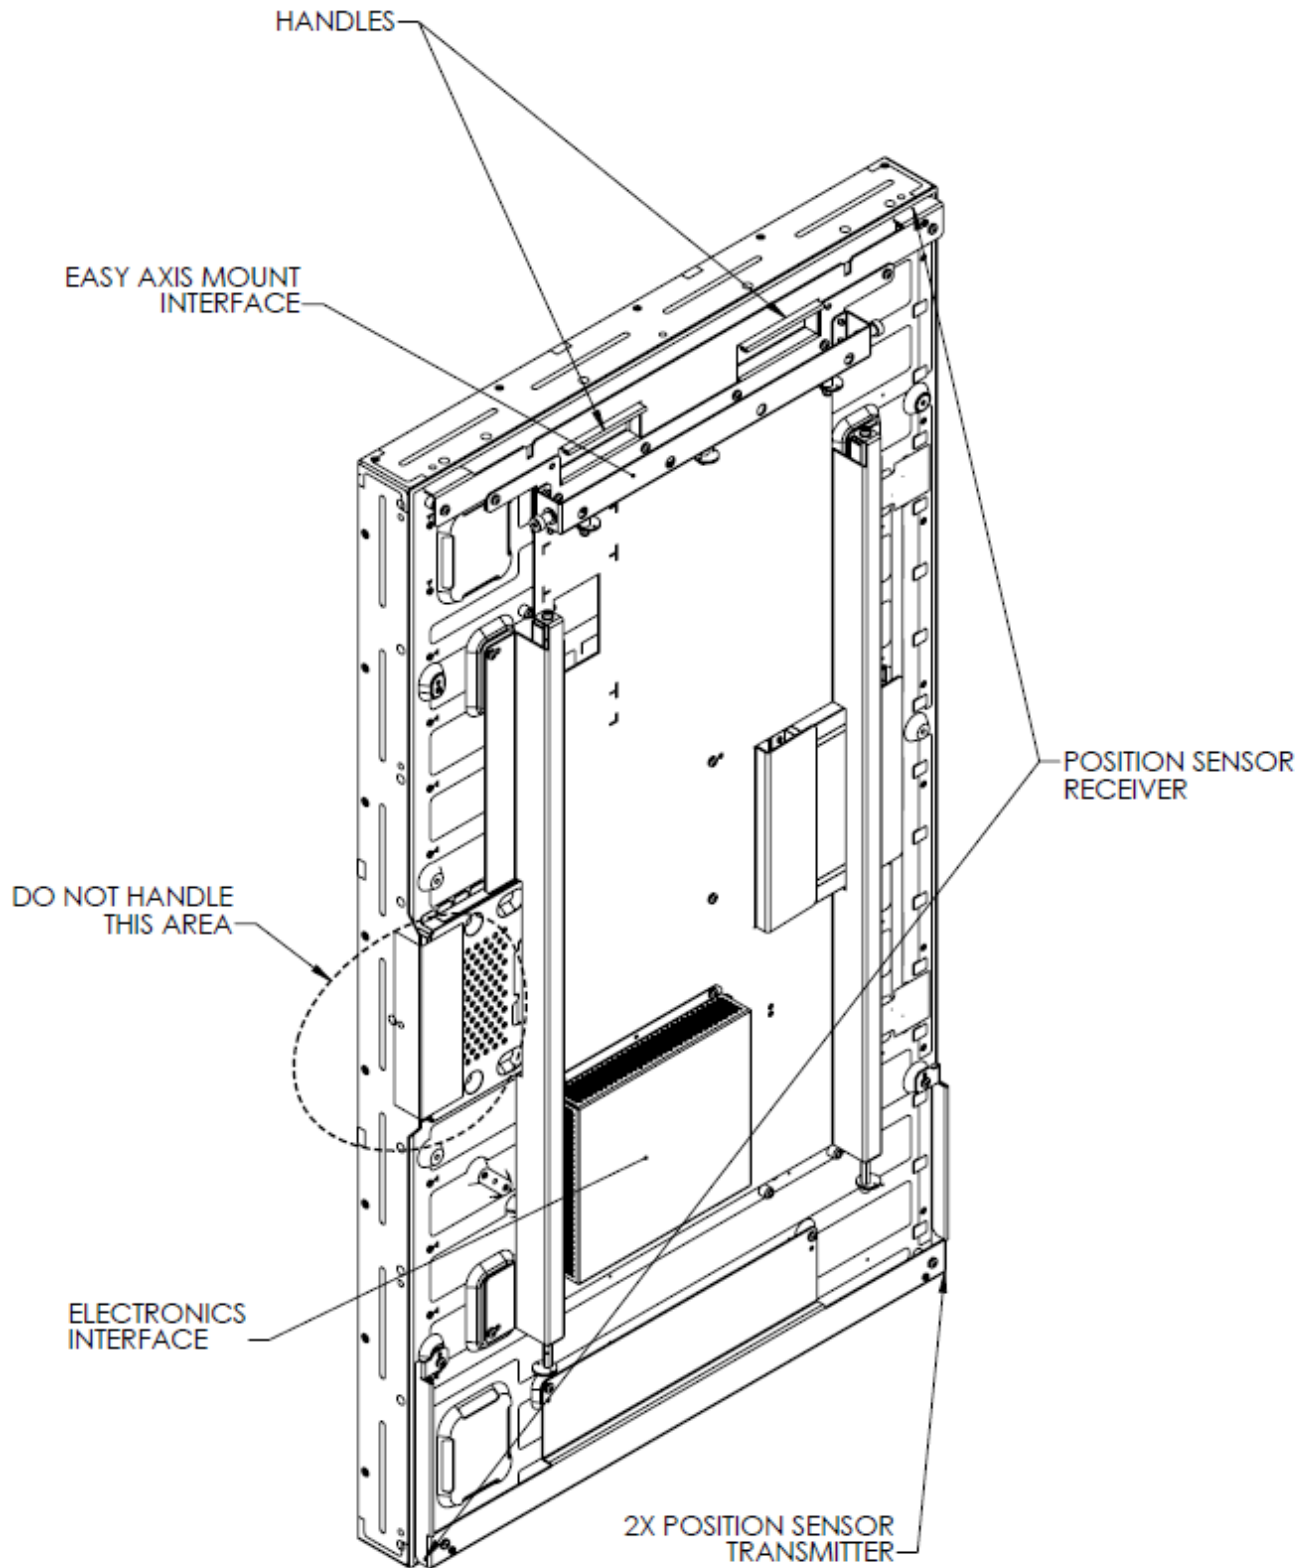


LX46HDS Side View – Portrait


WITHOUT MOUNT
STANDARD PANEL SHOWN

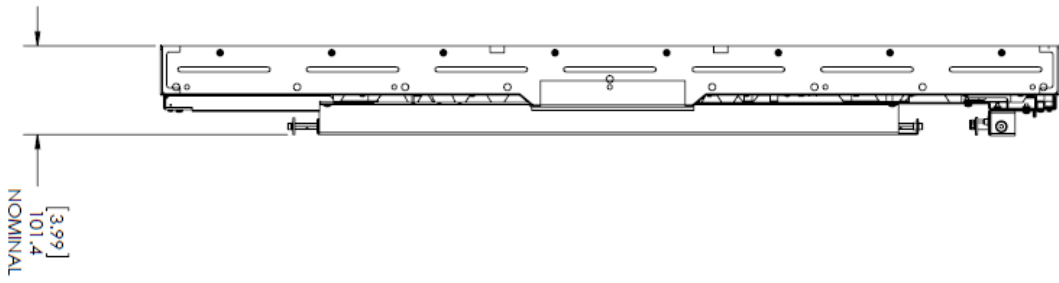

WITH MOUNT
ERO PANEL SHOWN

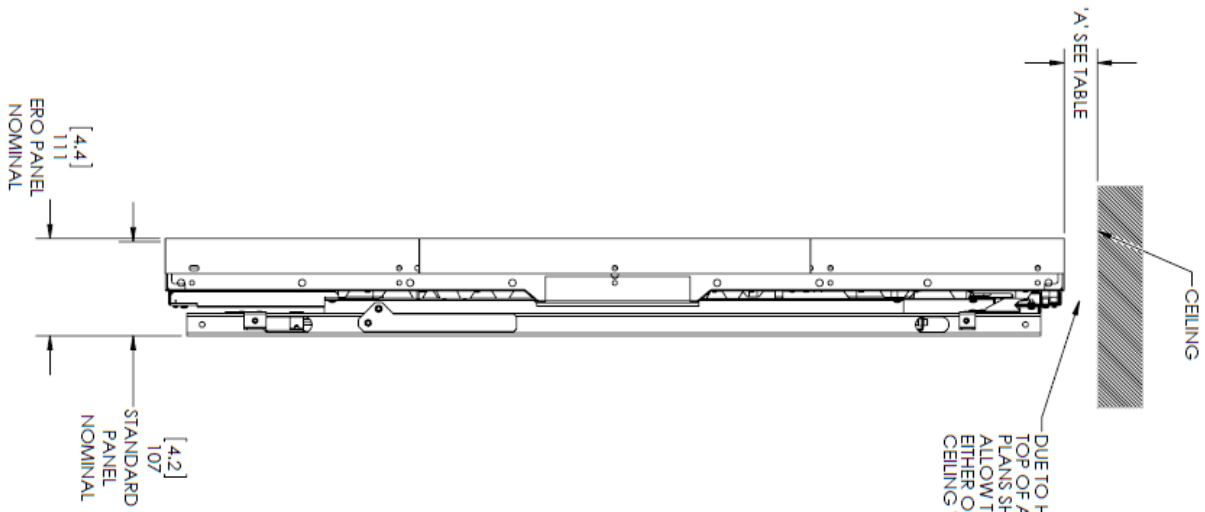



SERVICE MODE

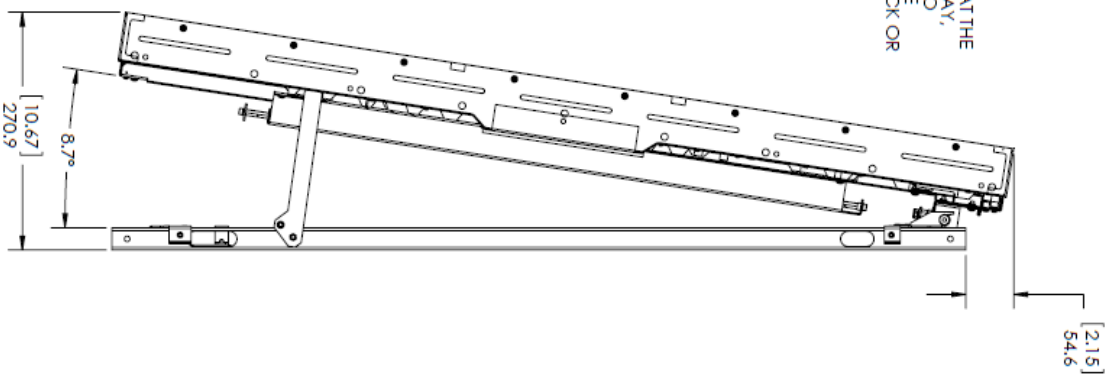

SIDE VIEWS

LX55HDS Dimensions – Landscape

LX55HDS Front, Top, and Bottom Views – Landscape

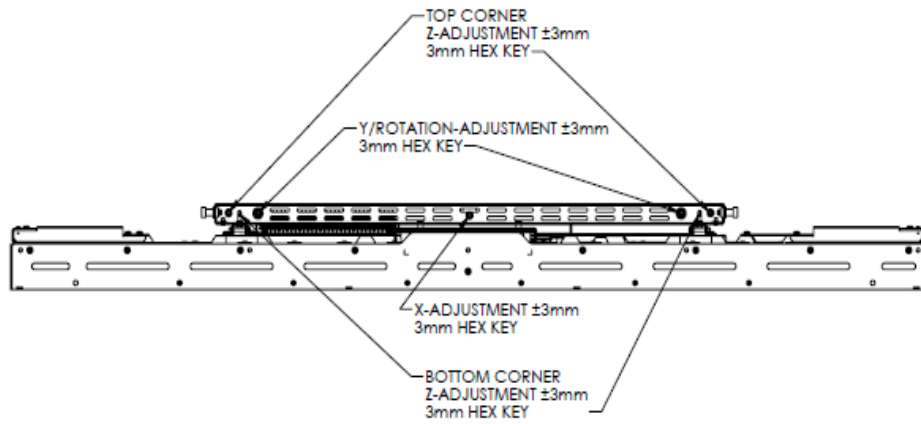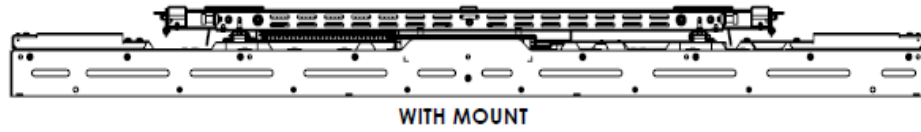


TOP VIEW

STANDARD PANEL
DIMENSIONS
[47.85]
1215.3

ERO PANEL
DIMENSIONS
[47.88]
1216.1


STANDARD PANEL
DIMENSIONS
[27.01]
686.1

ERO PANEL
DIMENSIONS
[27.04]
686.9

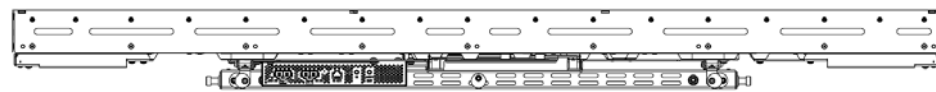


BOTTOM VIEW

LX55HDS Rear View – Landscape

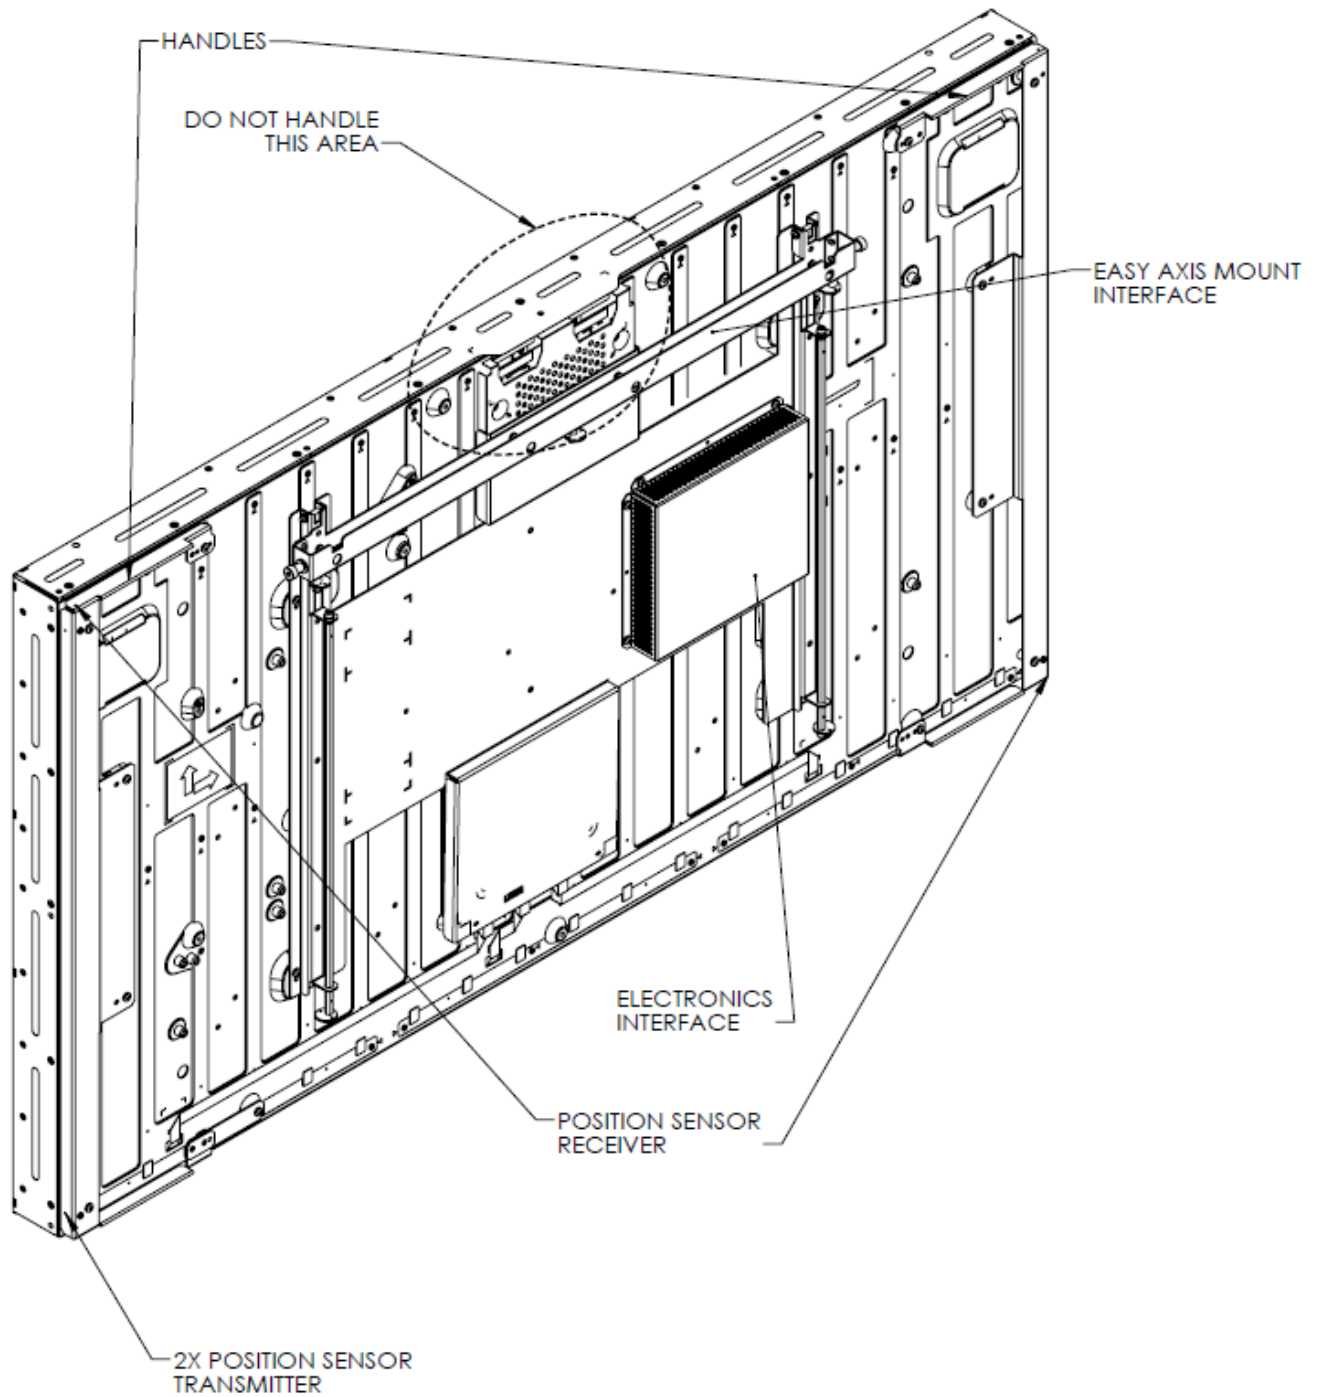


LX55HDS Side View – Landscape

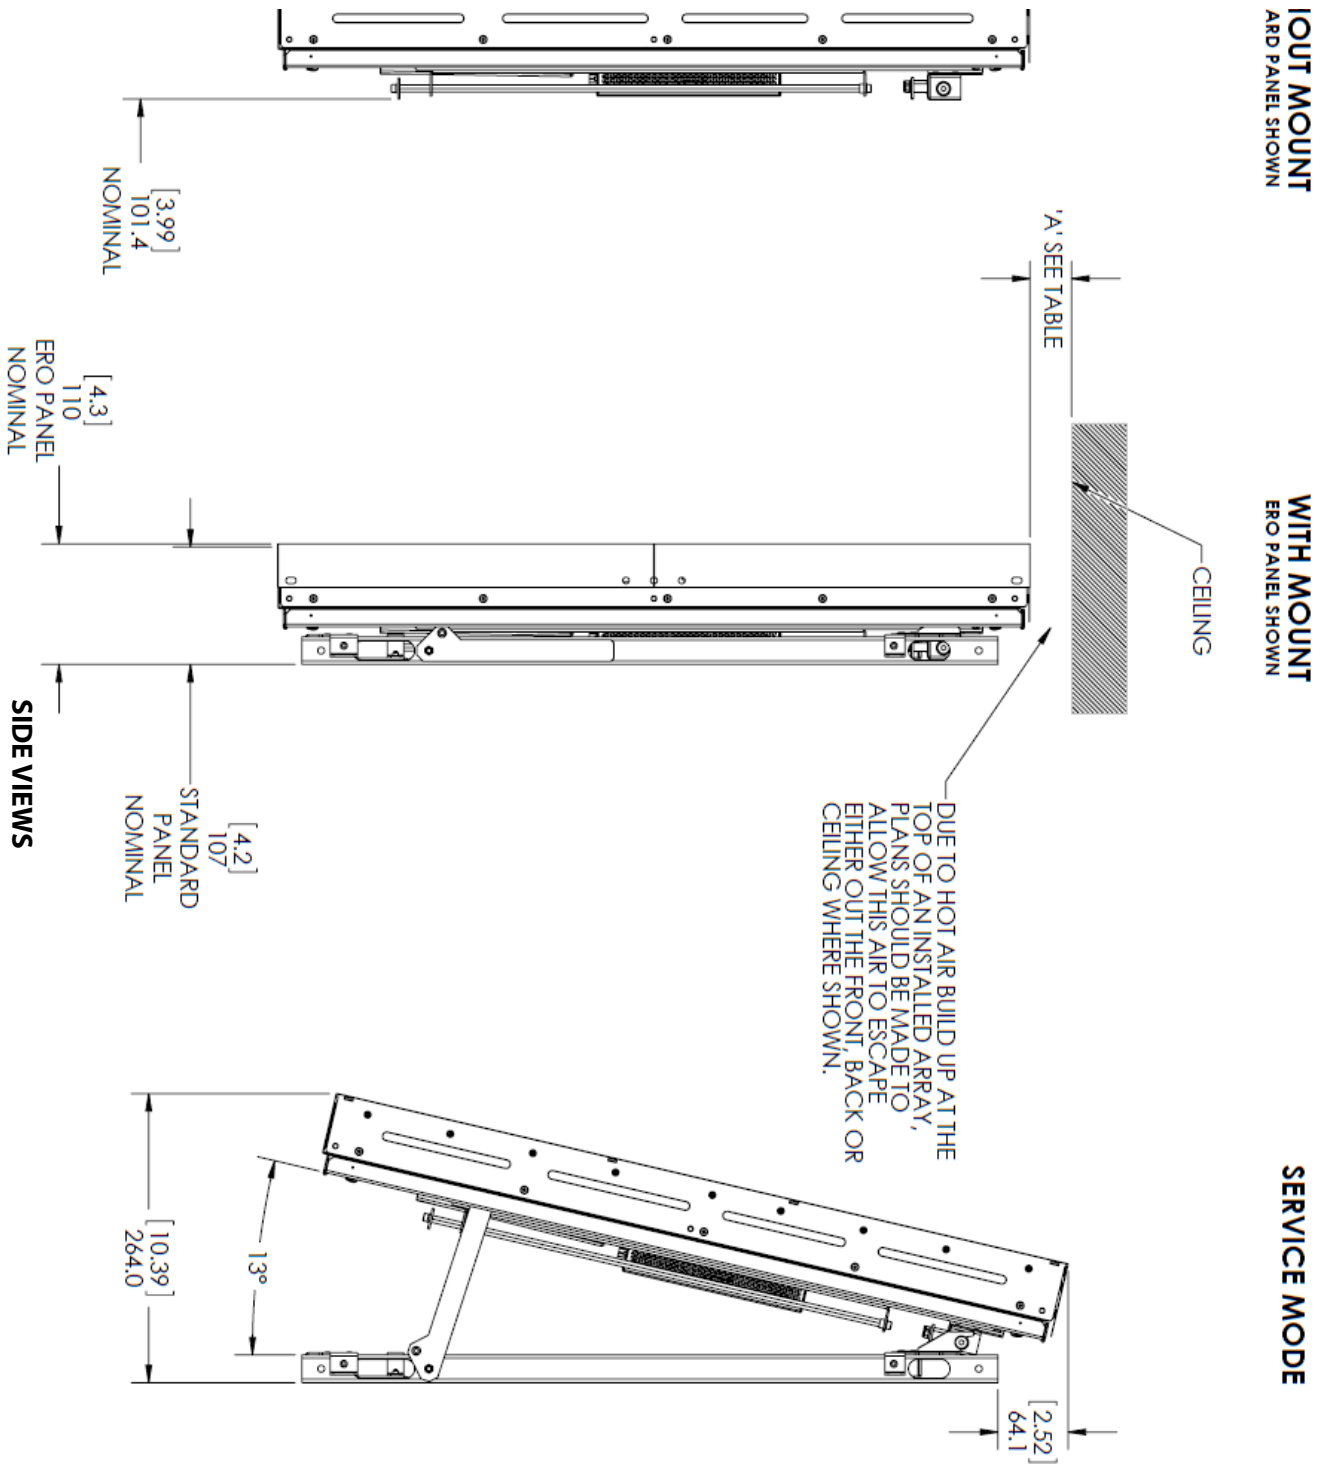


LX55HDS Dimensions – Portrait

LX55HDS Front View – Portrait

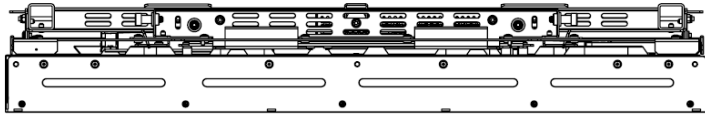

WITH MOUNT

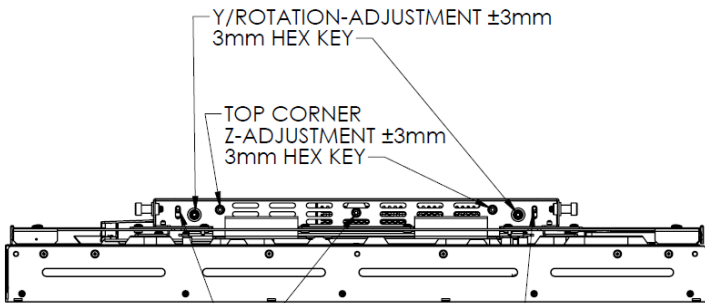

Y/ROTATION-ADJUSTMENT ±3mm
3mm HEX KEY

TOP CORNER
Z-ADJUSTMENT ±3mm
3mm HEX KEY

X-ADJUSTMENT ±3mm
3mm HEX KEY


BOTTOM CORNER
Z-ADJUSTMENT ±3mm
3mm HEX KEY

TOP VIEW

STANDARD PANEL
DIMENSIONS
[47.85]
1215.5

ERO PANEL
DIMENSIONS
[47.88]
1216.1


BOTTOM VIEW

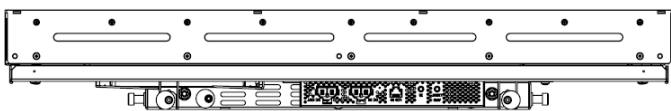


STANDARD PANEL
DIMENSIONS
[27.020]
686.30

ERO PANEL
DIMENSIONS
[27.05]
687.1

LX55HDS Rear View – Portrait

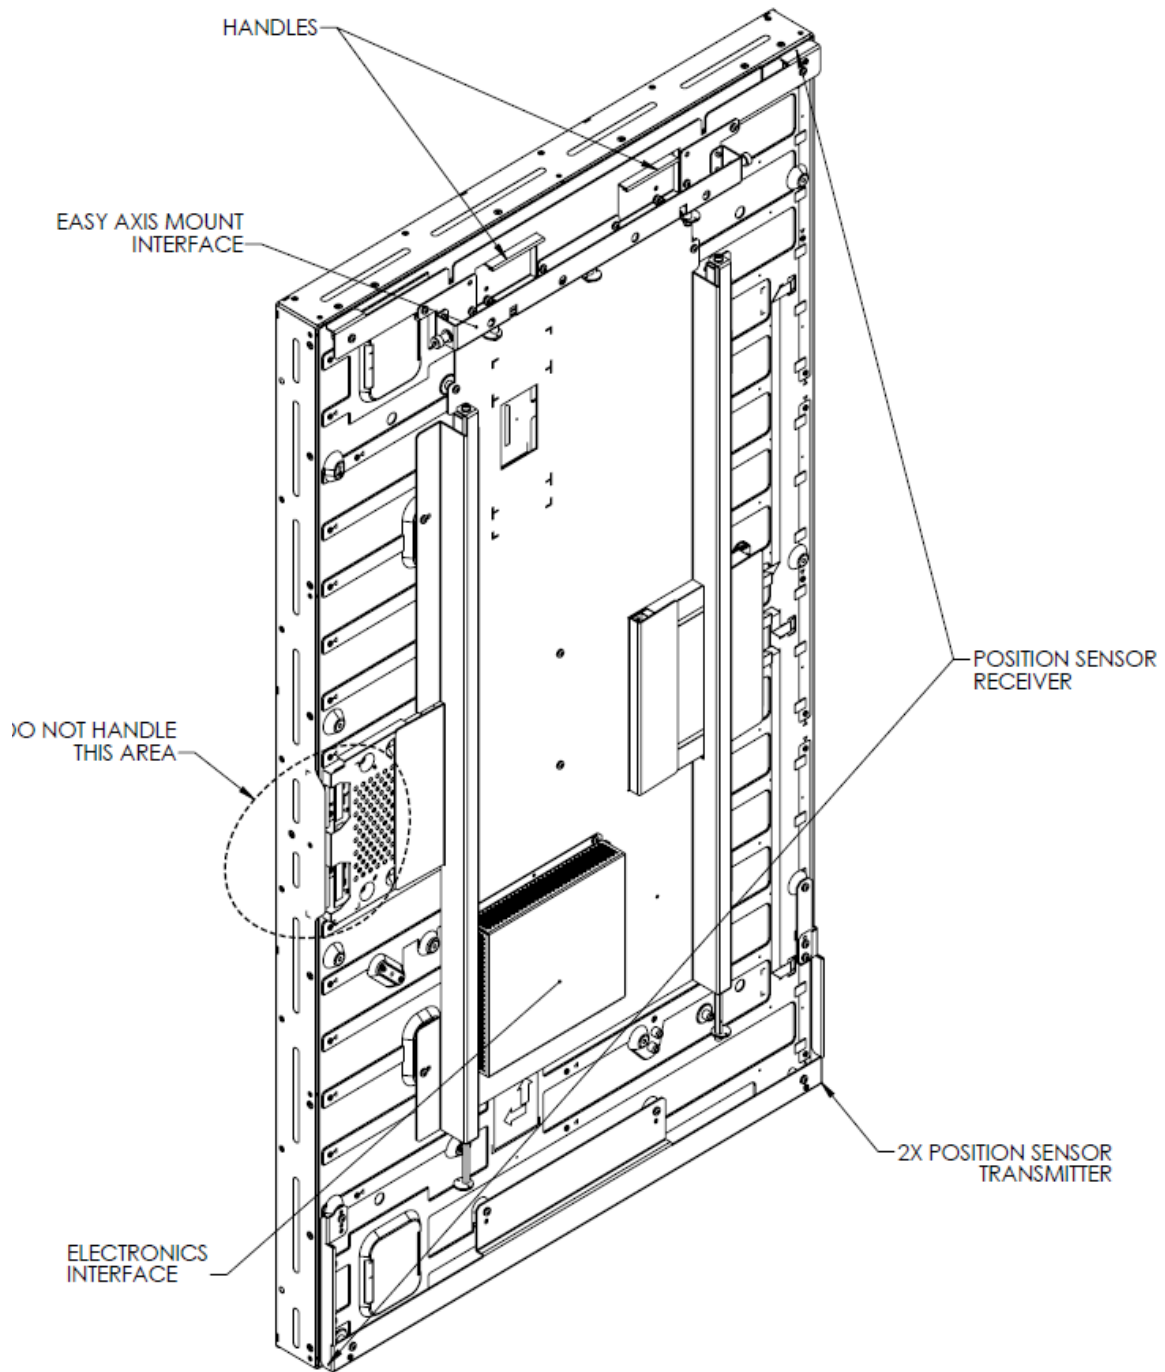


LX55HDS Side View – Portrait

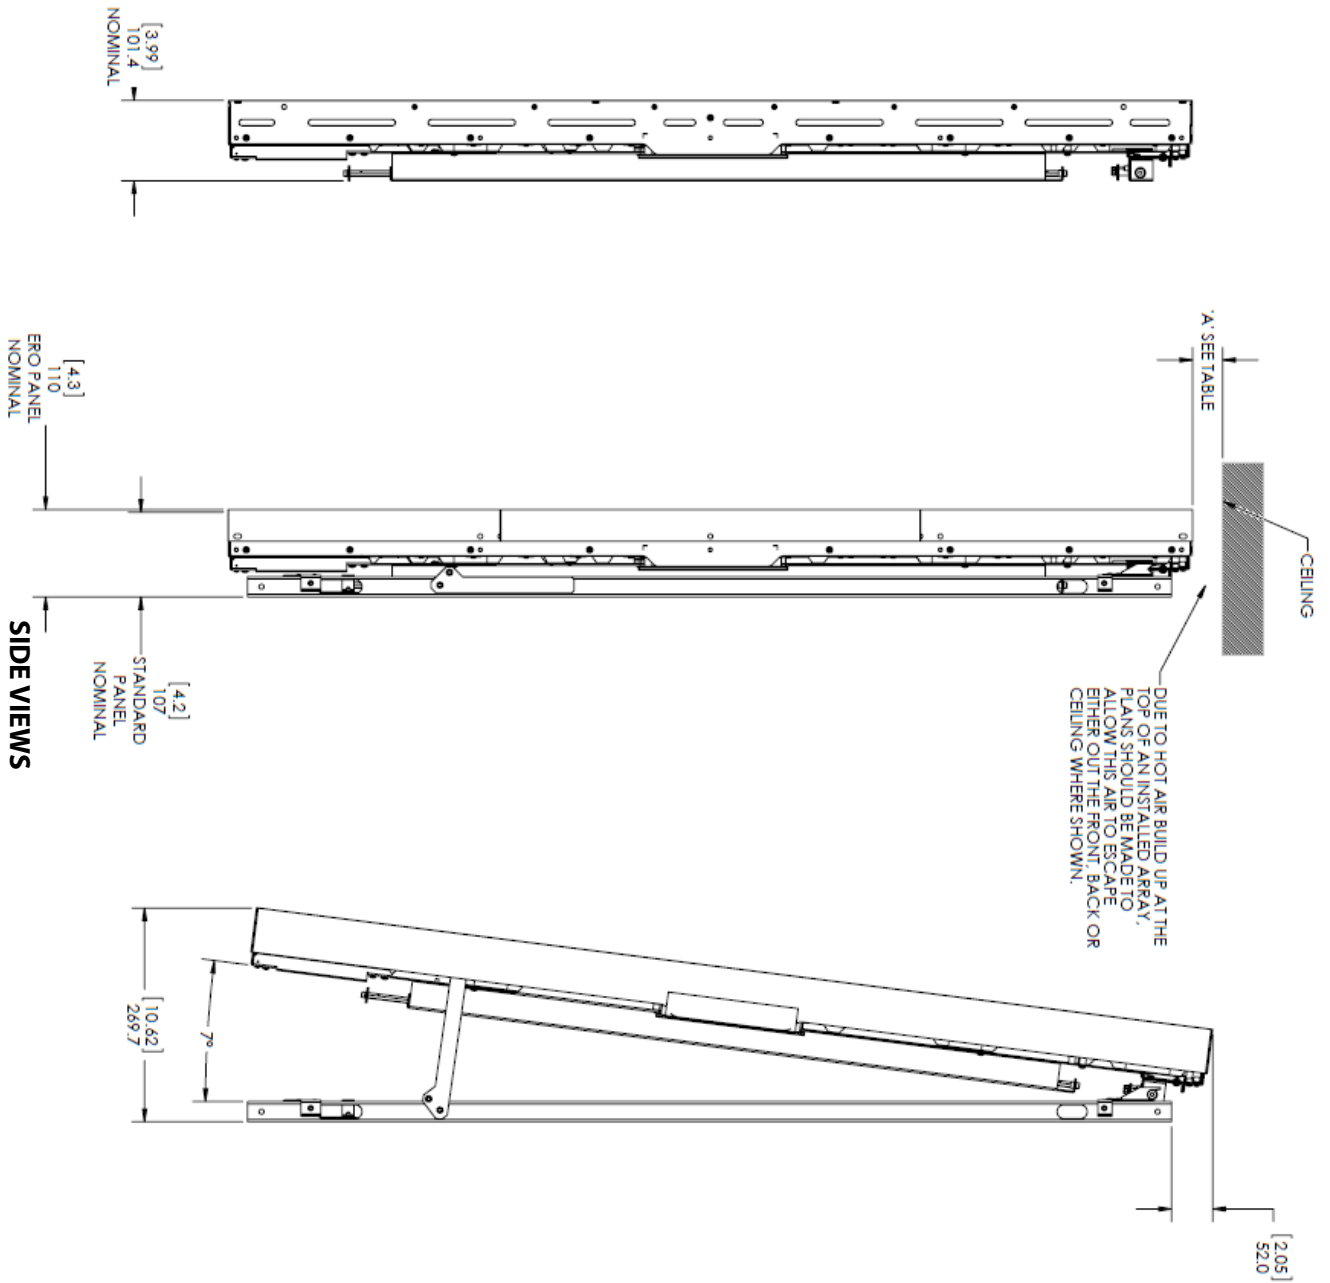


LX46S-3D Dimensions Landscape (only)

Note: LX46S-3D is mounted in landscape orientation only.



LX46S-3D Front, Top, and Bottom Views

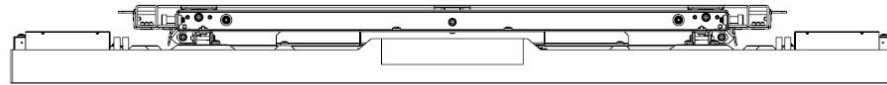

WITH MOUNT

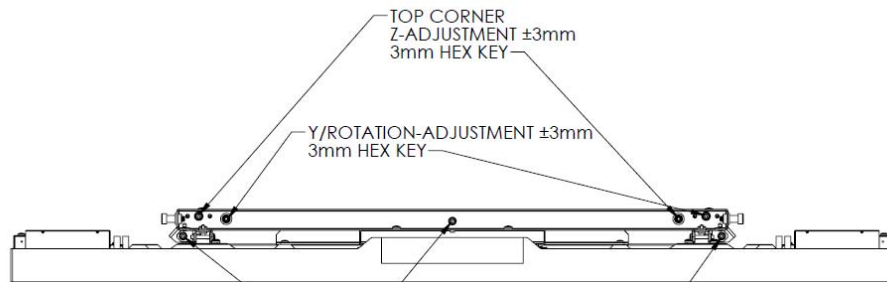


TOP VIEW

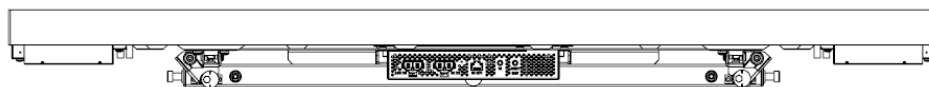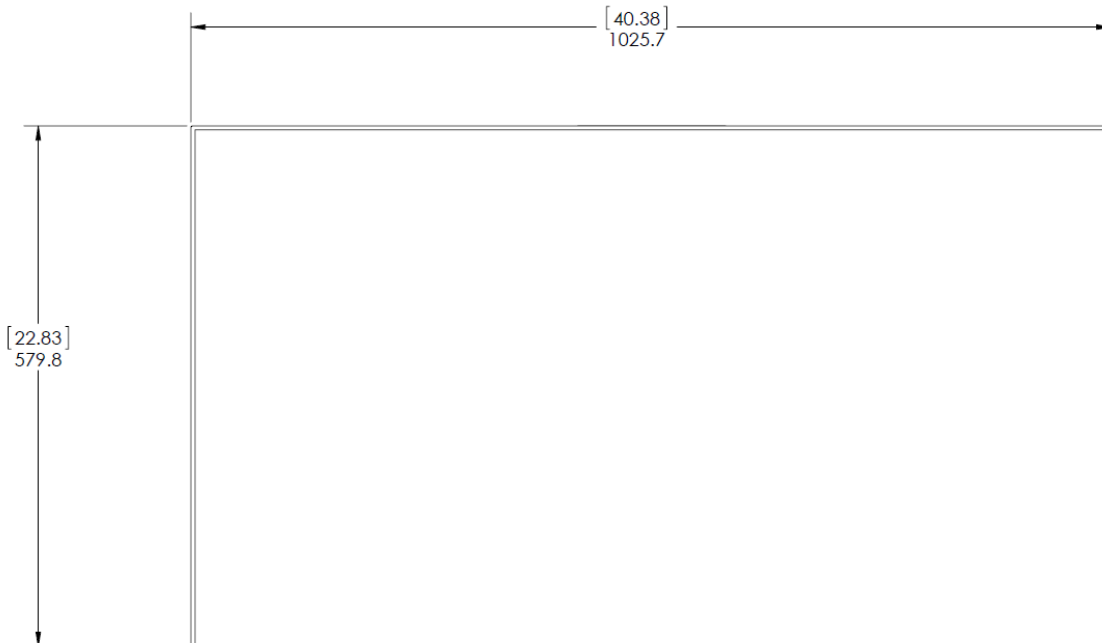


BOTTOM VIEW

LX46S-3D Rear View

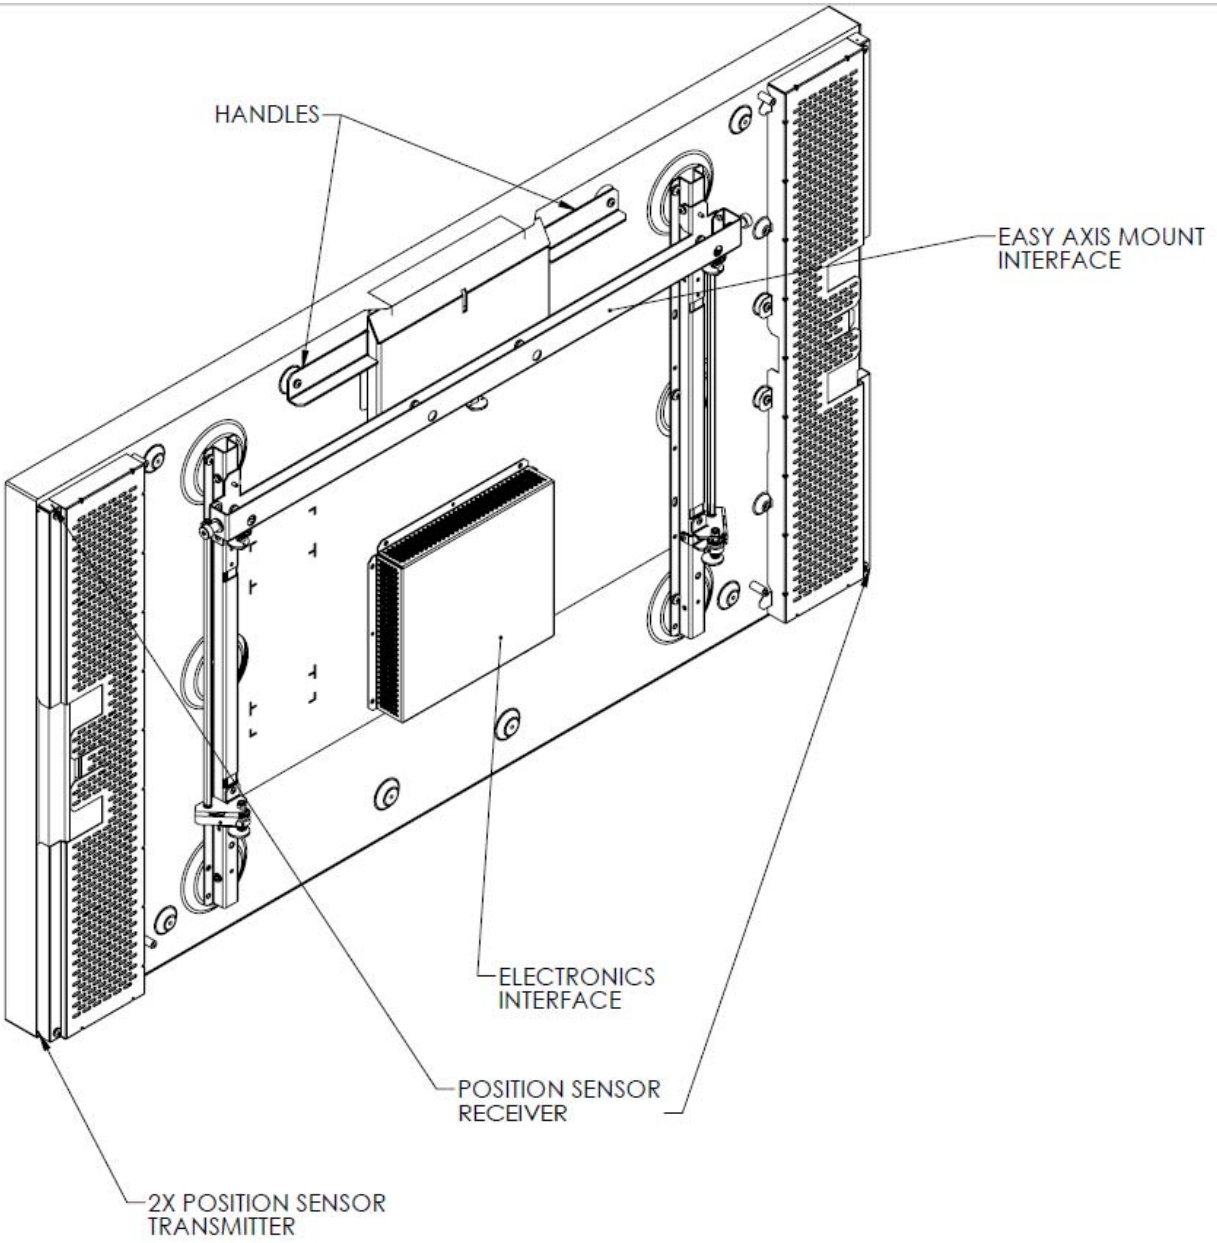


LX46S-3D Side Views

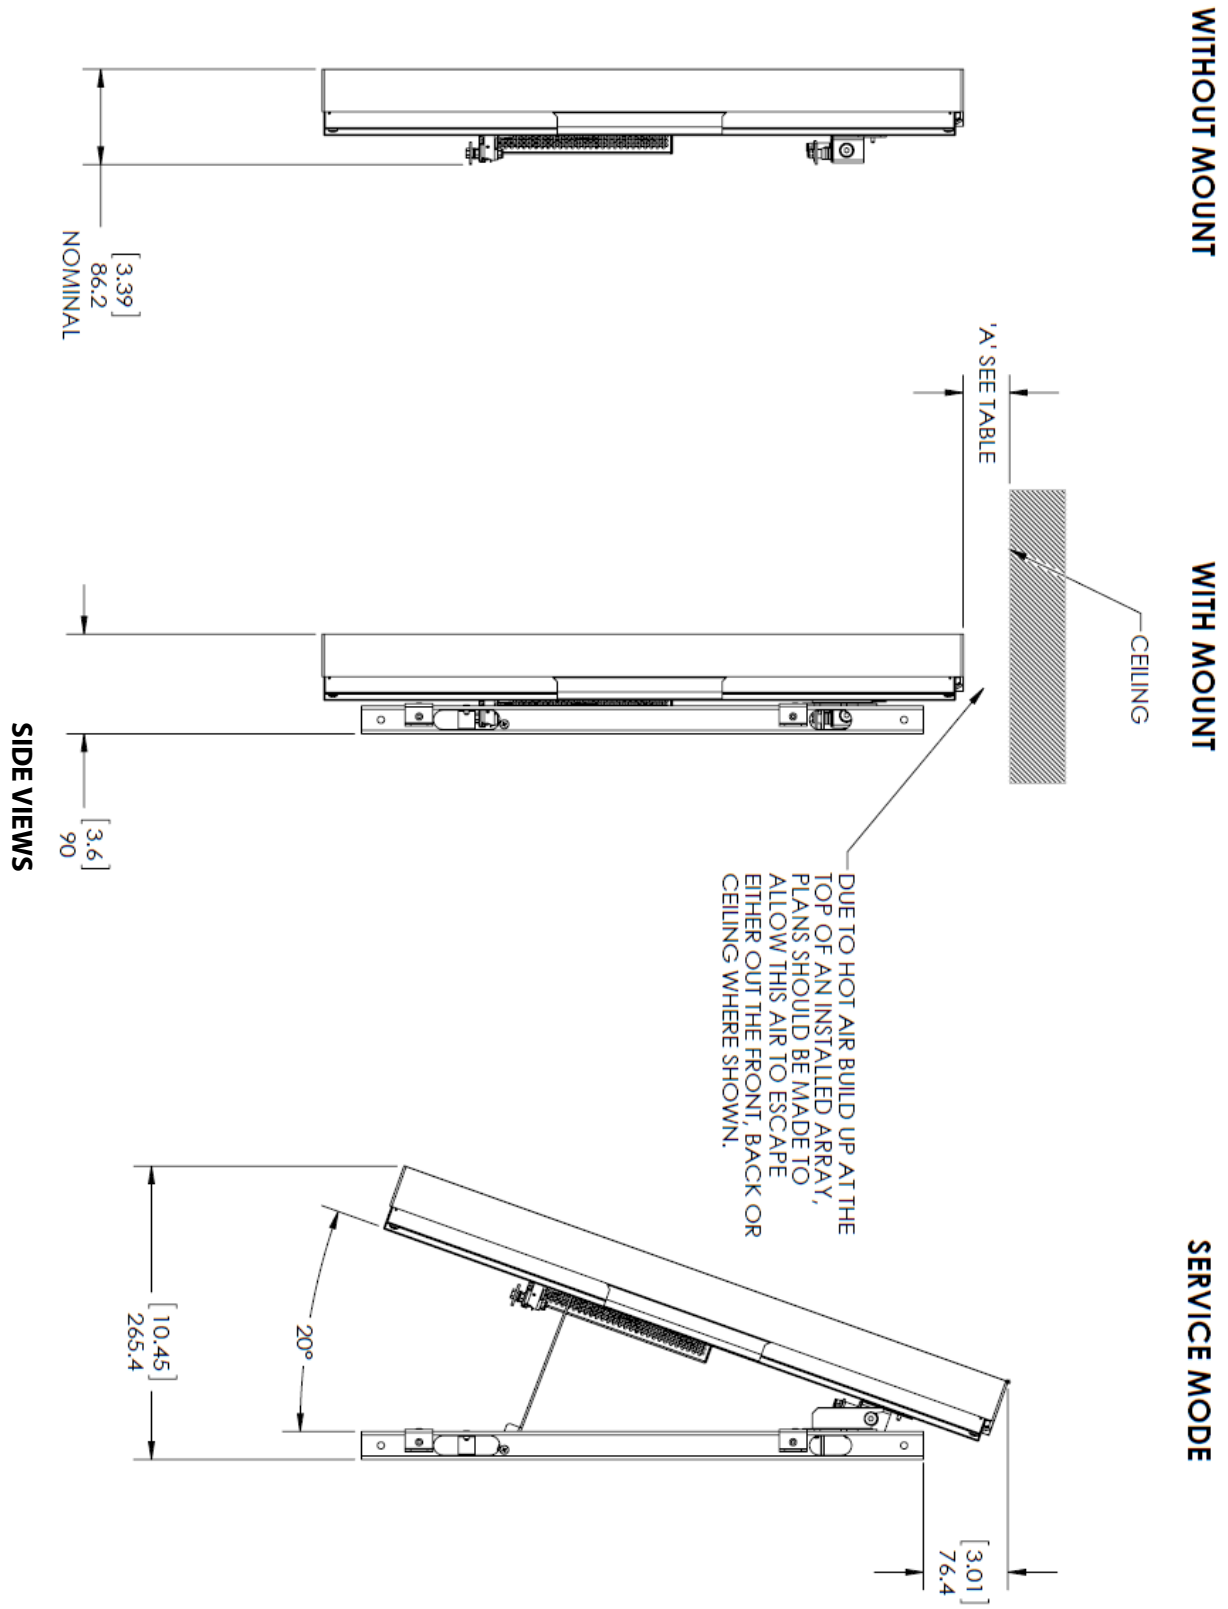


LX/MX46HDU, LX46HDU-3D Dimensions – Landscape


LX/MX46HDU, LX46HDU-3D Top, Front, and Bottom Views – Landscape

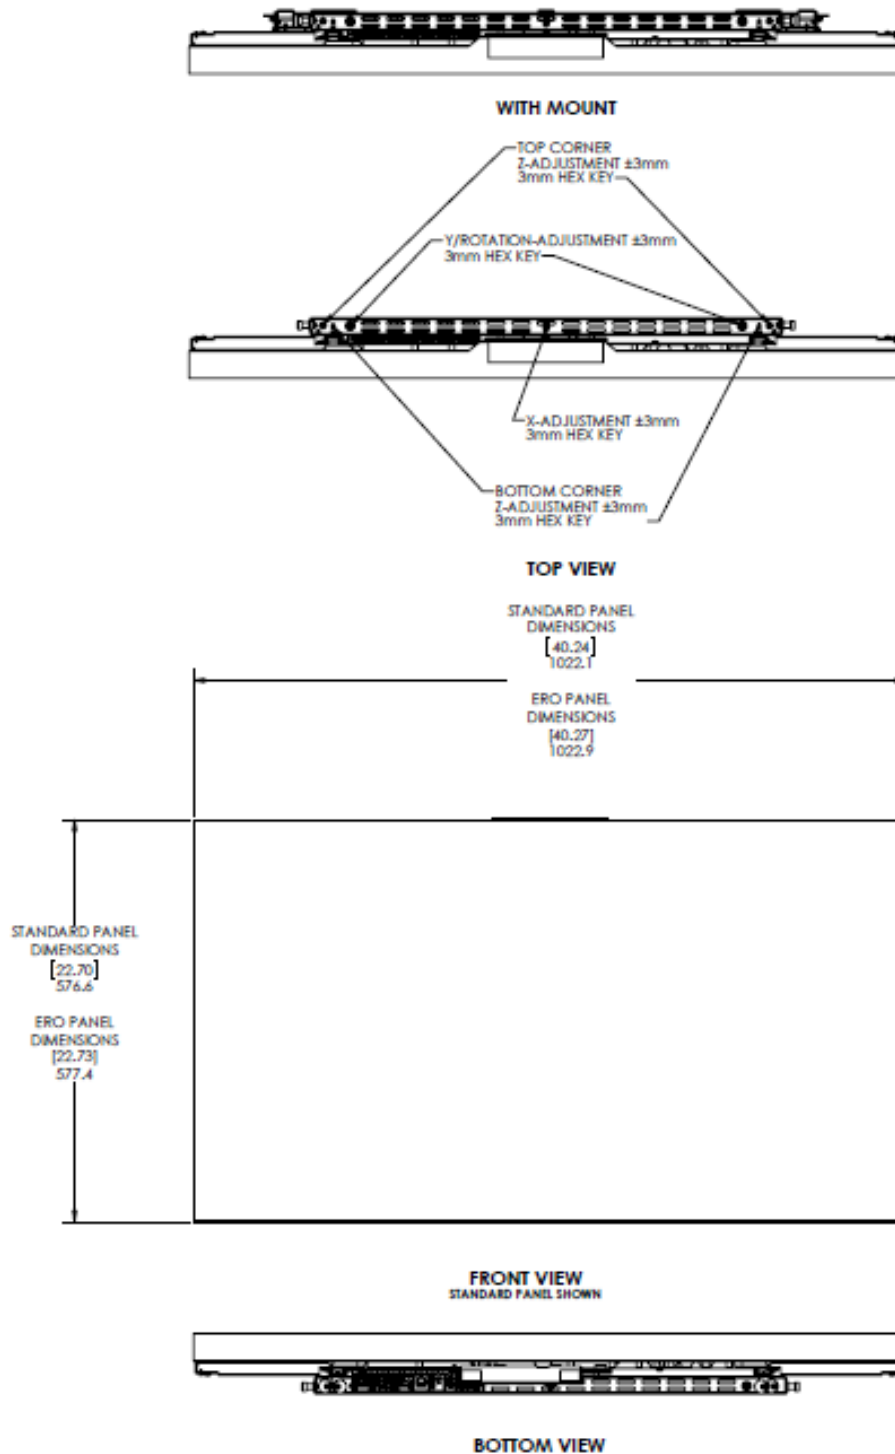

LX/MX46HDU, LX 46HDU-3D Rear View – Landscape

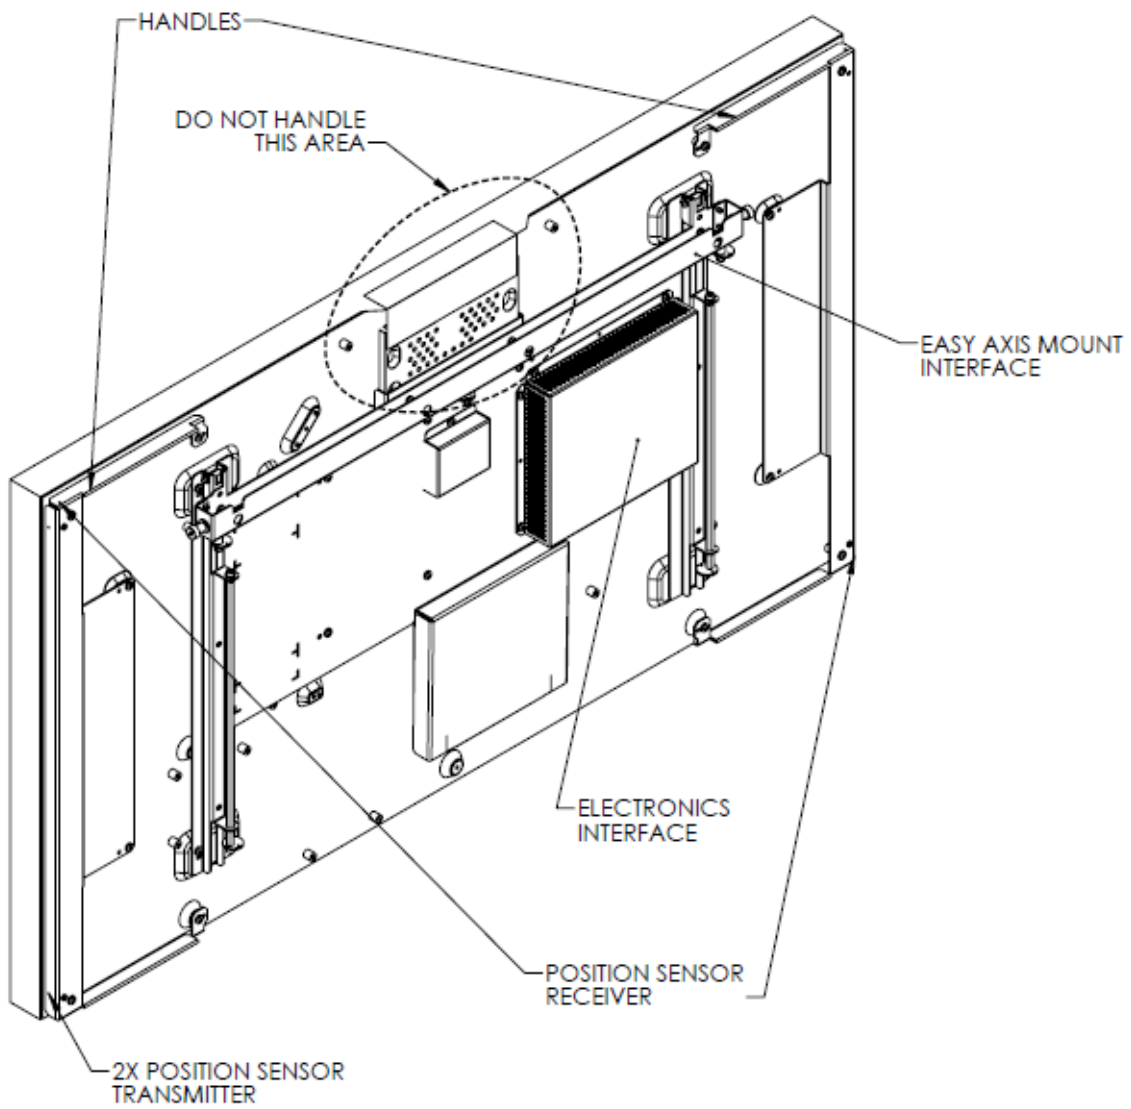

LX/MX46HDU, LX46HDU-3D Side Views – Landscape

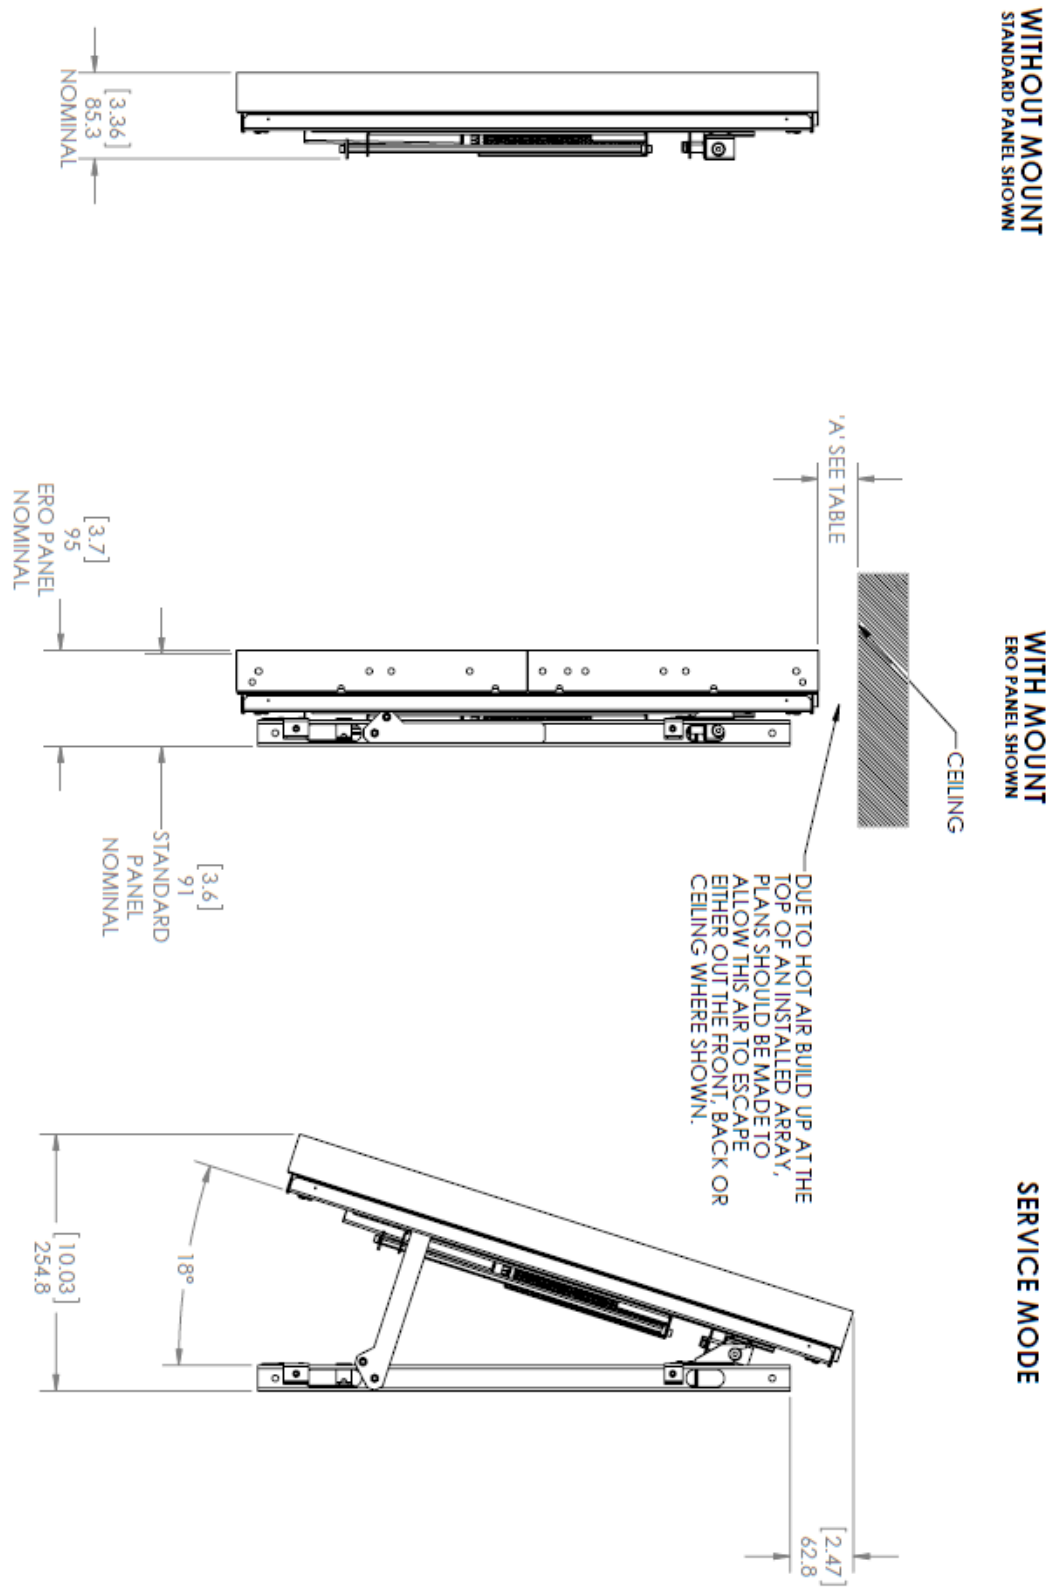


LX/MX46HDU Dimensions – Portrait

LX/MX46HDU Top and Bottom Views – Portrait



WITH MOUNT

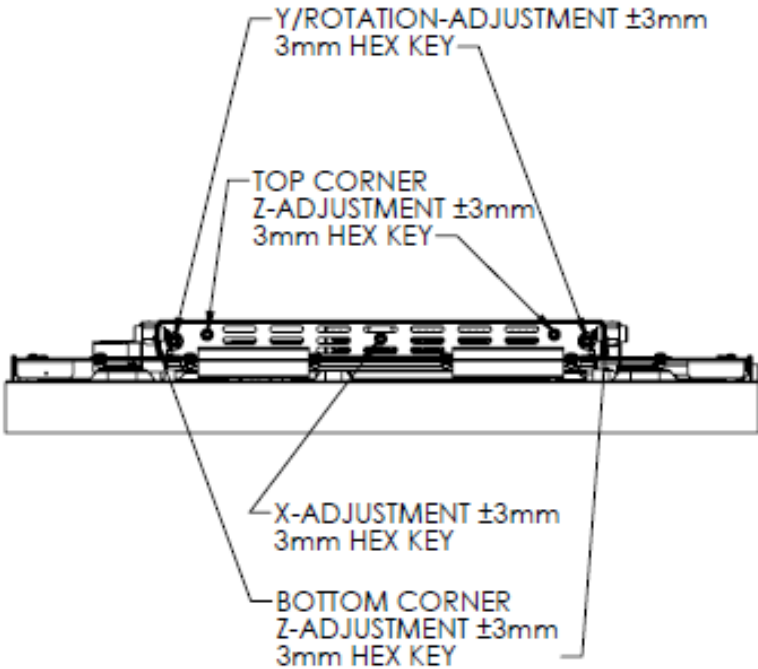


TOP VIEW




BOTTOM VIEW

LX/MX46HDU Front View – Portrait

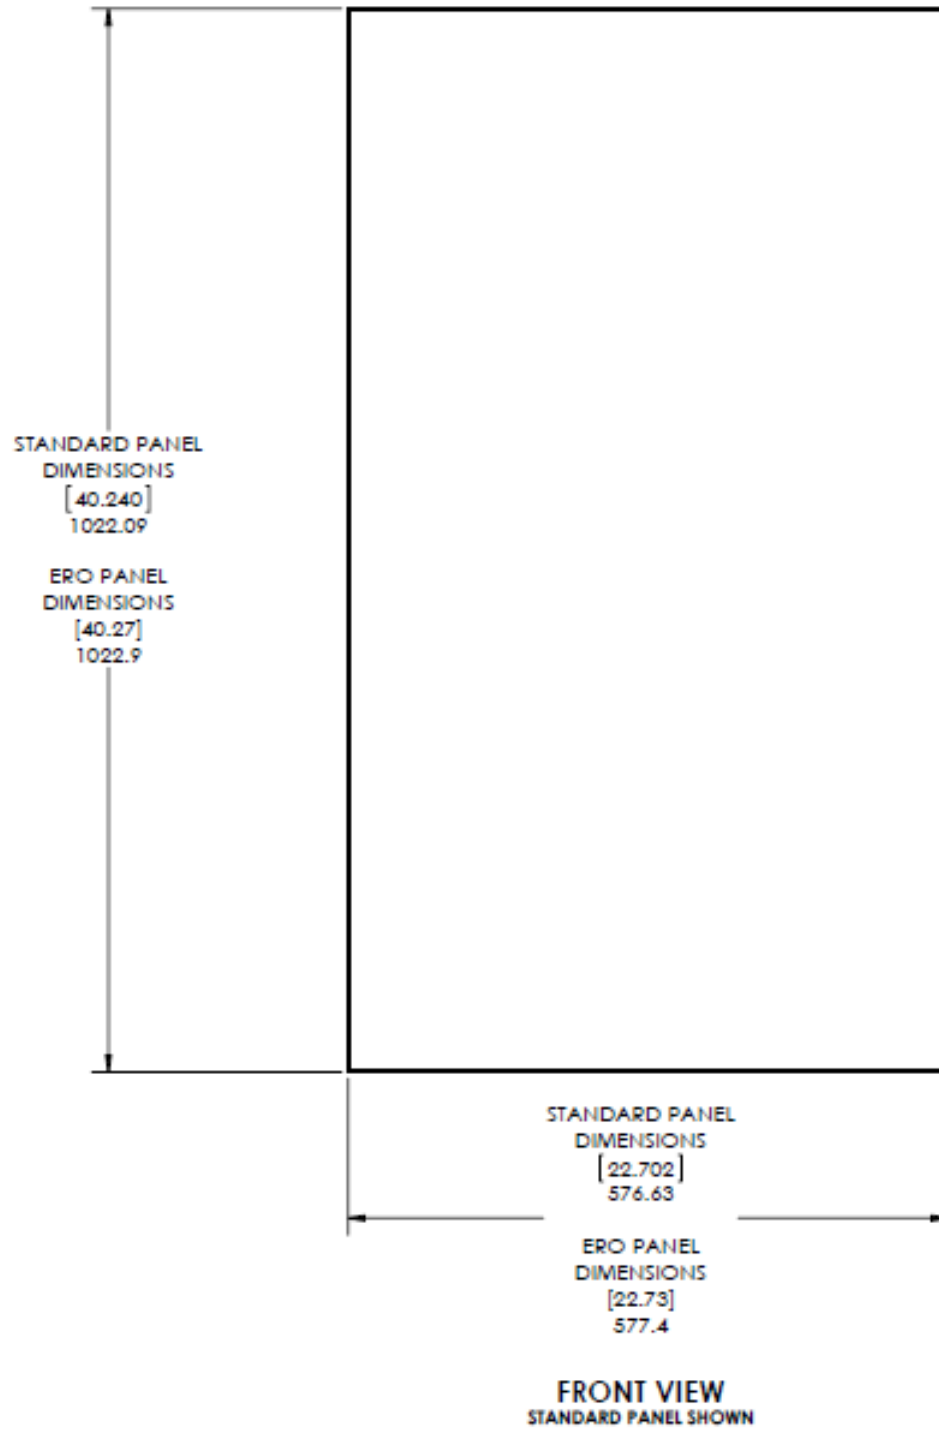

LX/MX46HDU Rear View – Portrait

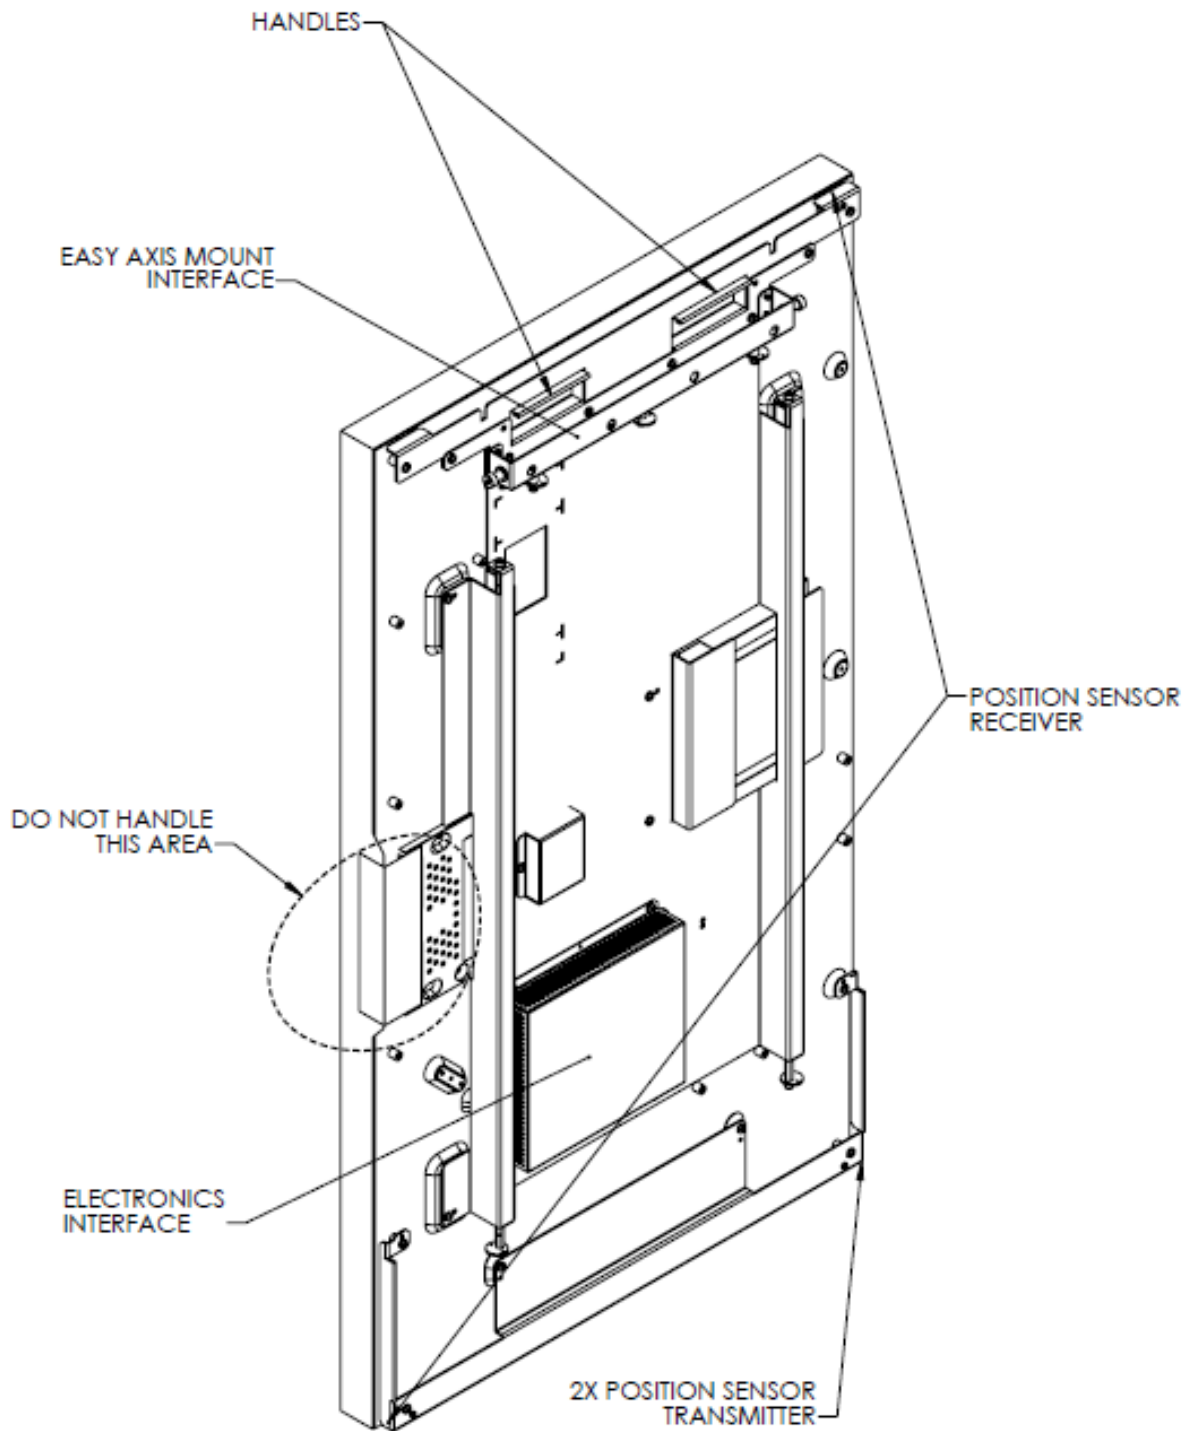


LX/MX46HDU Side Views – Portrait

WITHOUT MOUNT
STANDARD PANEL SHOWN

WITH MOUNT
ERO PANEL SHOWN


SERVICE MODE

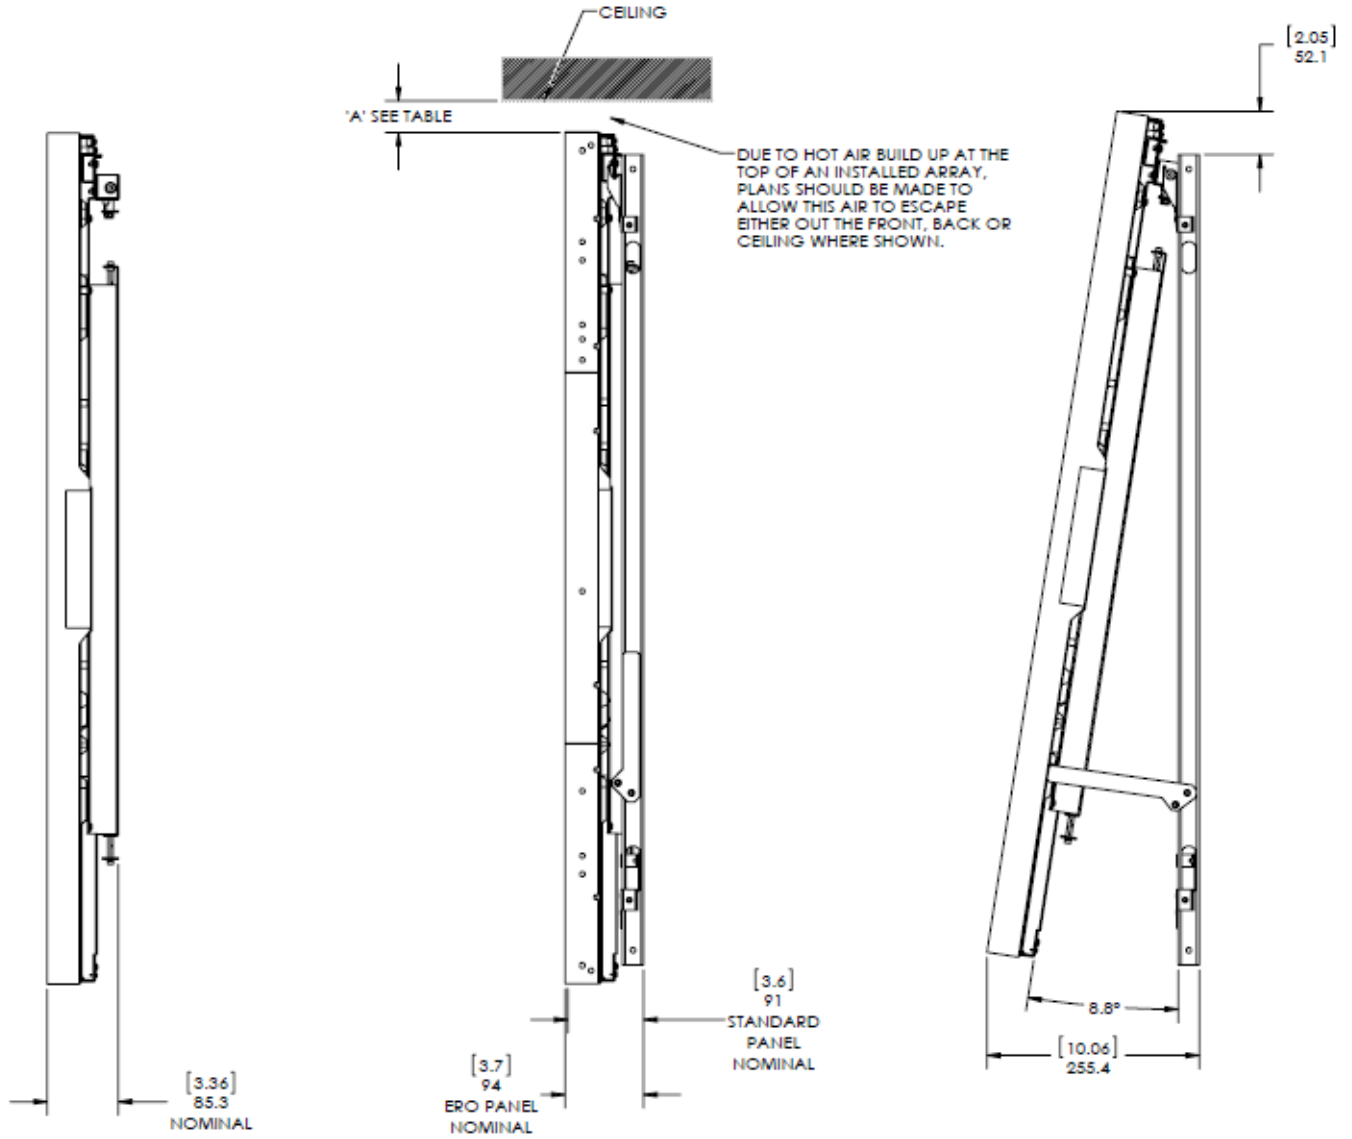


SIDE VIEWS

LX/MX55HDU Dimensions – Landscape

LX/MX55HDU Top, Front, and Bottom Views – Landscape

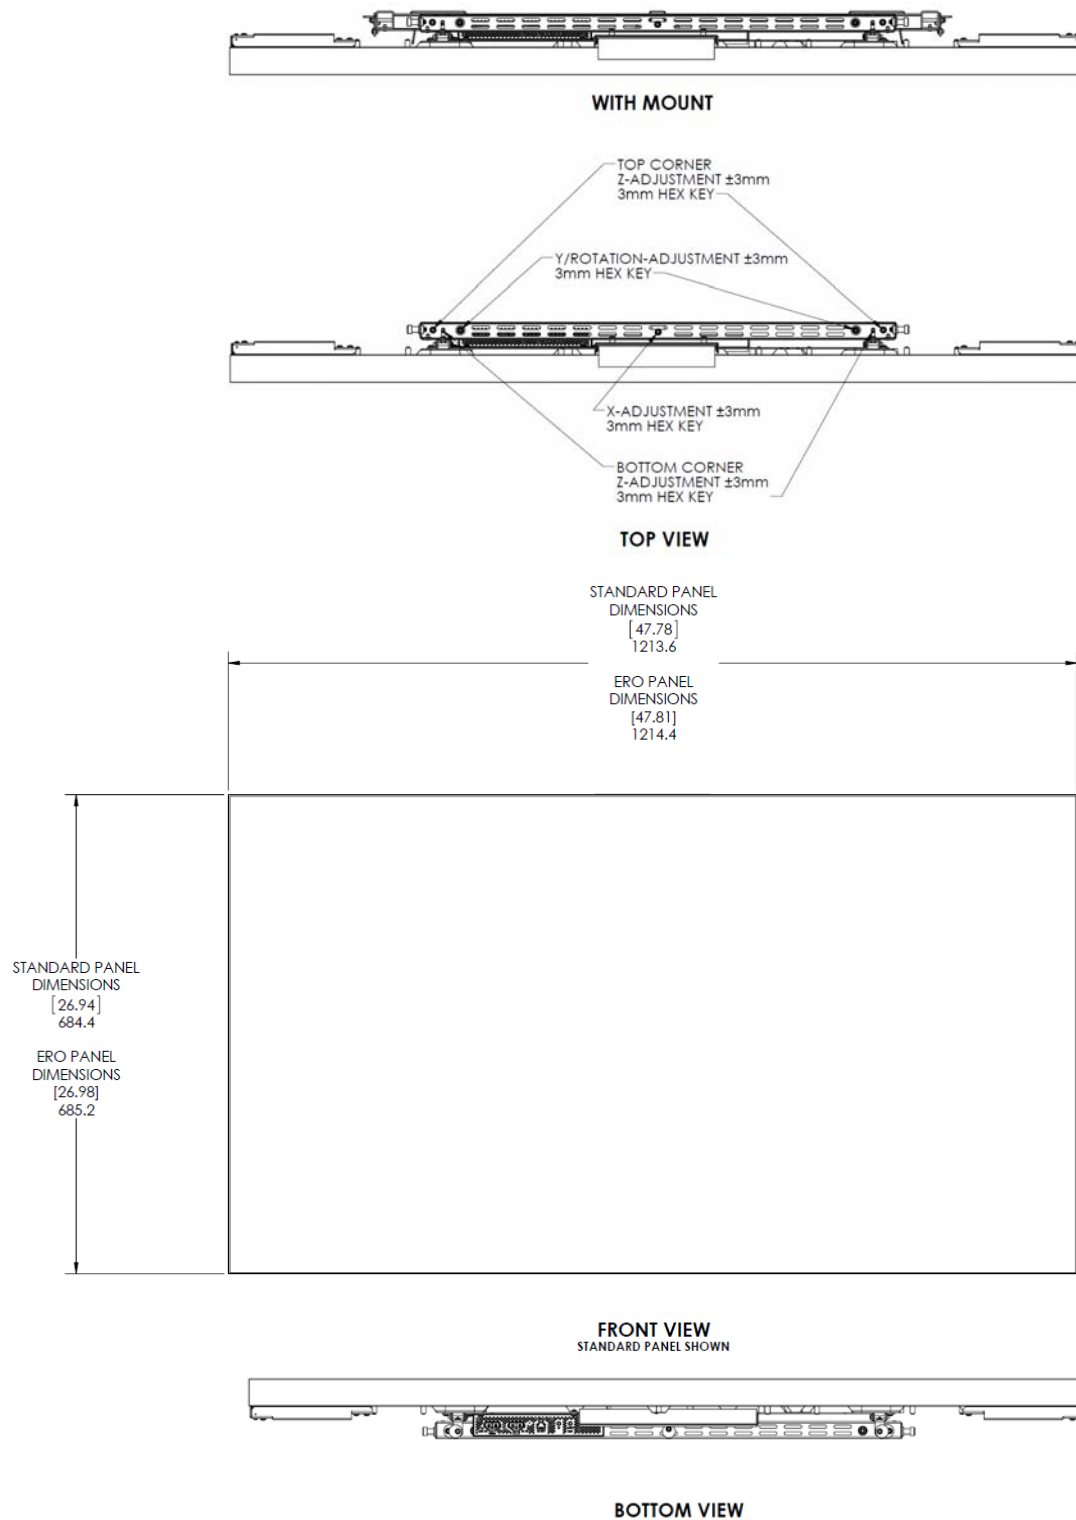

LX/MX55HDU Rear View – Landscape

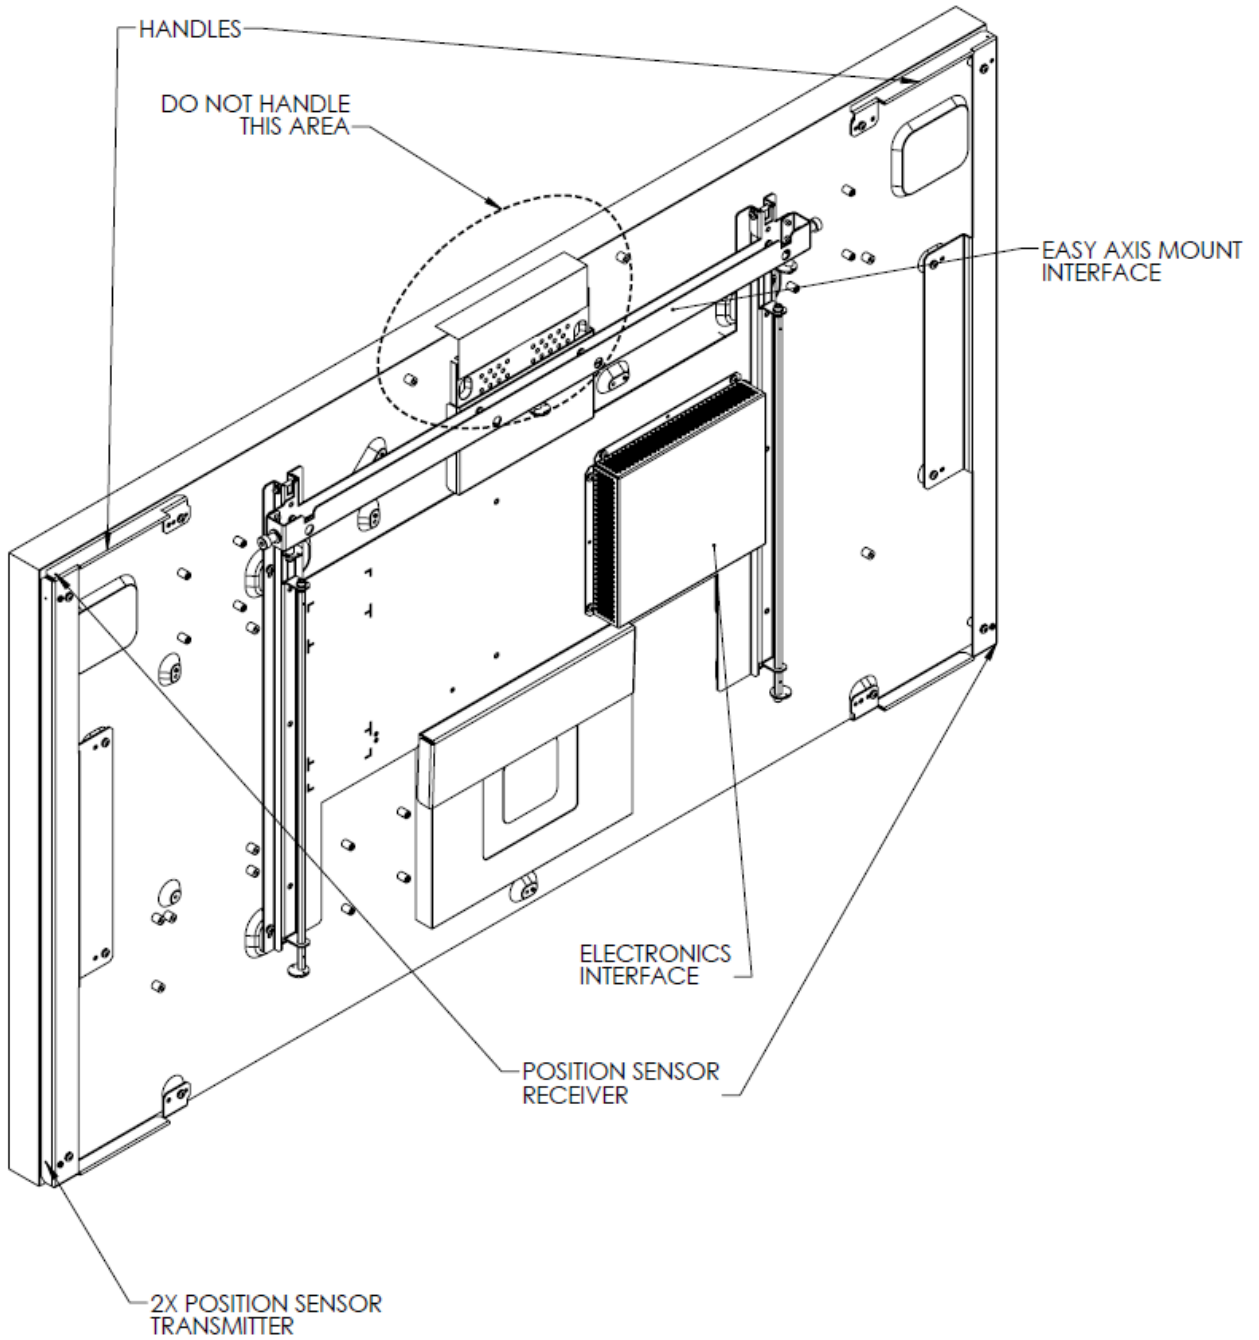


LX/MX55HDU Side Views – Landscape

WITHOUT MOUNT
STANDARD PANEL SHOWN

WITH MOUNT
ERO PANEL SHOWN


SERVICE MODE

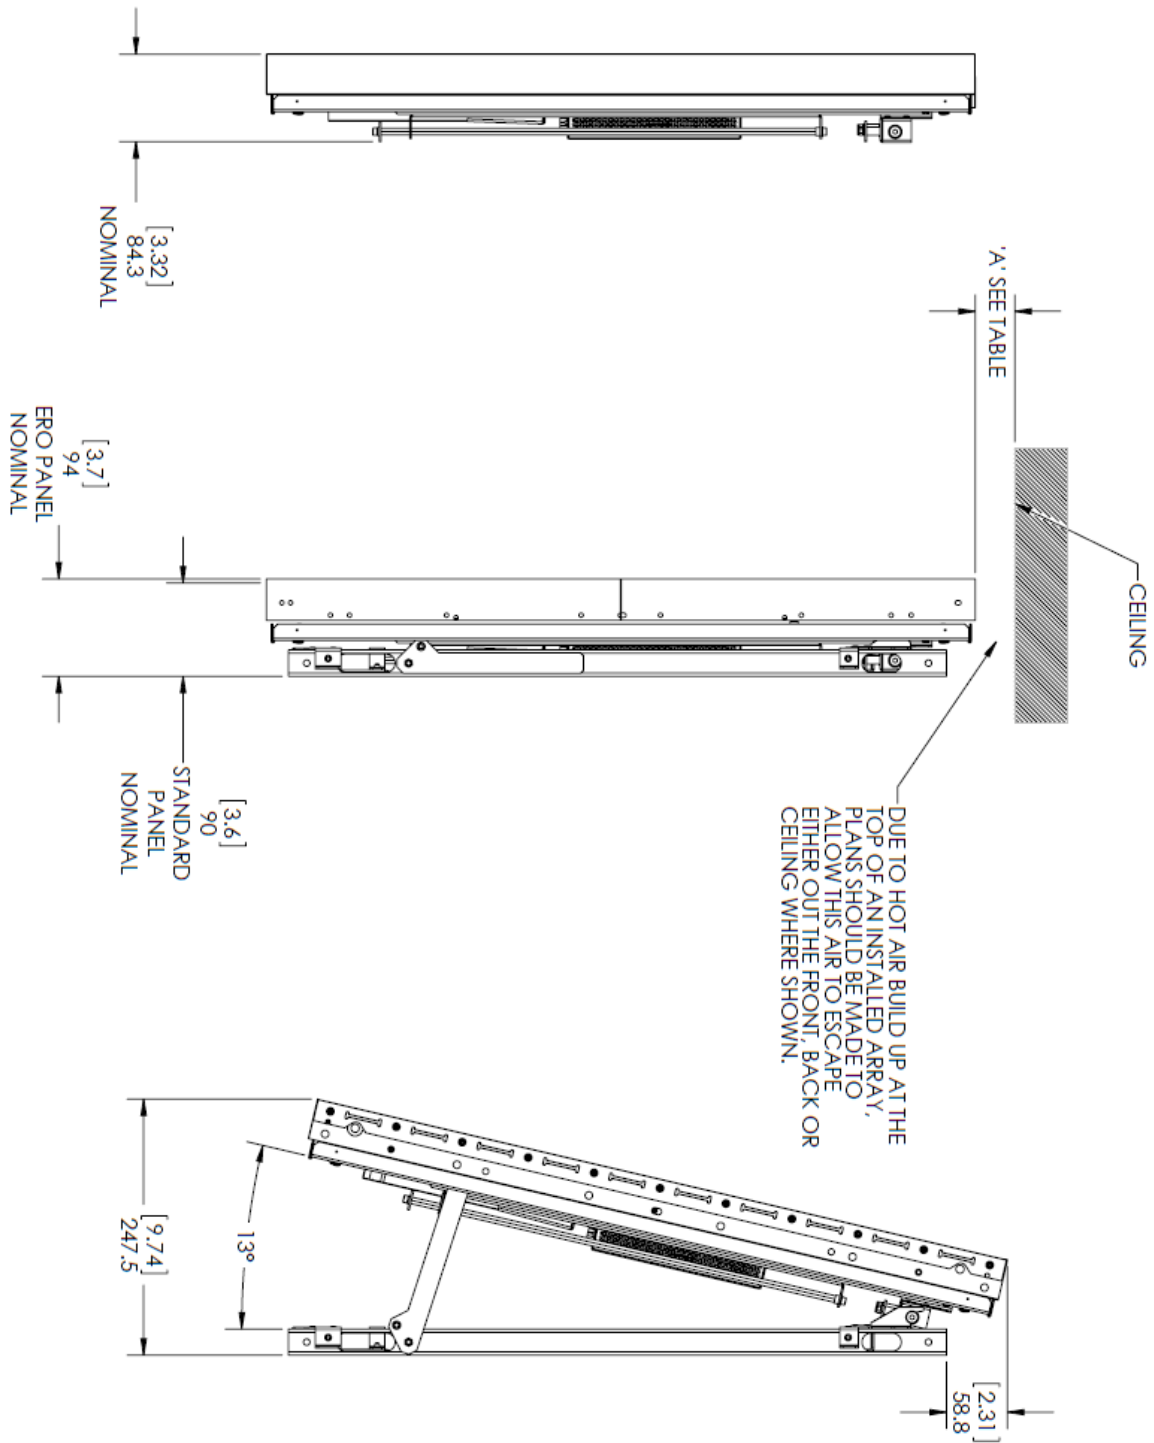


SIDE VIEWS

LX/MX55HDU Dimensions – Portrait

LX/MX55HDU Top and Bottom Views – Portrait

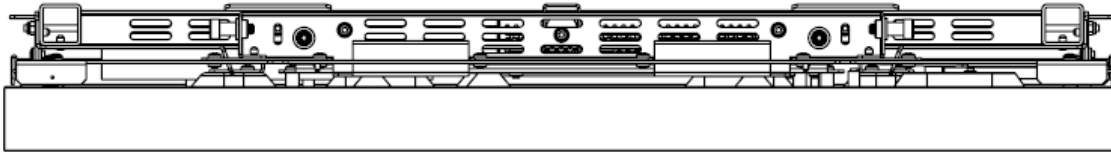

WITH MOUNT

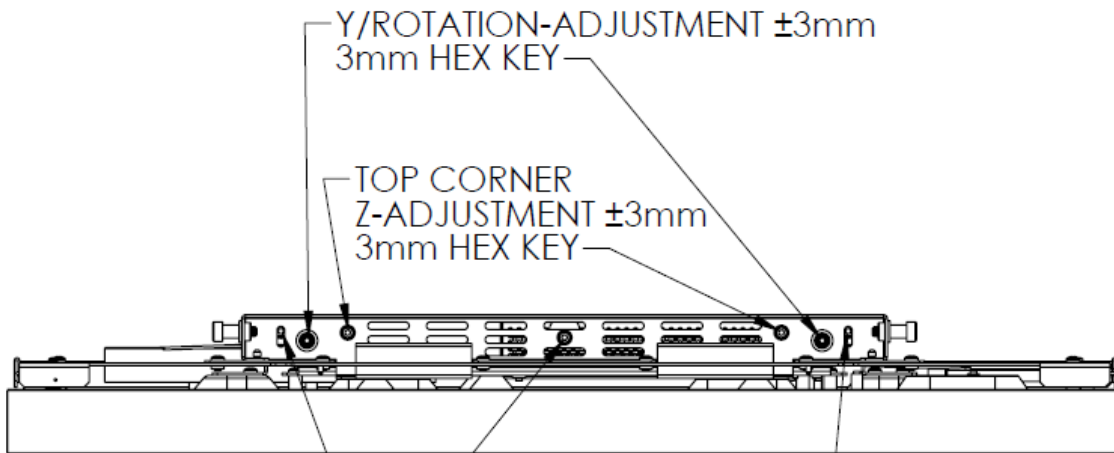


Y/ROTATION-ADJUSTMENT $\pm 3\text{mm}$
3mm HEX KEY

TOP CORNER
Z-ADJUSTMENT $\pm 3\text{mm}$
3mm HEX KEY

X-ADJUSTMENT $\pm 3\text{mm}$
3mm HEX KEY


BOTTOM CORNER
Z-ADJUSTMENT $\pm 3\text{mm}$
3mm HEX KEY

TOP VIEW

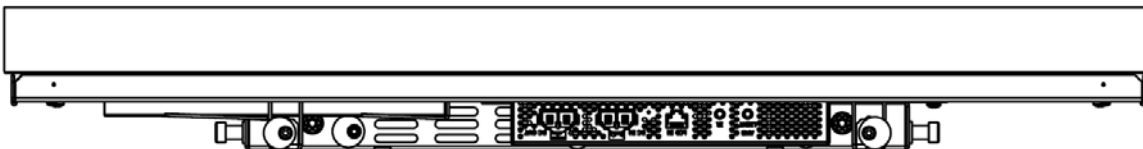


BOTTOM VIEW

LX/MX55HDU Front View – Portrait

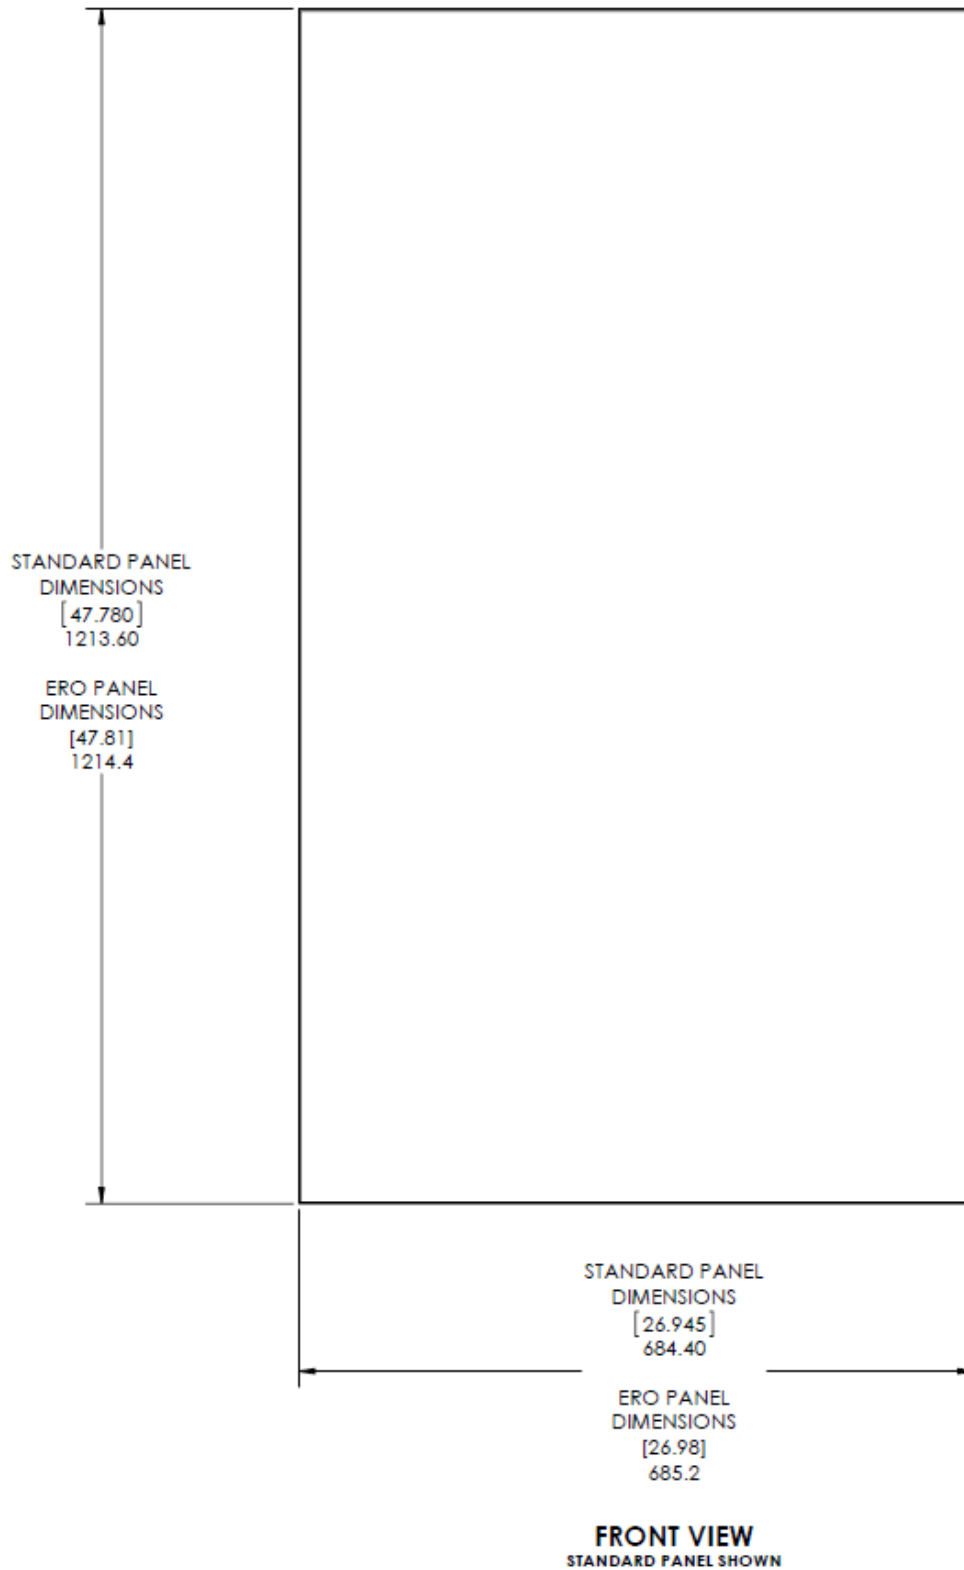


LX/MX55HDU Side Views – Portrait

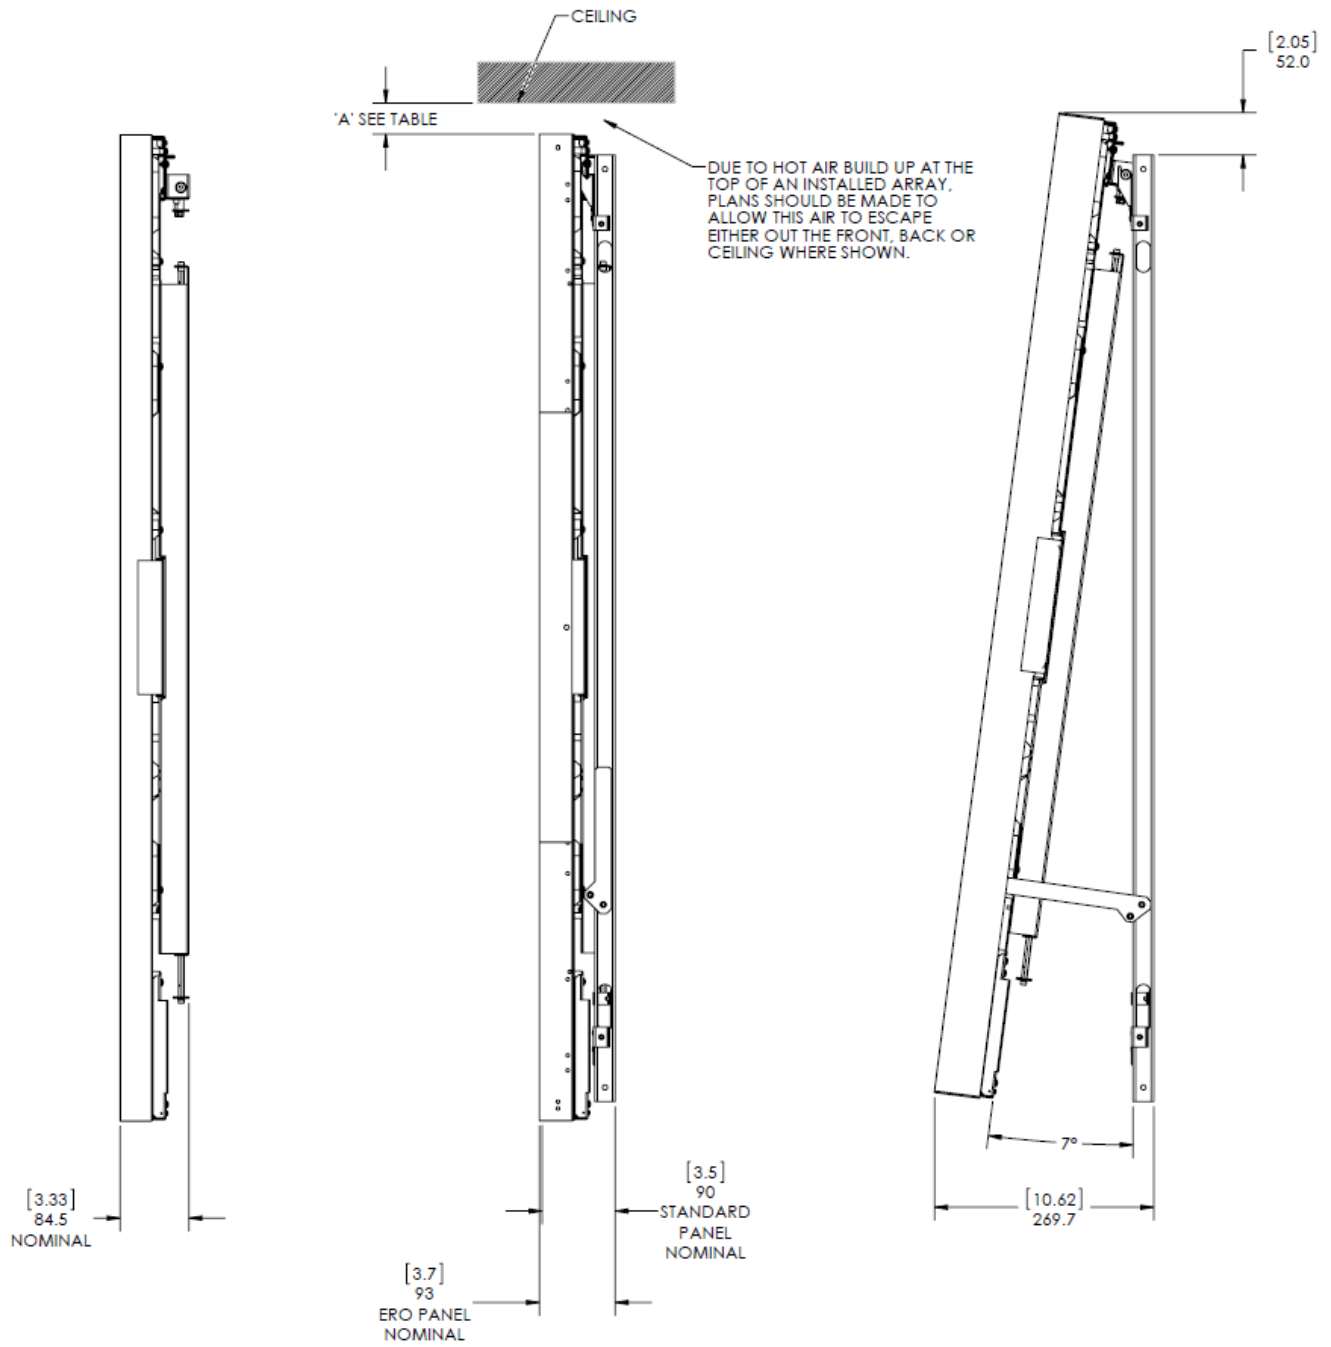


SIDE VIEWS

LX/MX55HDU Rear View – Portrait

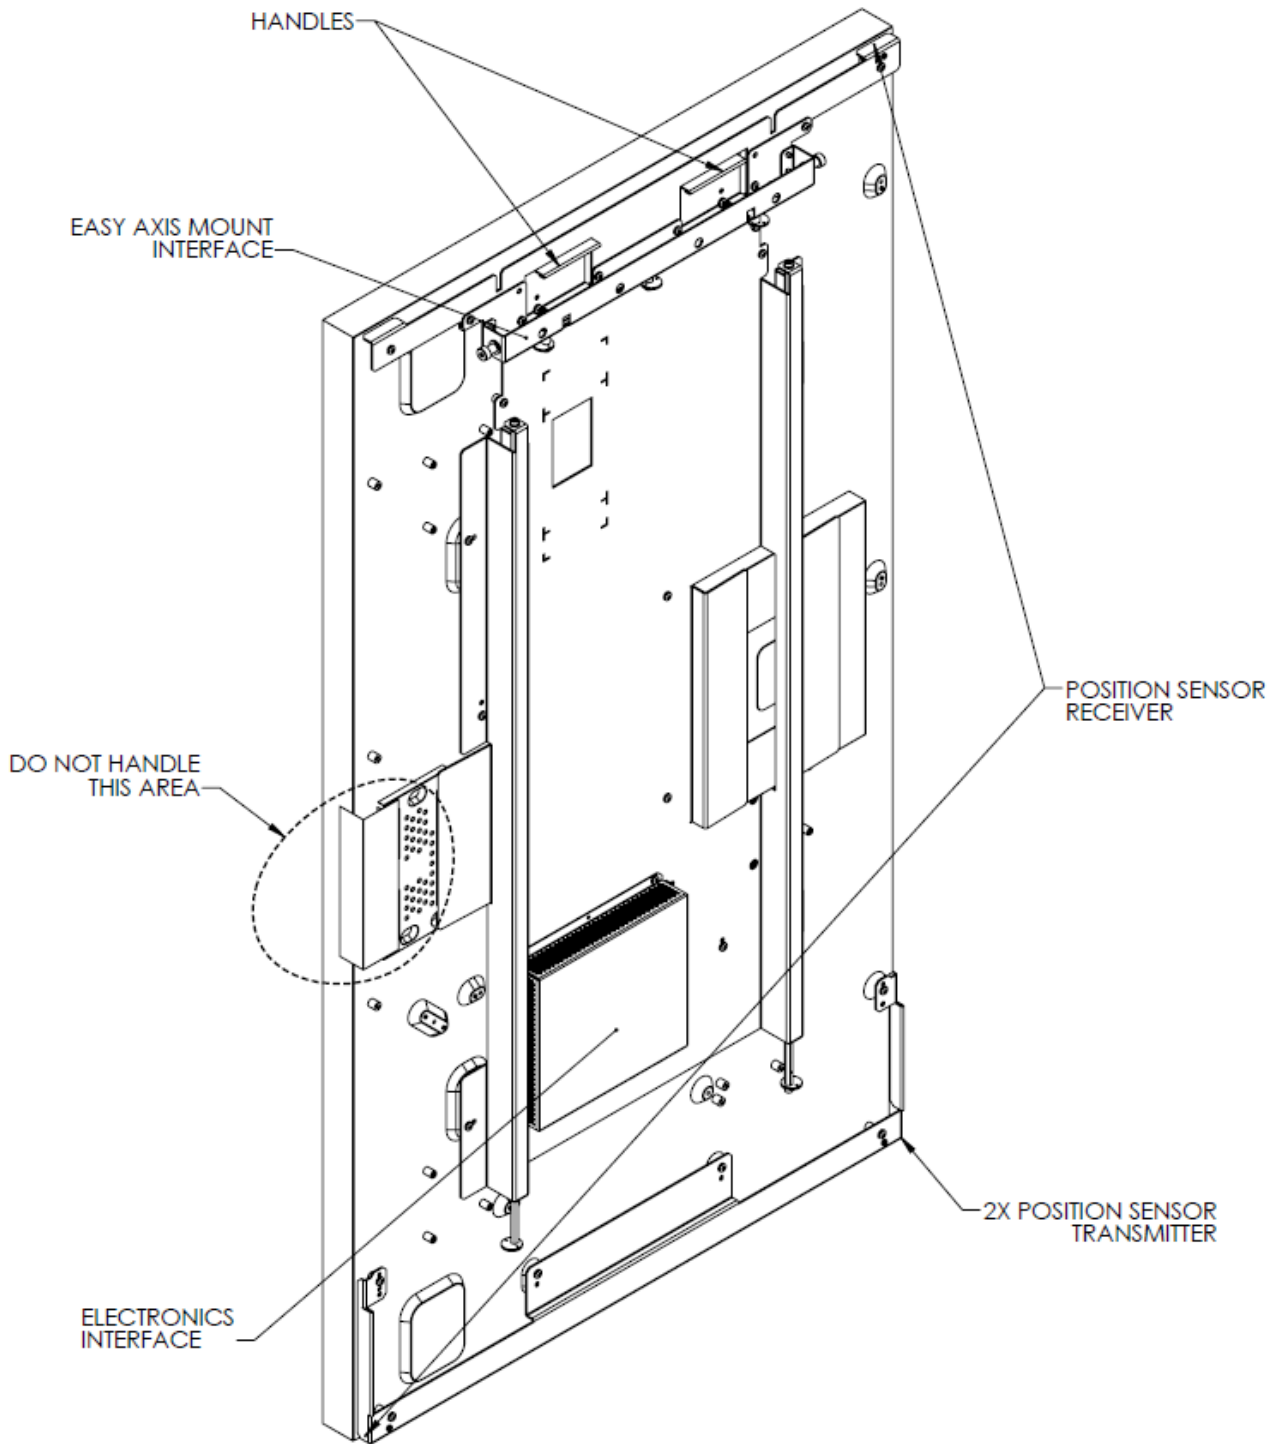


LX/MX55HDX Dimensions – Landscape


LX/MX55HDX Top, Front, and Bottom Views – Landscape

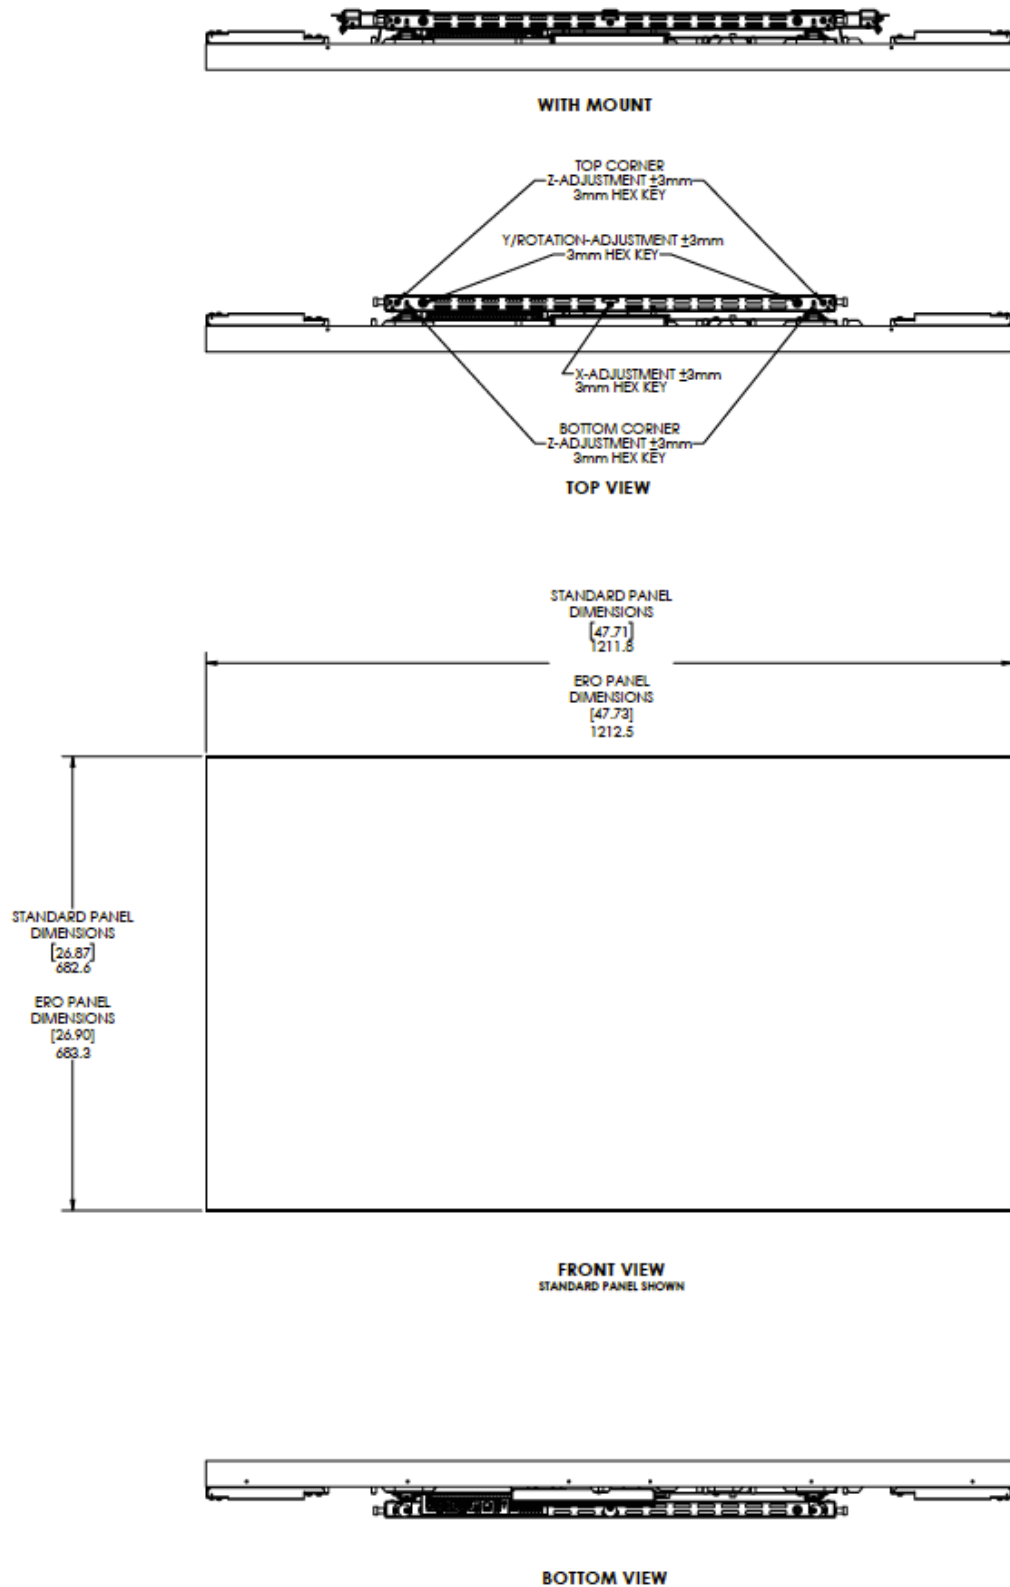

LX/MX55HDX Rear View – Landscape

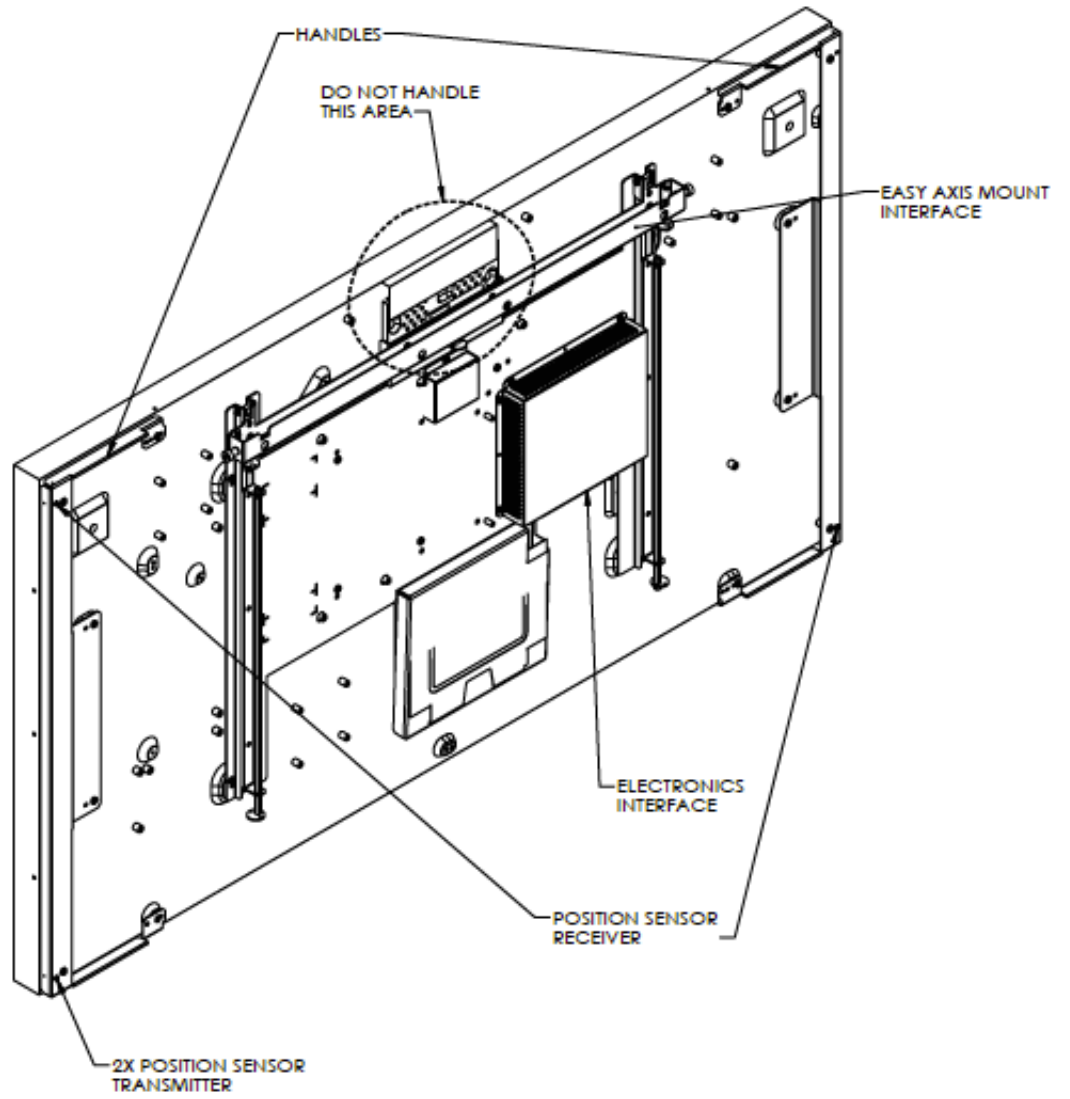

LX/MX55HDX Side Views – Landscape

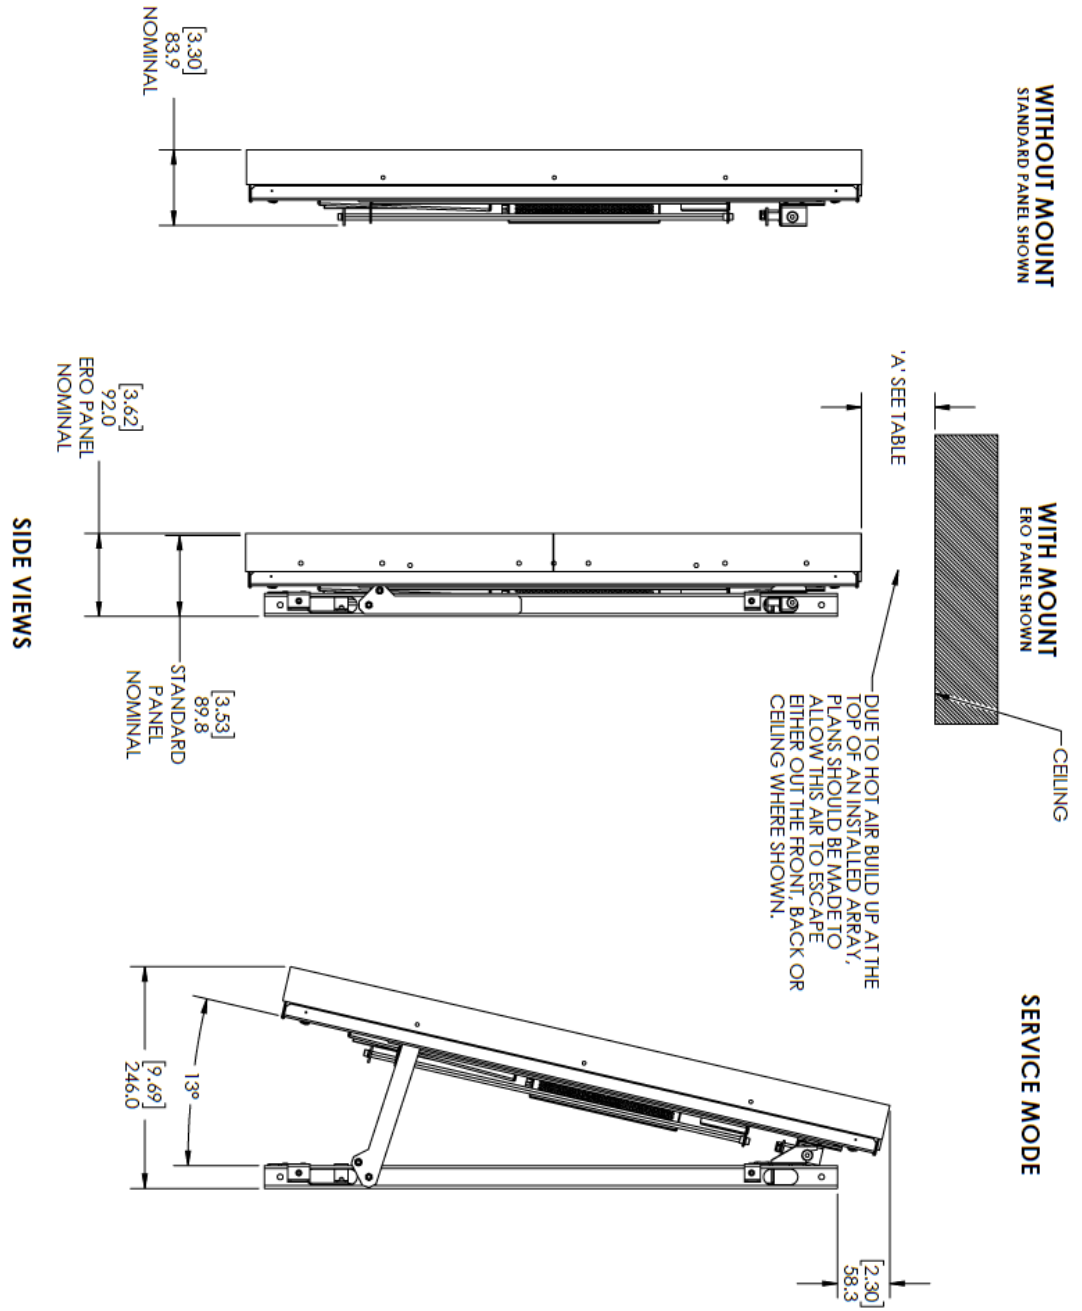


LX/MX55HDX Dimensions – Portrait

LX/MX55HDX Top and Bottom Views – Portrait



WITH MOUNT

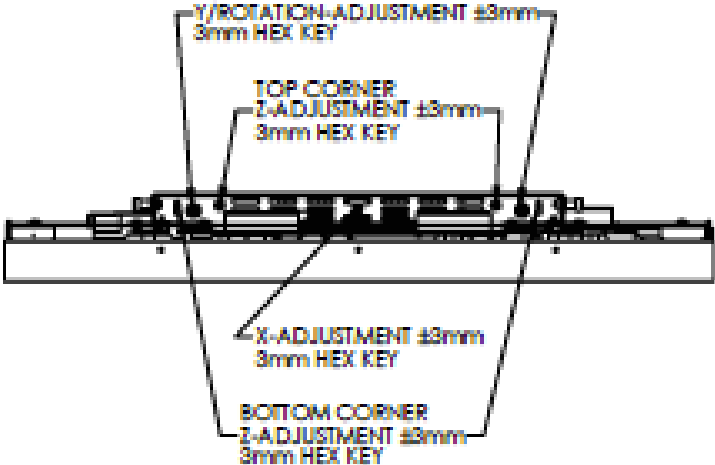


TOP VIEW




BOTTOM VIEW


LX/MX55HDX Front View – Portrait

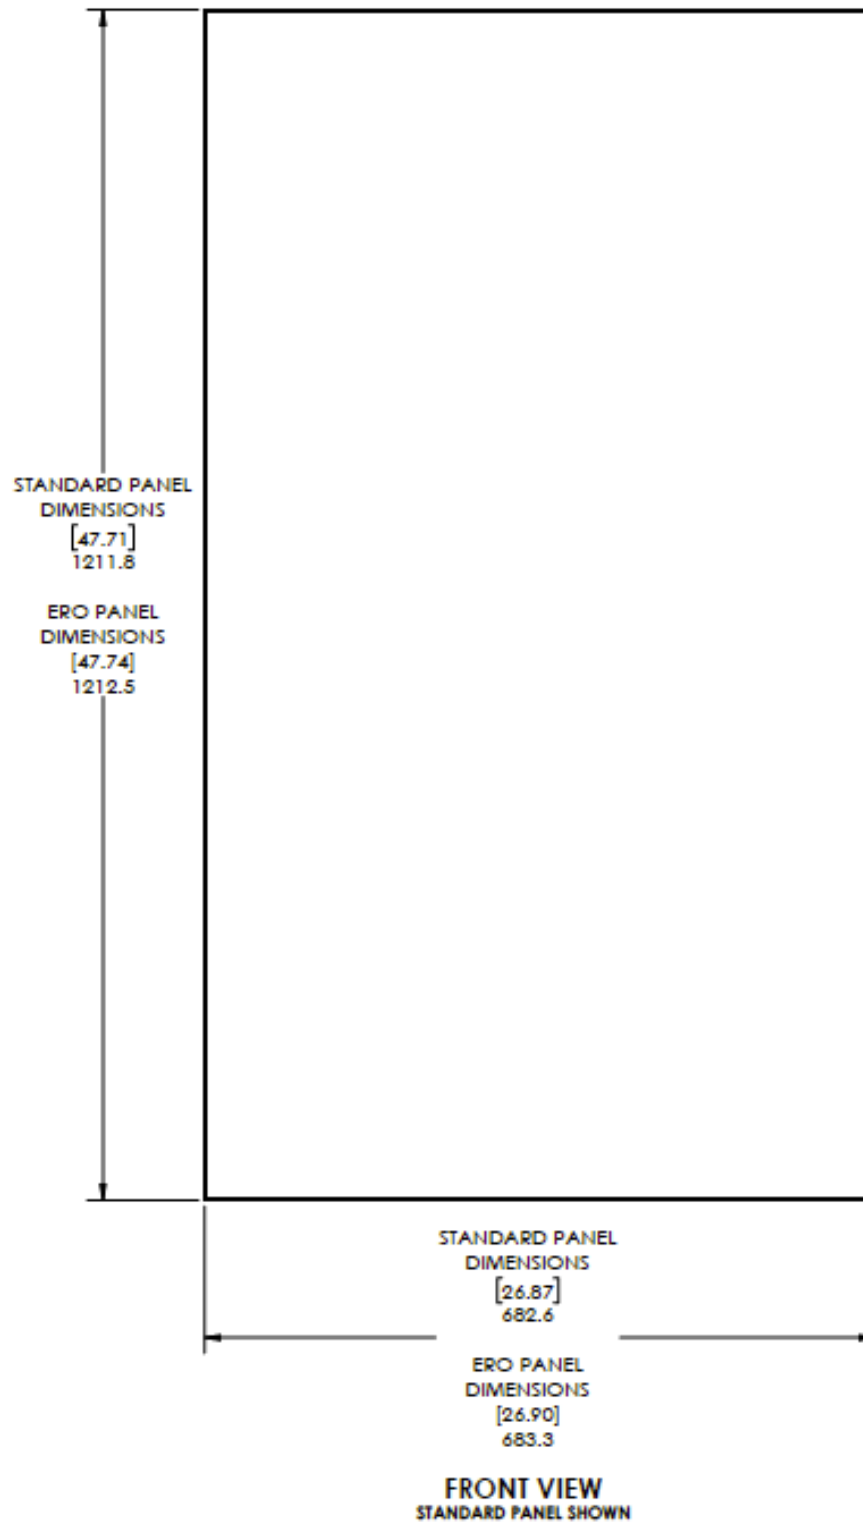

LX/MX55HDX Side Views – Portrait

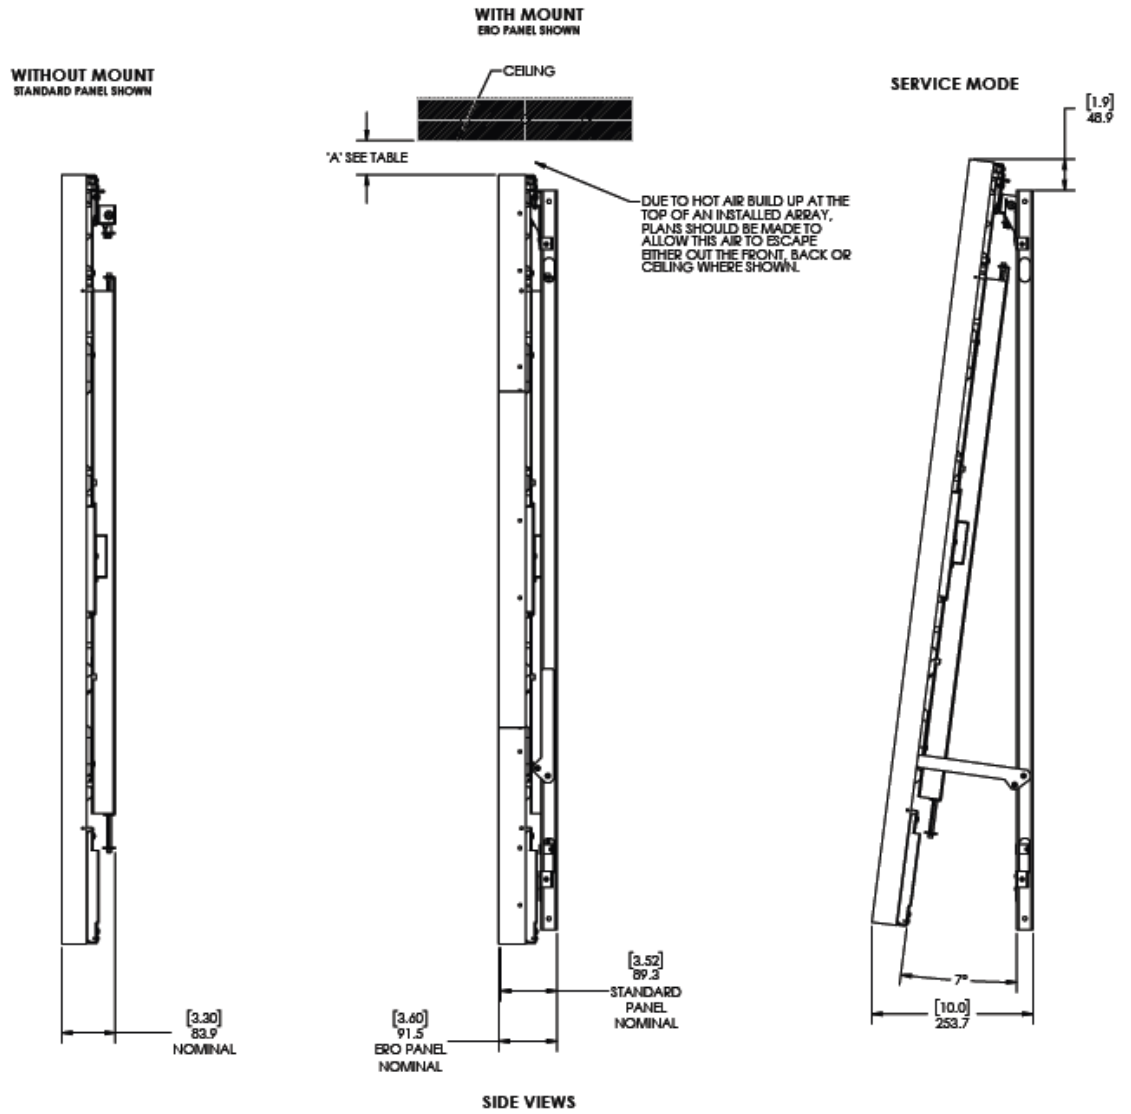


LX/MX55HDX Rear View – Portrait

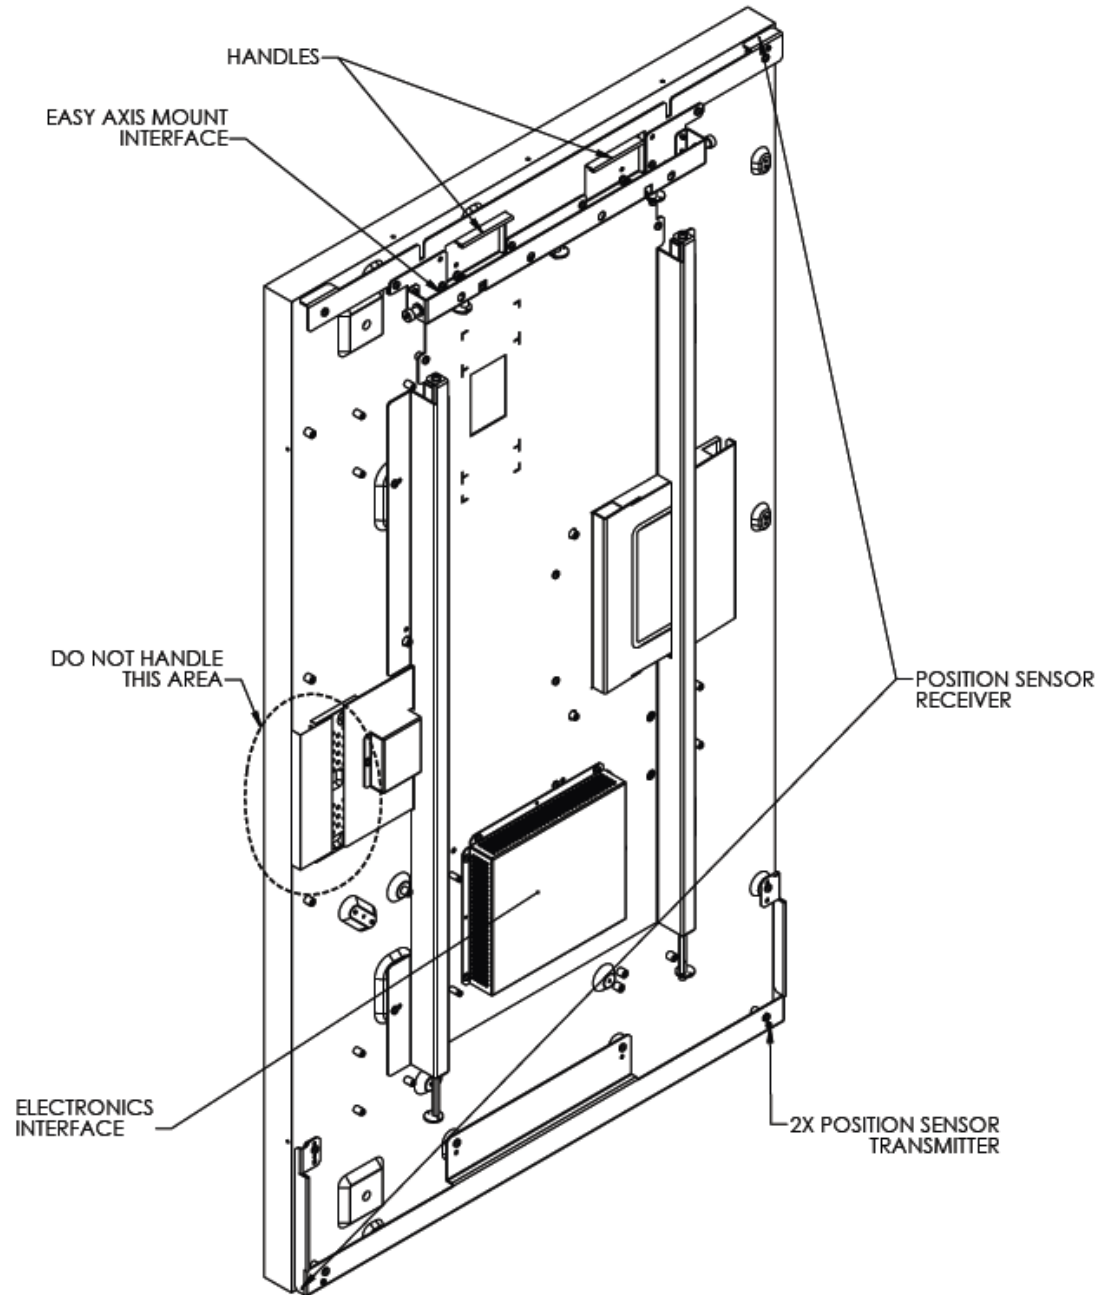


MX46HDX Dimensions – Landscape

MX46HDX Front, Top, and Bottom Views – Landscape

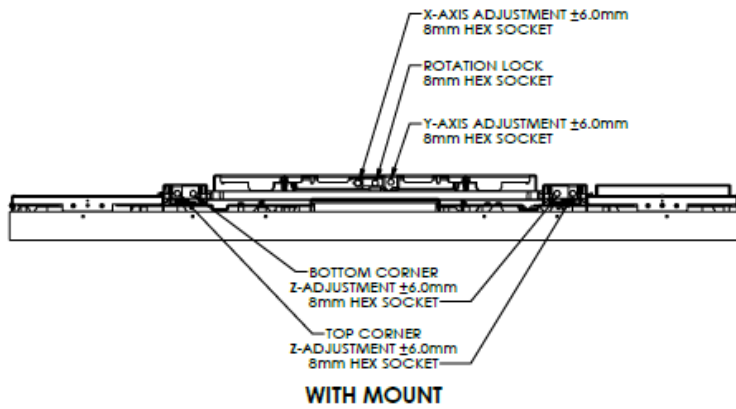

TOP VIEW

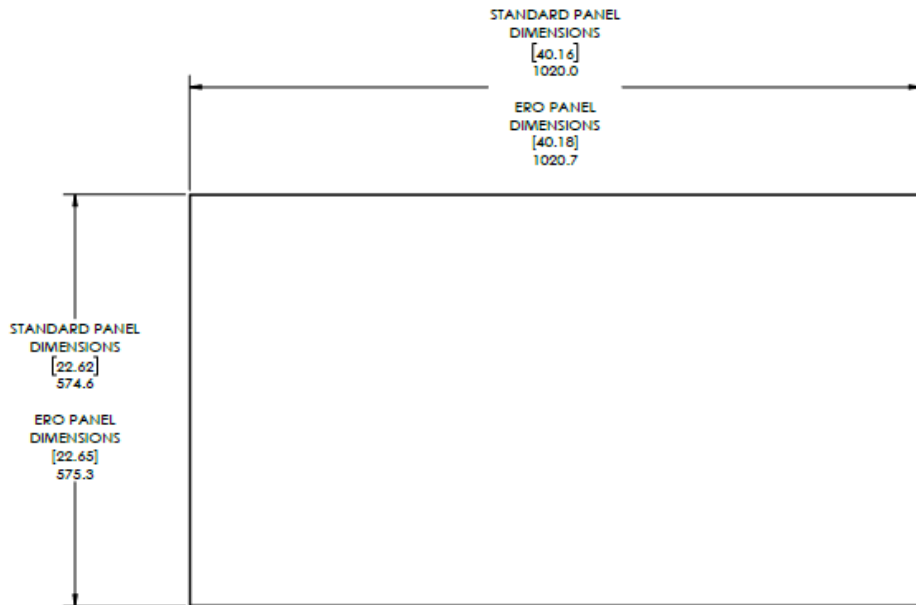


FRONT VIEW
STANDARD PANEL SHOWN




BOTTOM VIEW

MX46HDX Rear View – Landscape

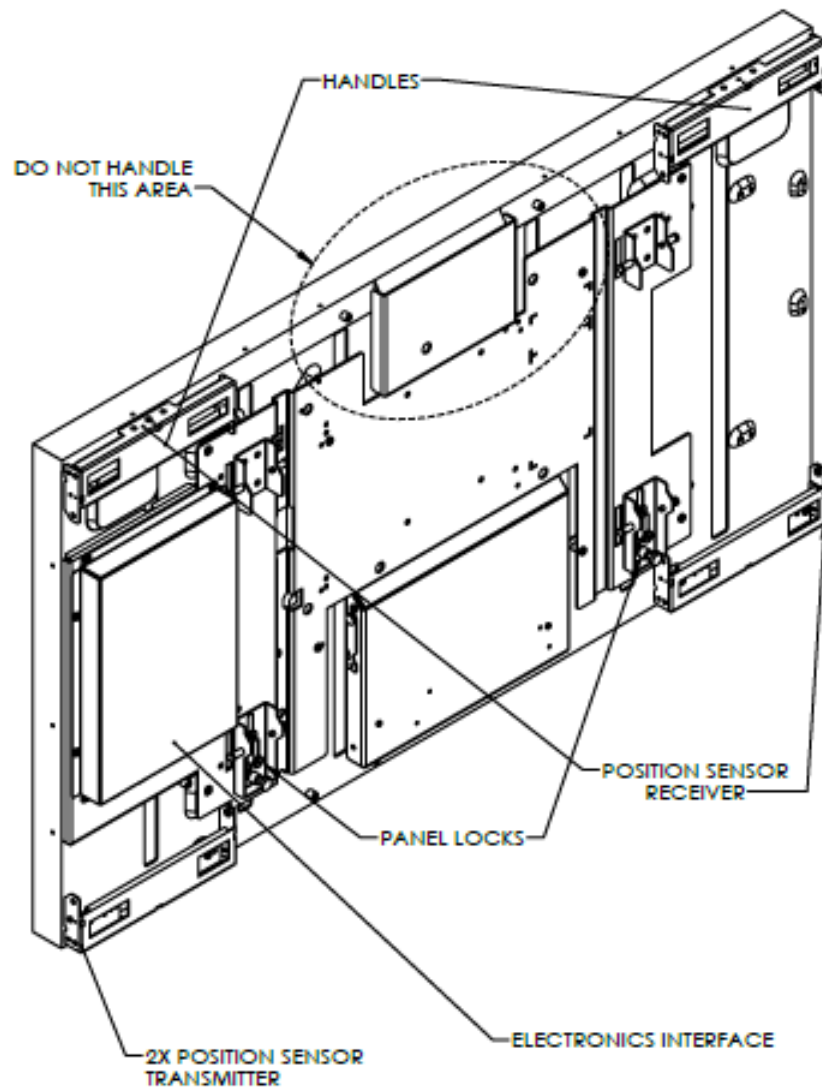


MX46HDX Side Views – Landscape


WITHOUT MOUNT
STANDARD PANEL SHOWN

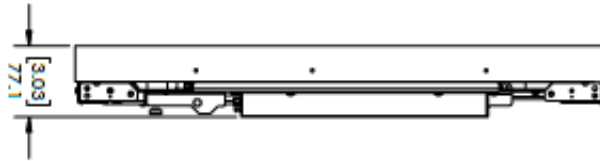

WITH MOUNT
ERO PANEL SHOWN

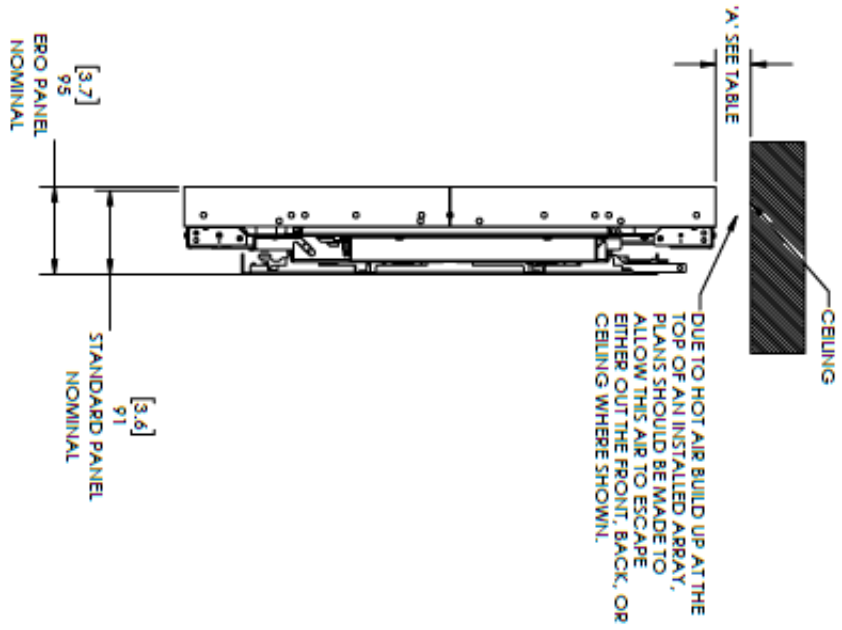


SERVICE MODE

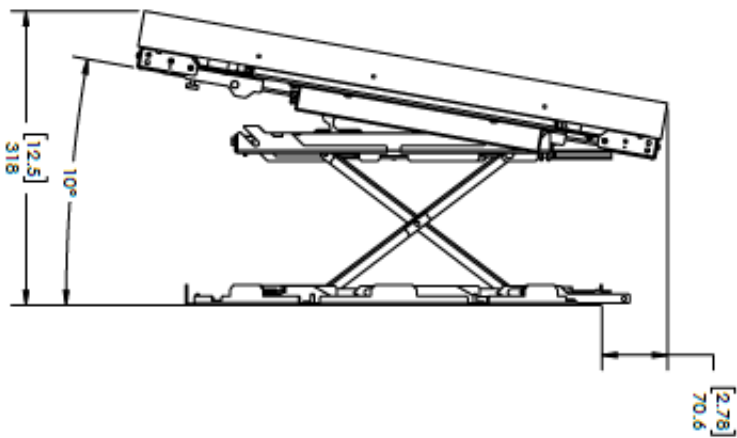


SIDE VIEWS

MX46HDX Dimensions – Portrait

MX46HDX Top and Bottom Views – Portrait

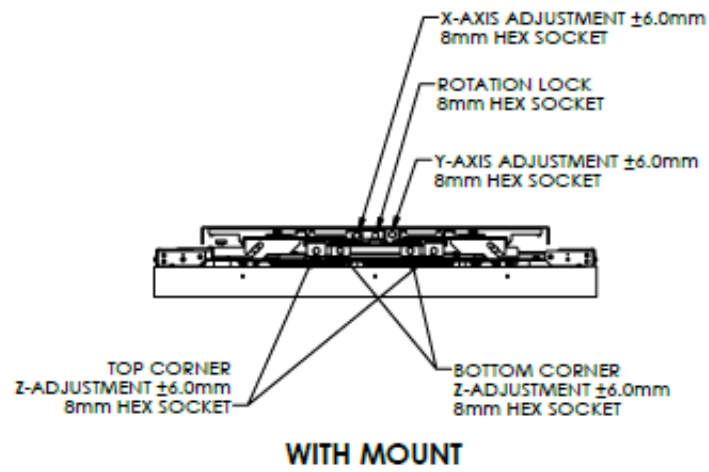


TOP VIEW

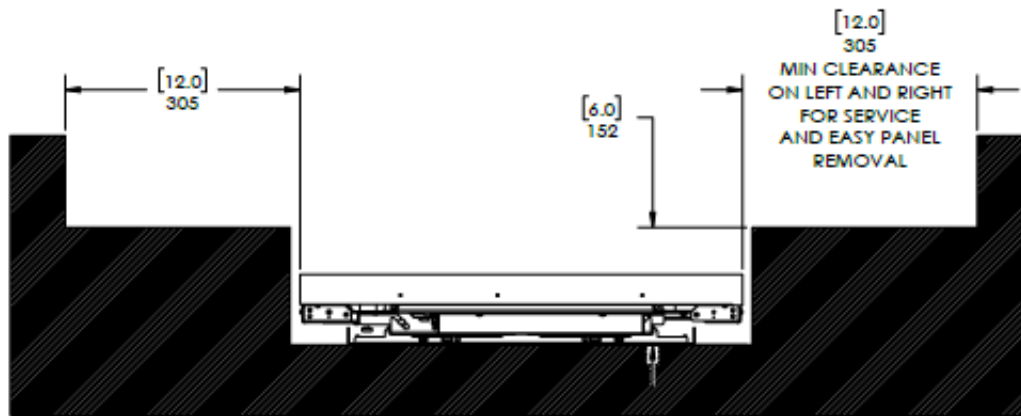


BOTTOM VIEW

MX46HDX Front View – Portrait

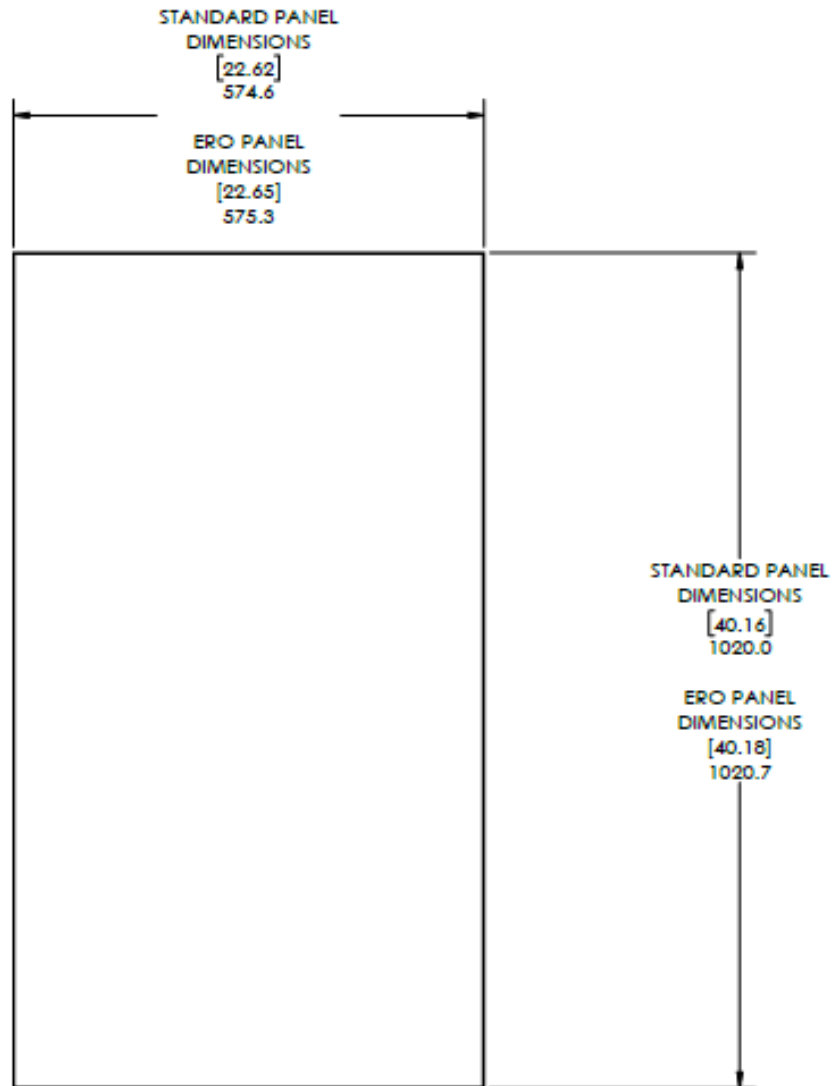

FRONT VIEW
STANDARD PANEL SHOWN

MX46HDX Rear View – Portrait

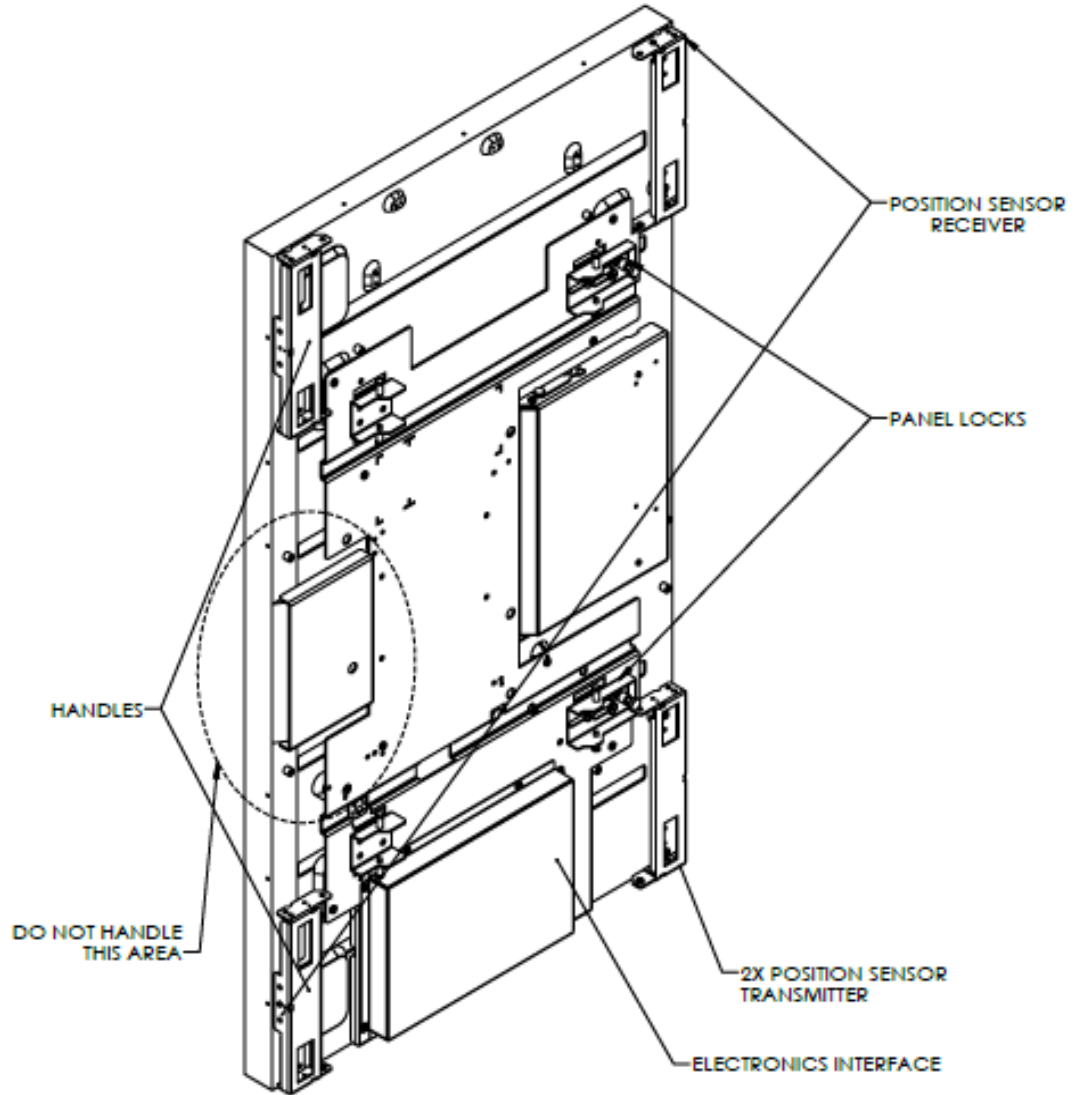


MX46HDX Side View – Portrait

WITHOUT MOUNT
STANDARD PANEL SHOWN

WITH MOUNT
ERO PANEL SHOWN

SERVICE MODE
ROTATES TO LANDSCAPE FOR SERVICE

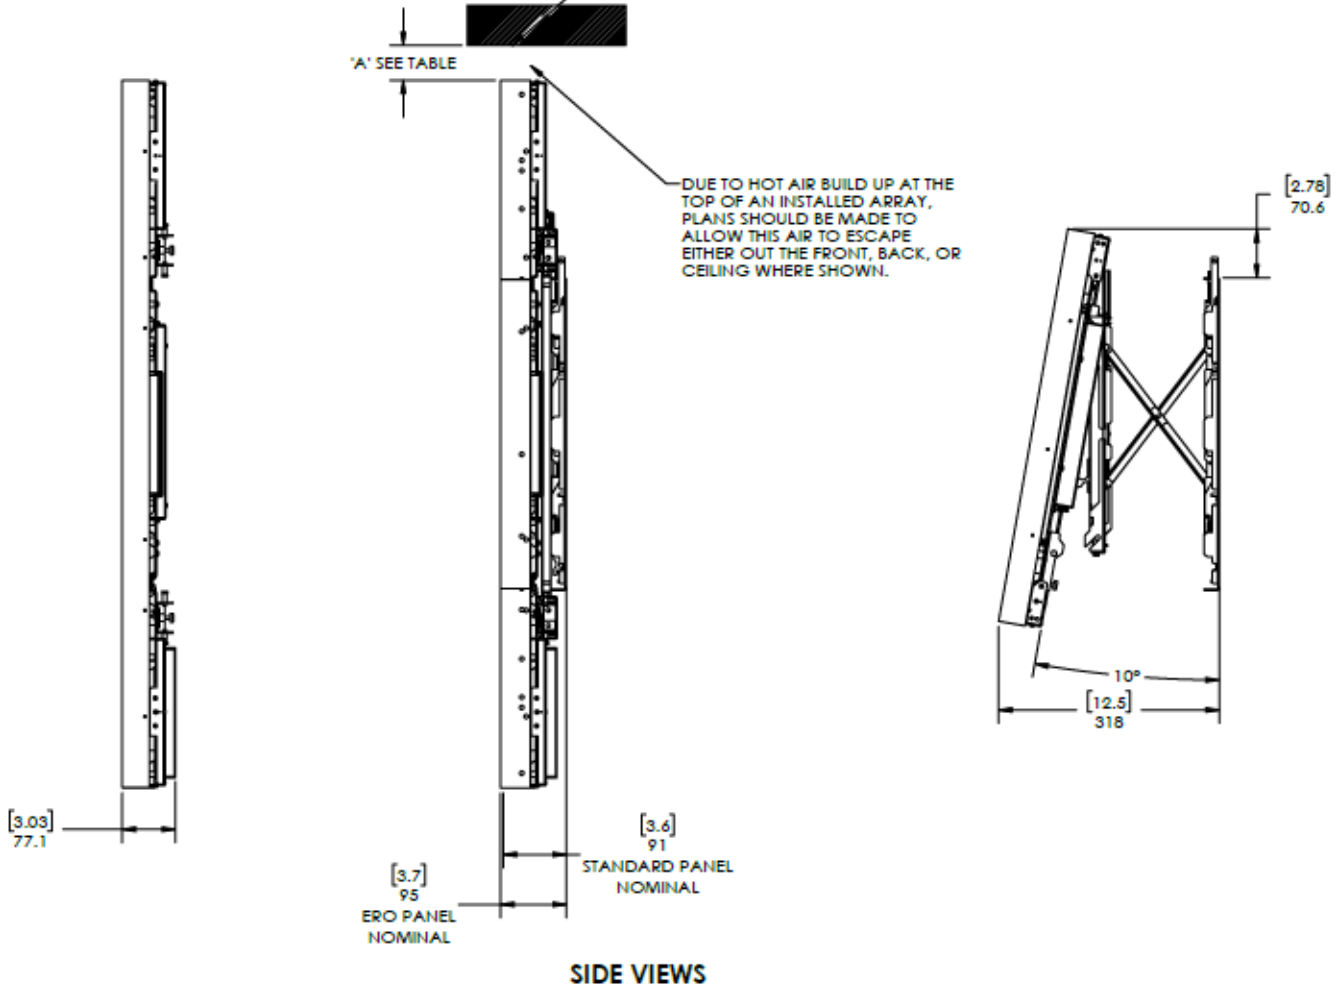


Drawings of Display Mounts


Click below to go to the drawings you want.

- LX/MX55HDU, LX/MX55HDX, and LX55HDS – Landscape
- LX/MX55HDU, LX/MX55HDX, and LX55HDS – Portrait
- LX/MX46HDU, LX46HDU-3D, MX46HDS, and LX46HDS – Landscape
- LX/MX46HDU, MX46HDS, and LX46HDS – Portrait
- MX55HDS – Landscape
- MX55HDS – Portrait
- LX46S-3D – Landscape (only)
- MX46HDX– Landscape
- MX46HDX– Portrait


LX/MX55HDU, LX/MX55HDX, and LX55HDS – Landscape

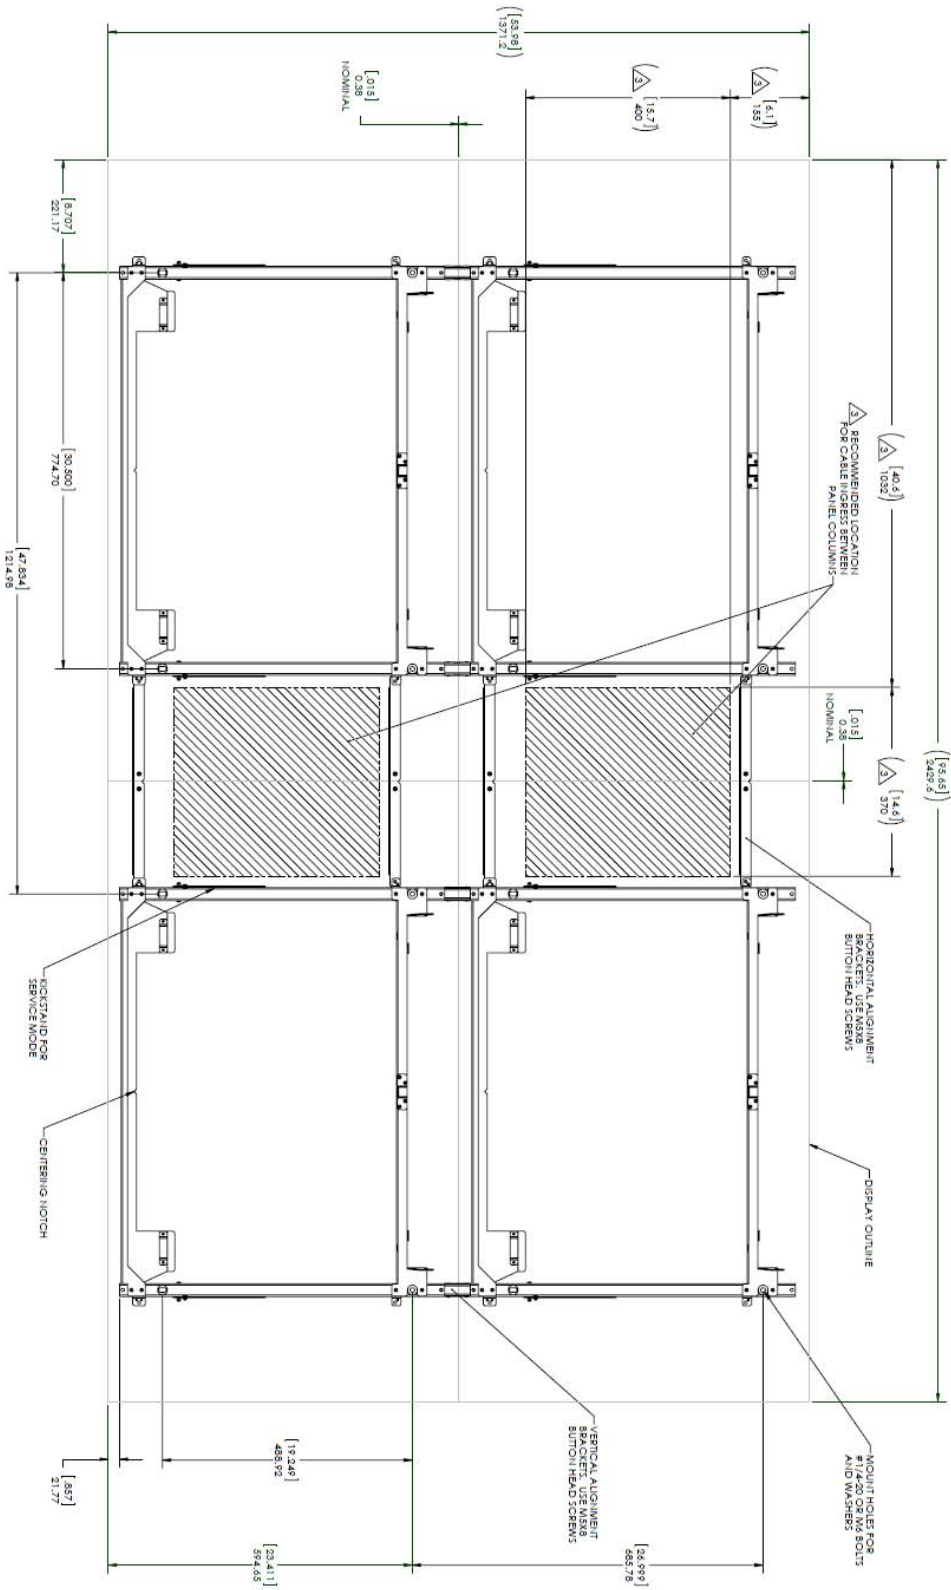


LX/MX55HDU, LX/MX55HDX, and LX55HDS – Portrait

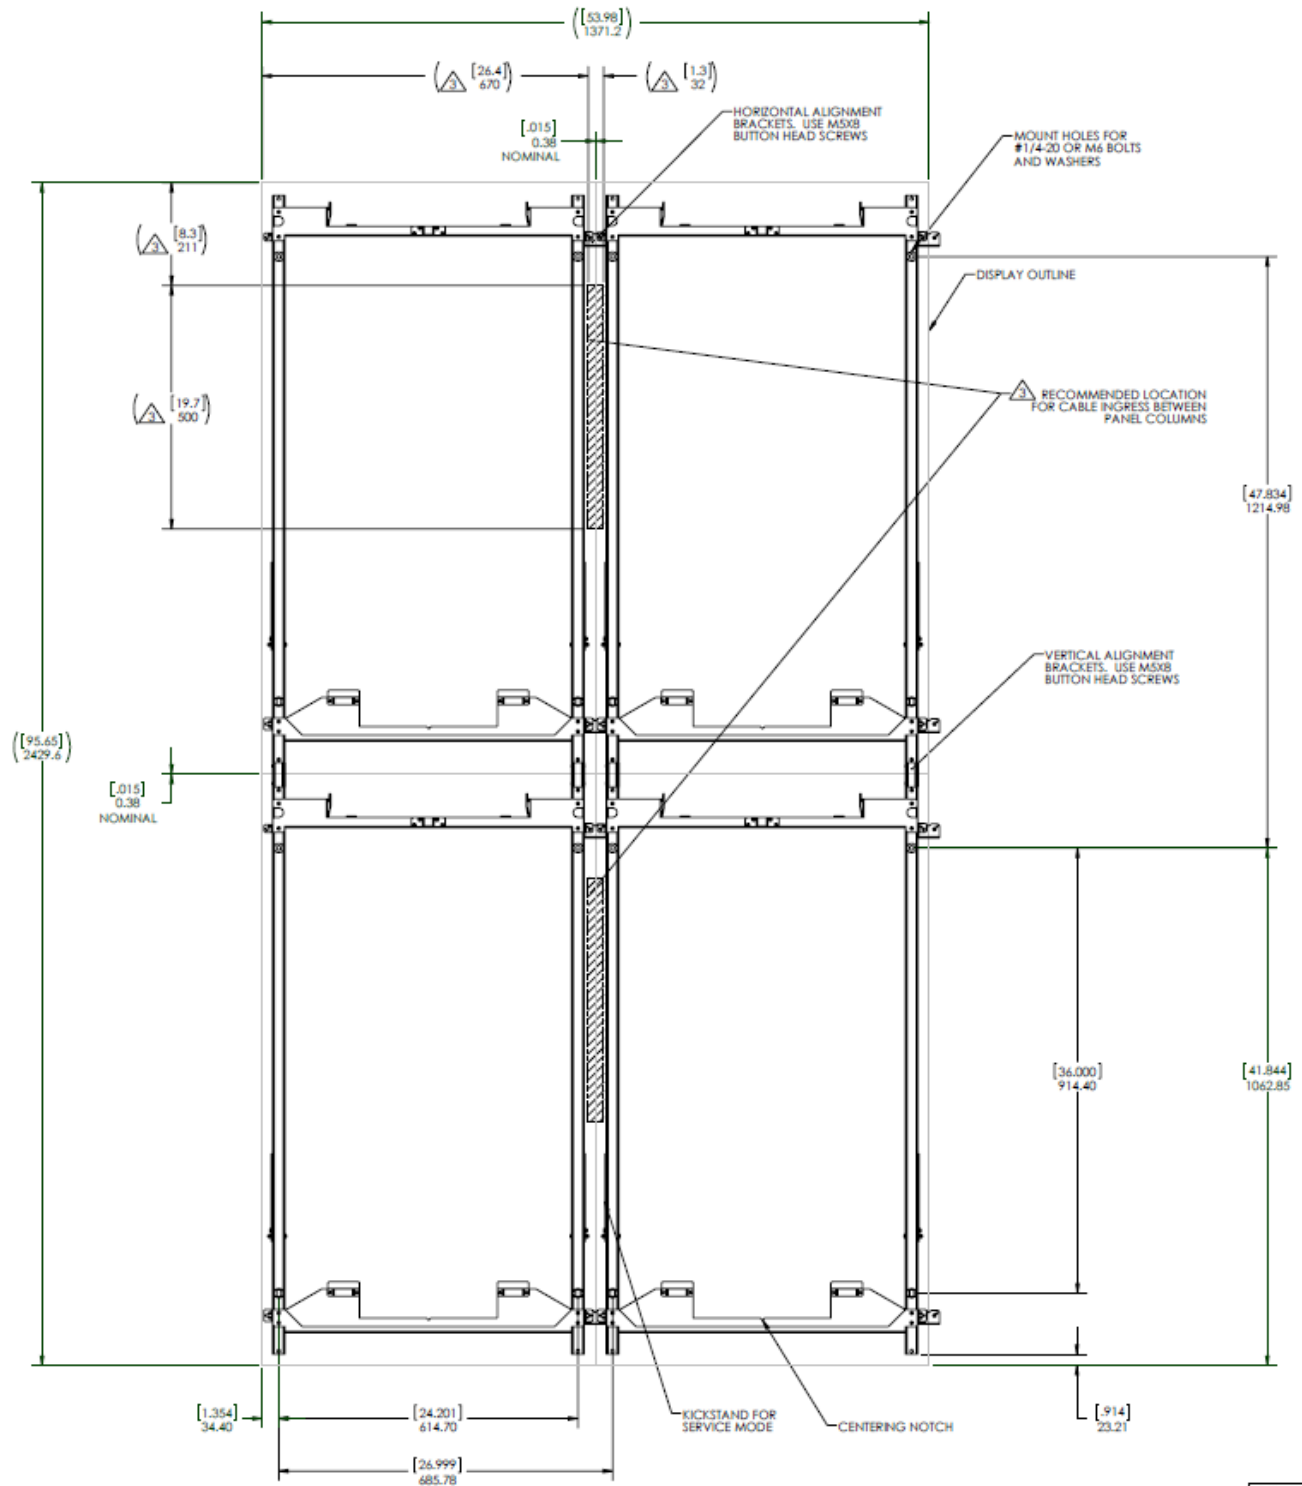


LX/MX46HDU, LX46HDU-3D, MX46HDS, and LX46HDS – Landscape

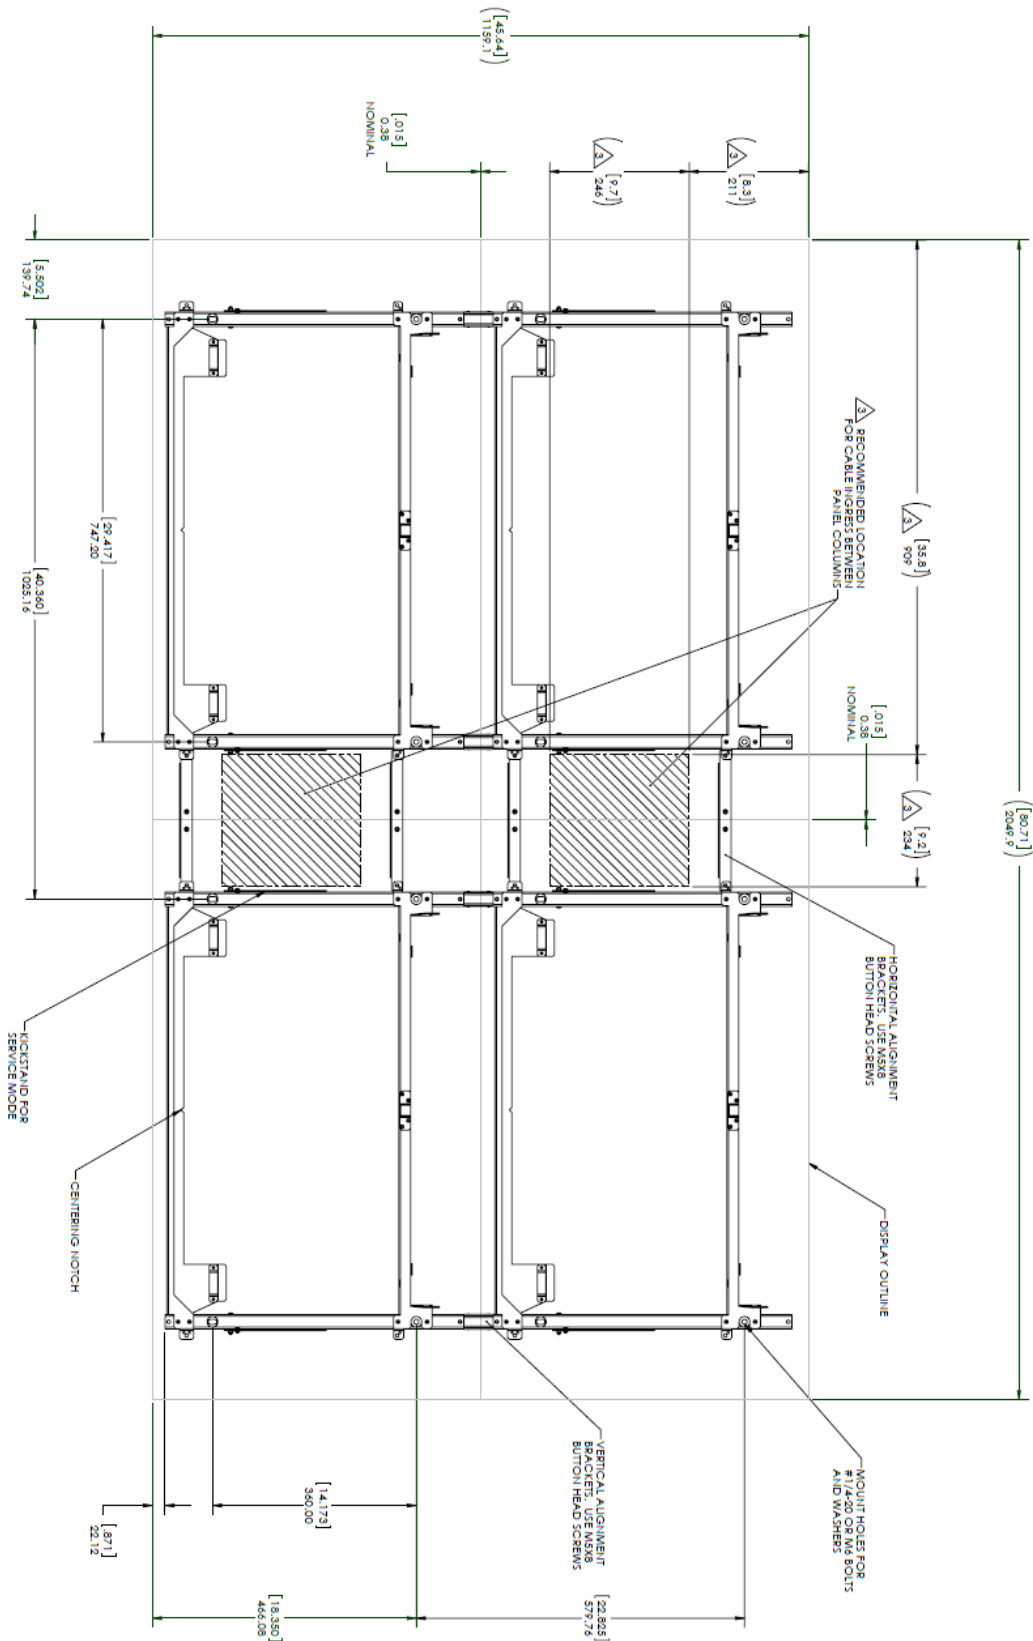


LX/MX46HDU, MX46HDS, and LX46HDS – Portrait

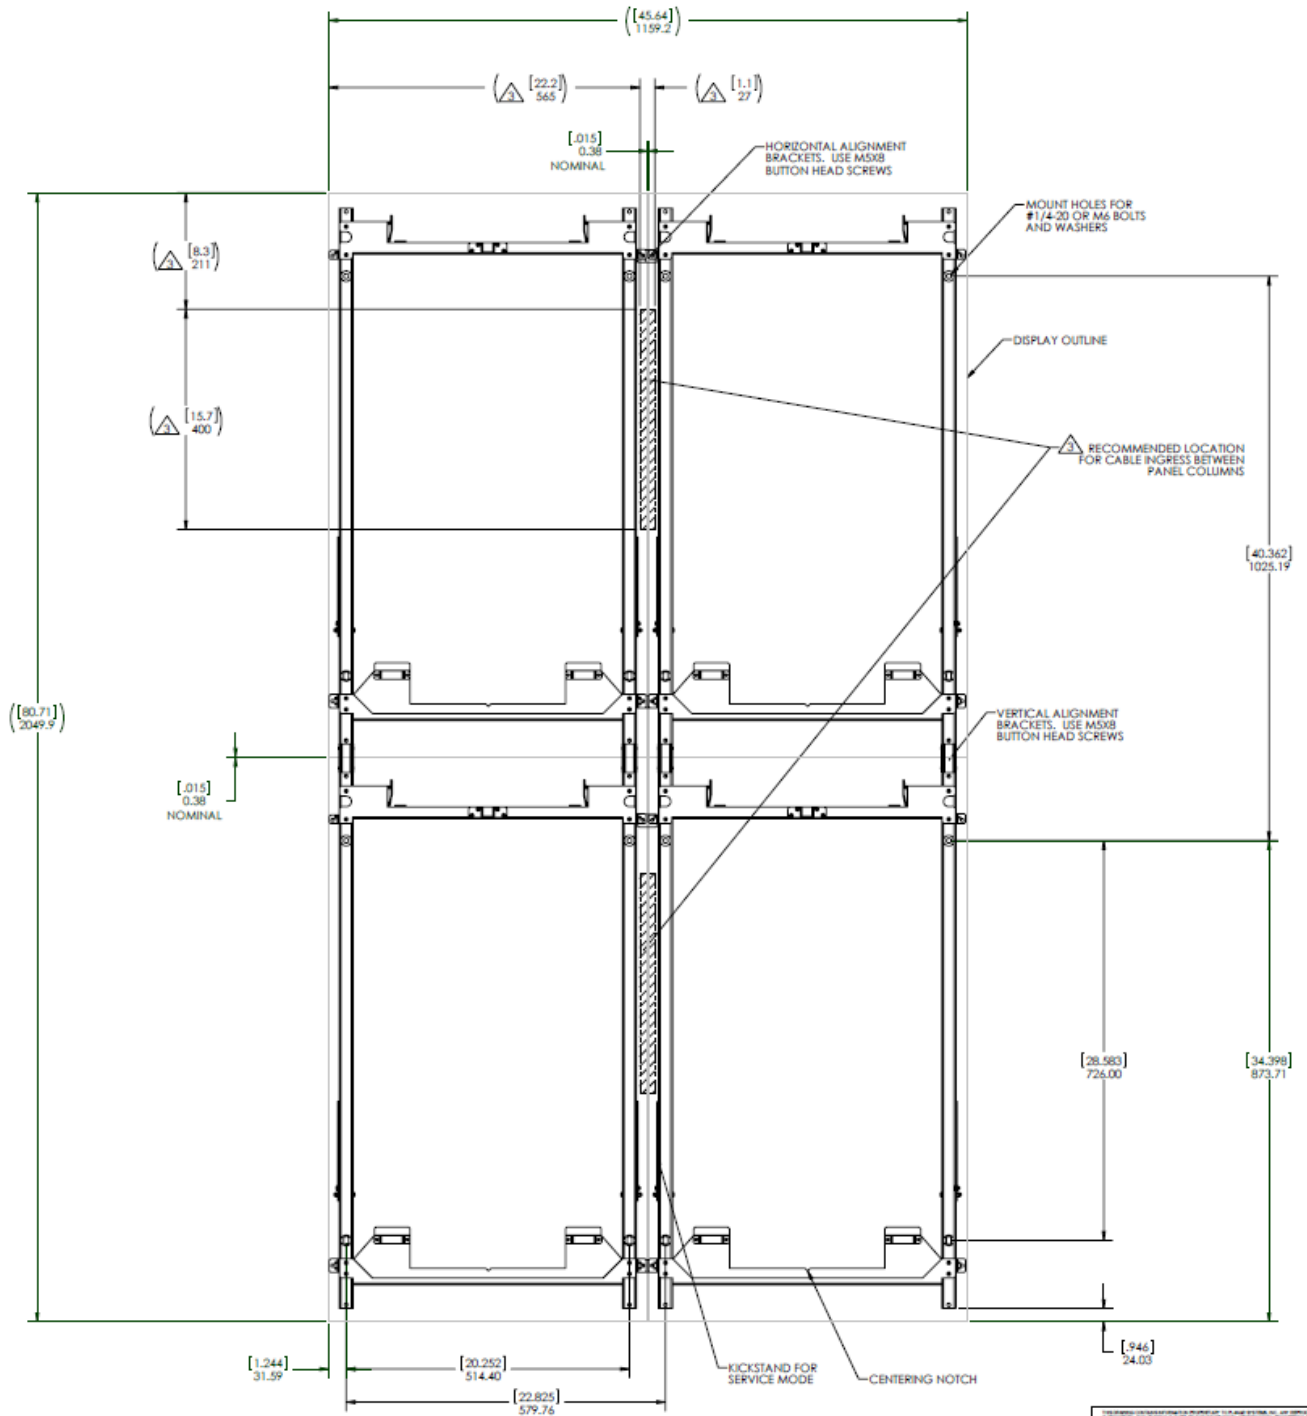


MX55HDS – Landscape

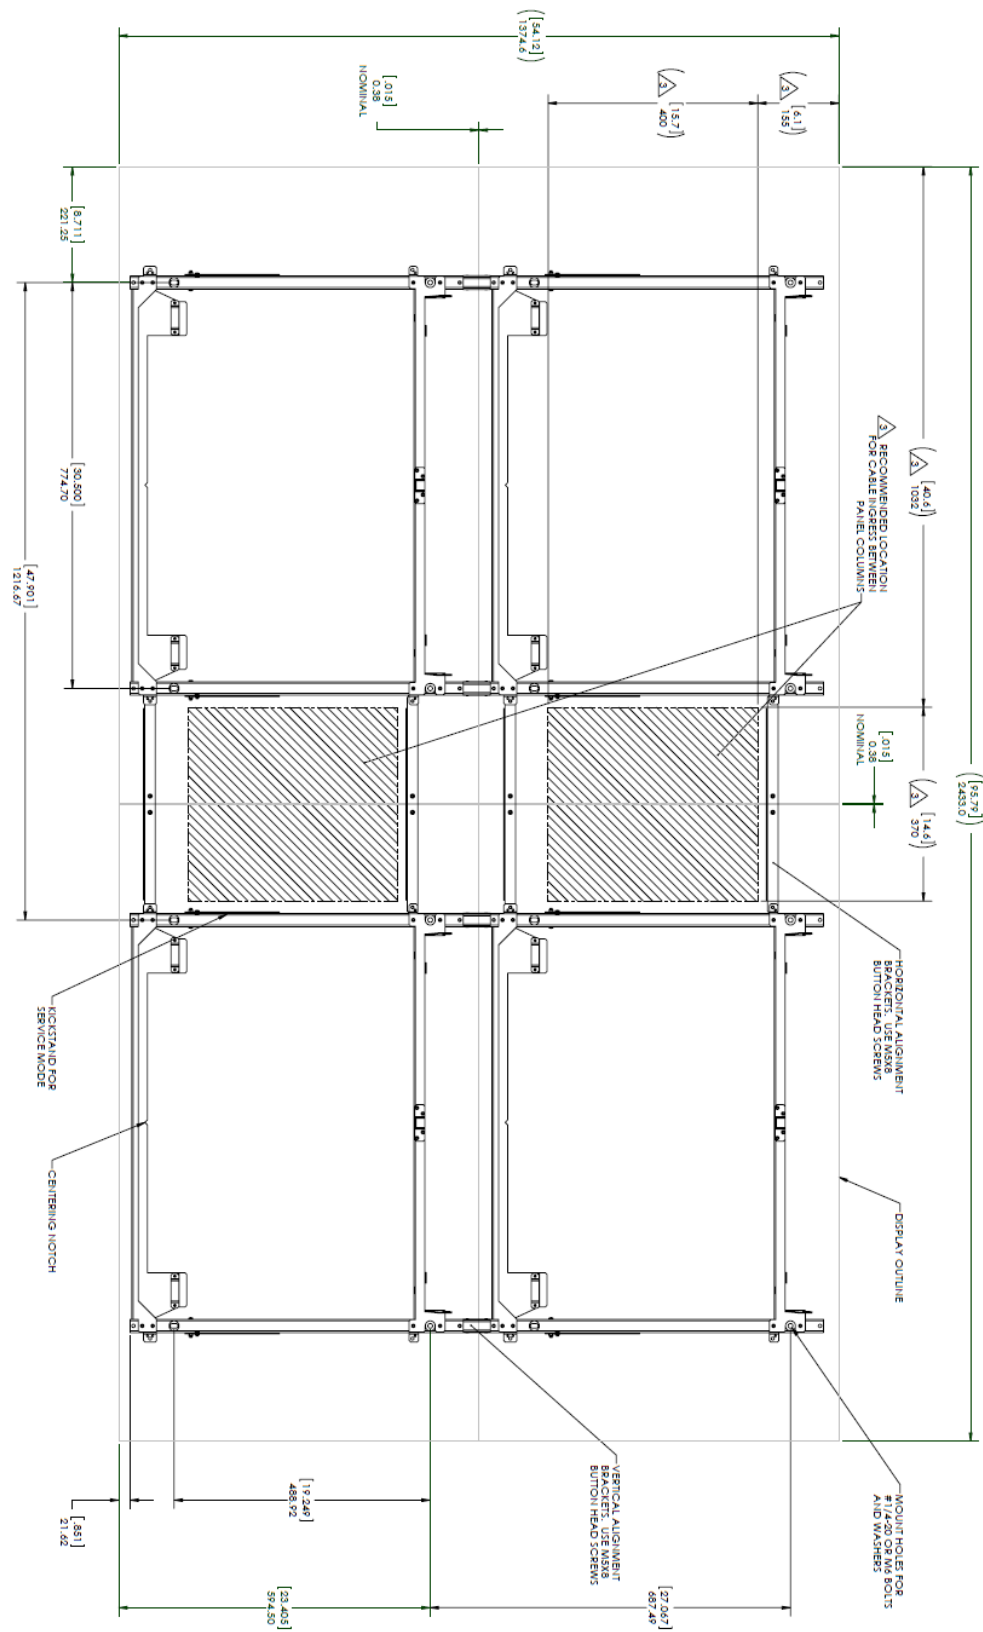


MX55HDS – Portrait

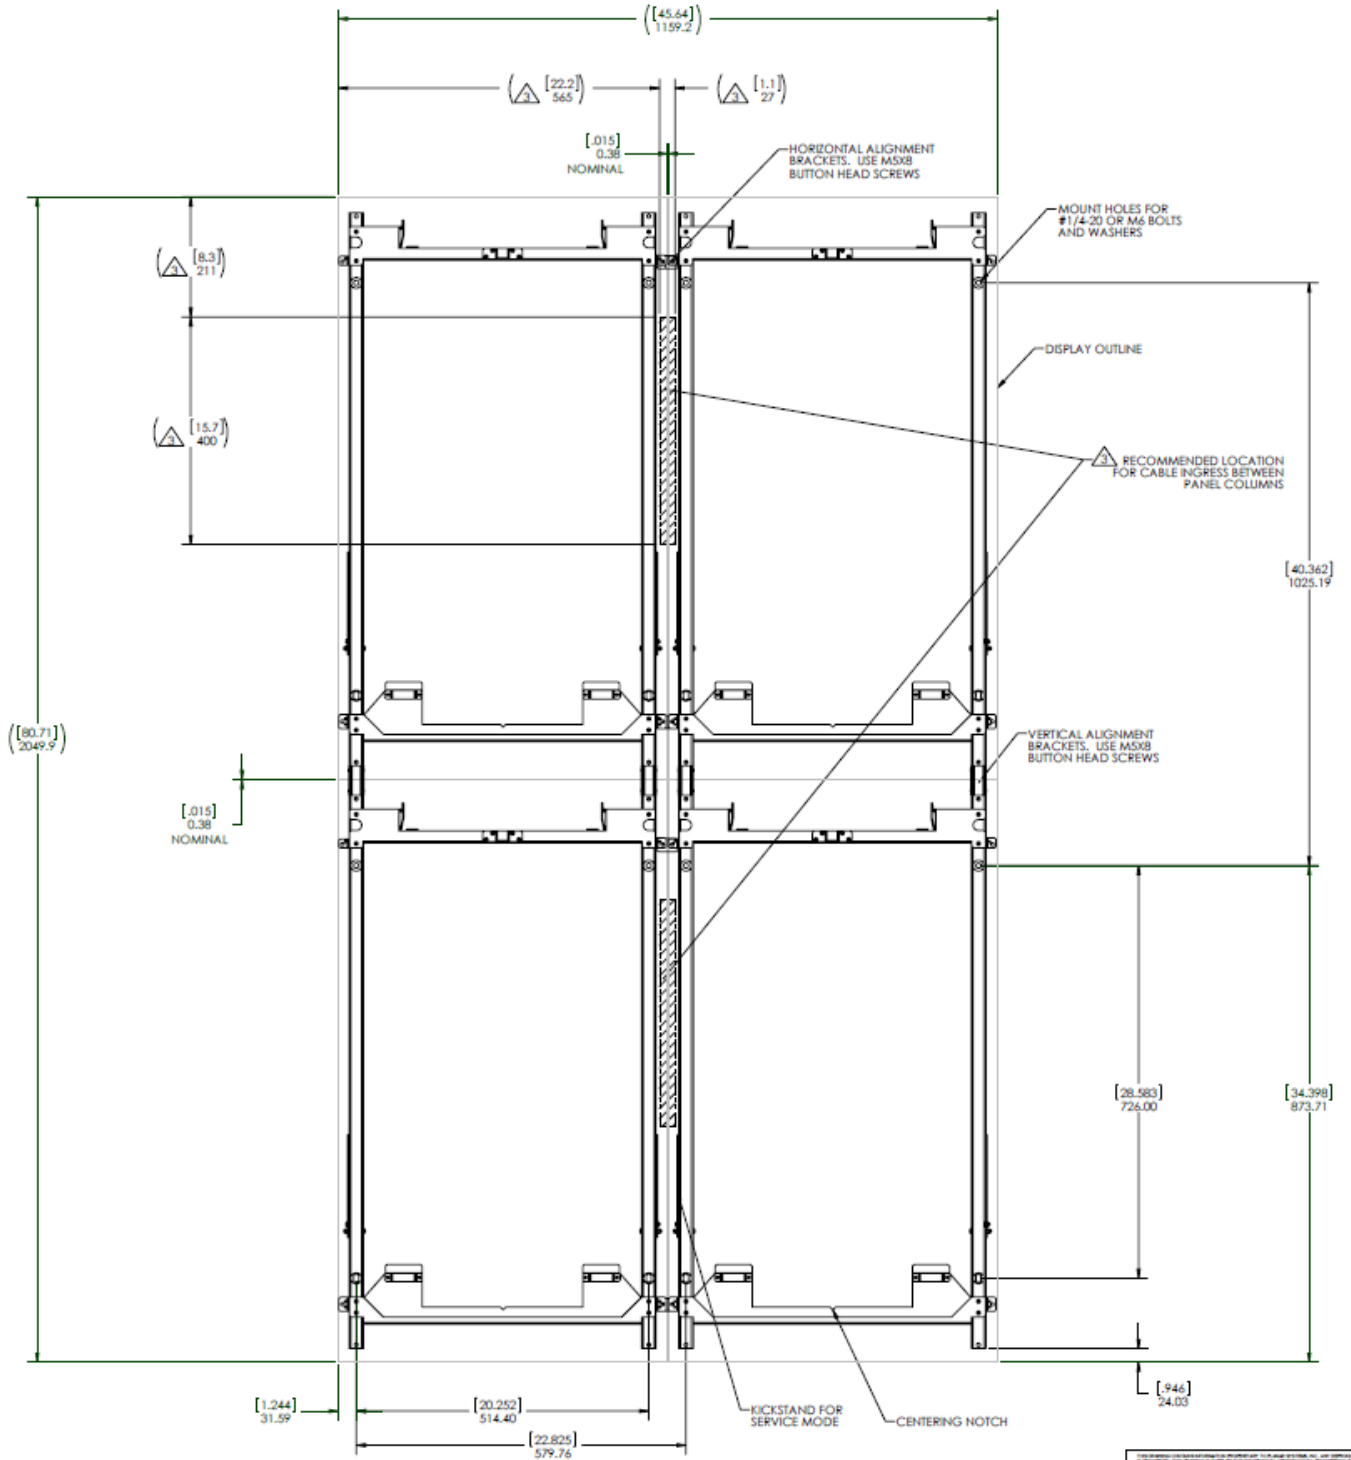


LX46S-3D – Landscape (only)

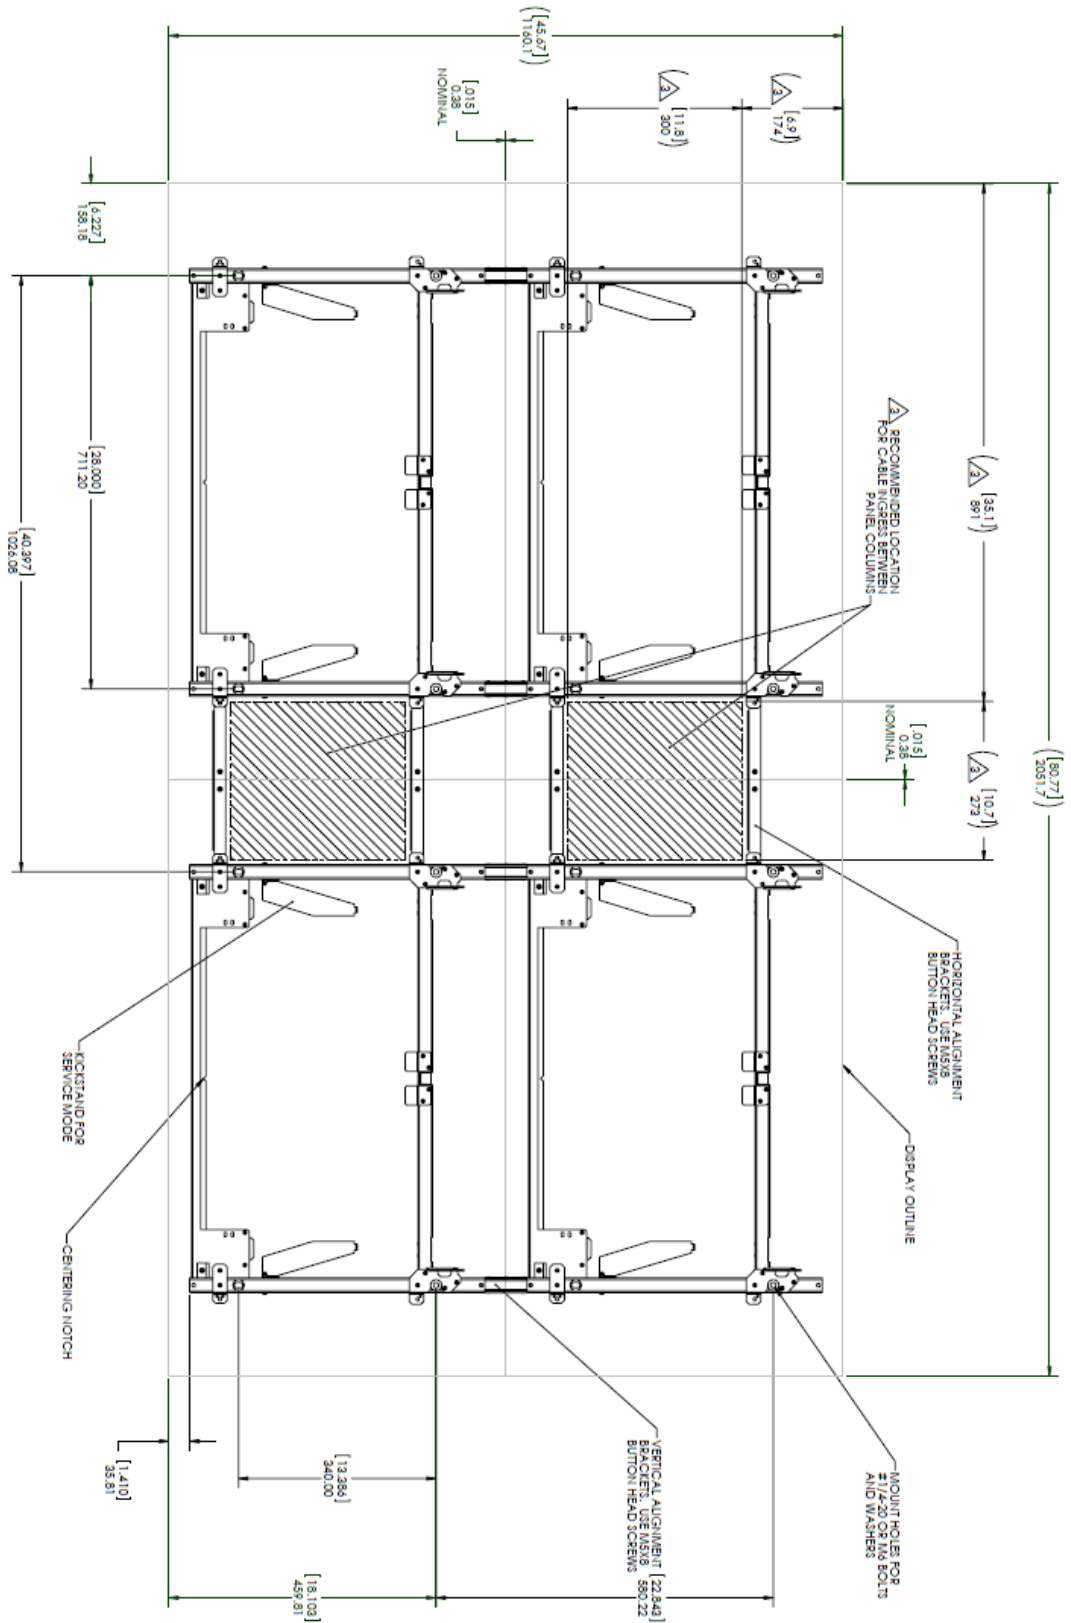

MX46HDX– Landscape

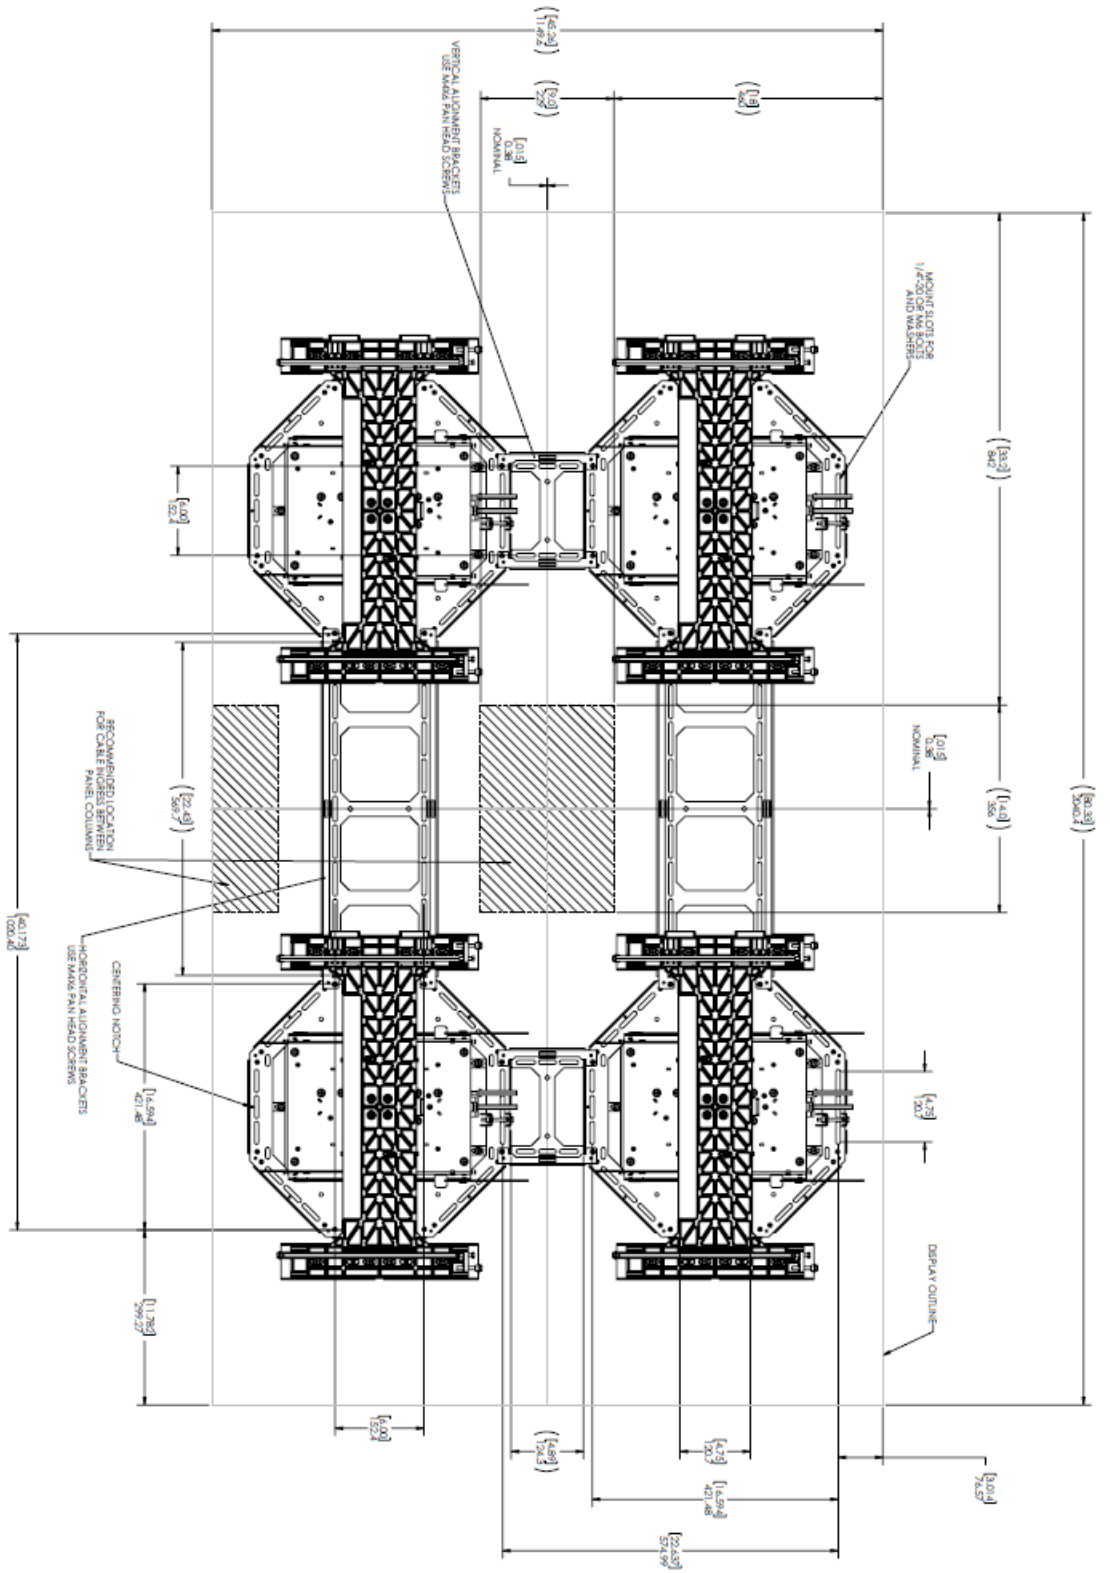




MX46HDX- Portrait

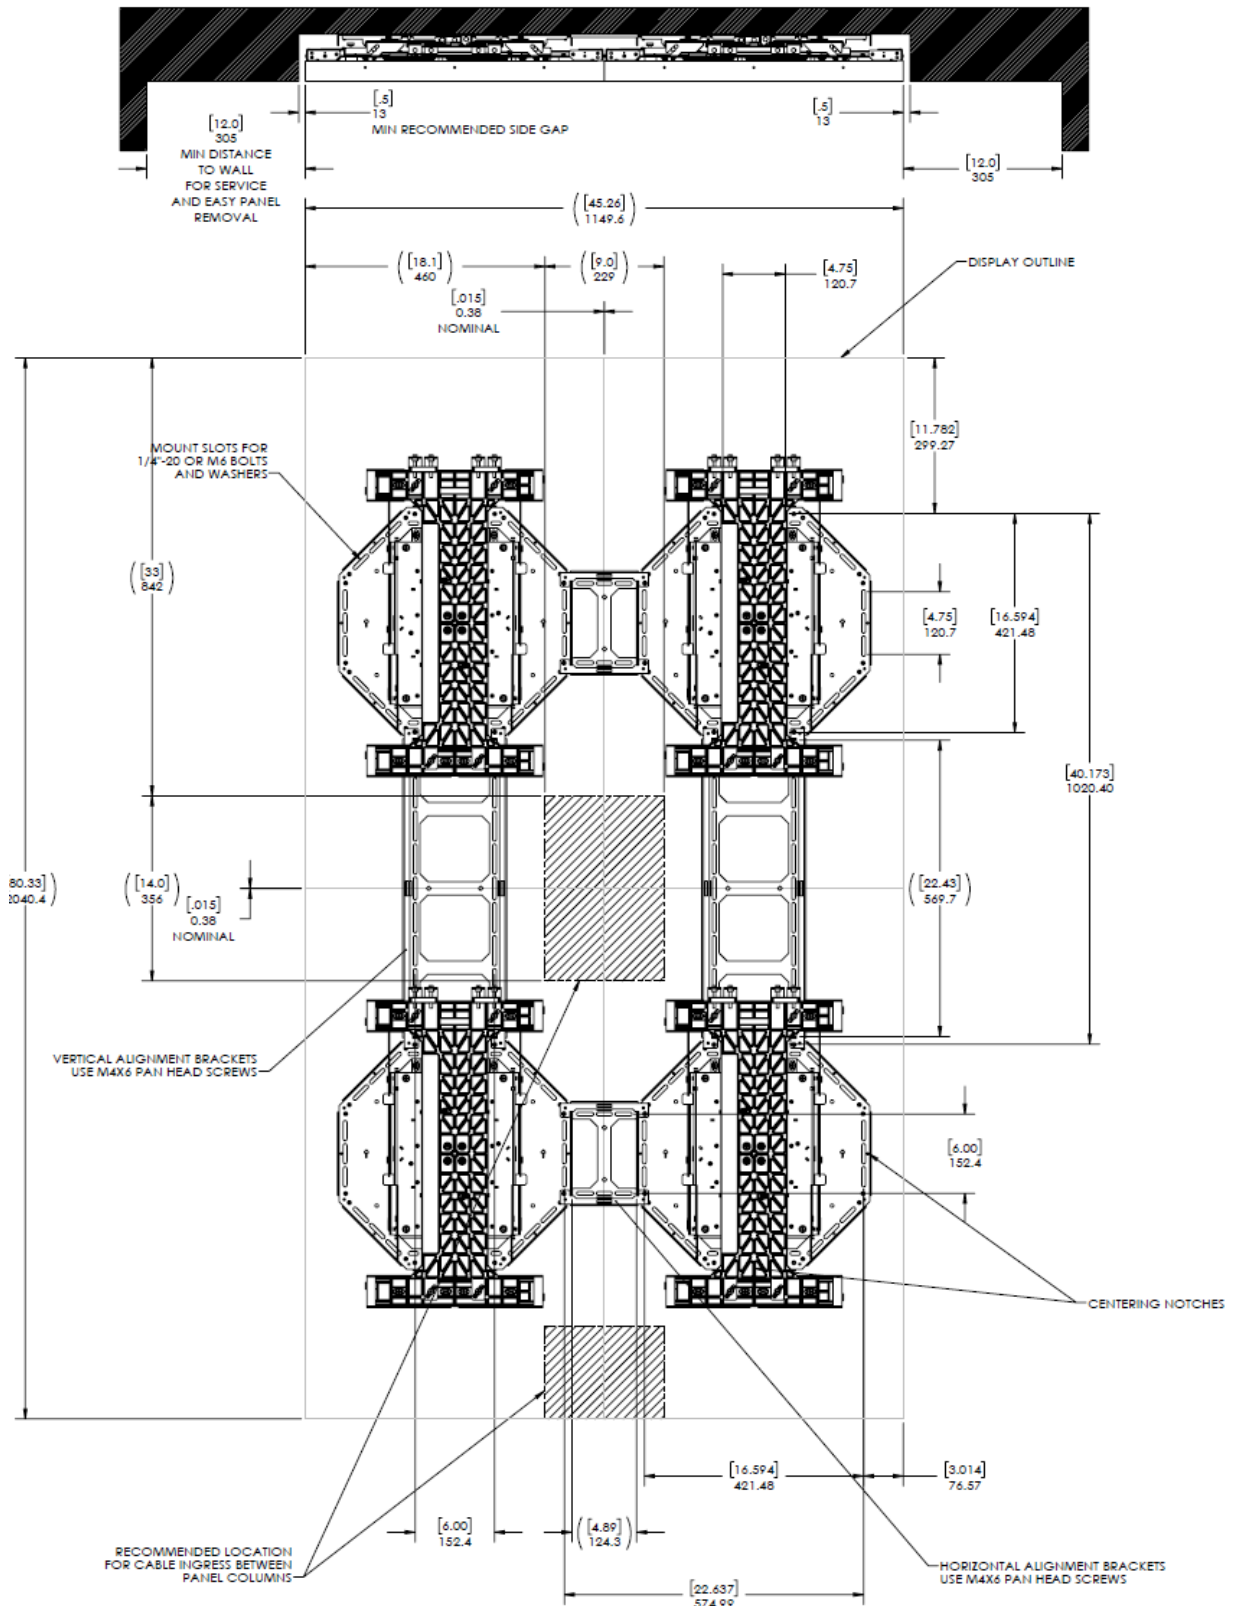


Dimensions of Electronic Components

Power Supply Module

POWER SUPPLY MODULE

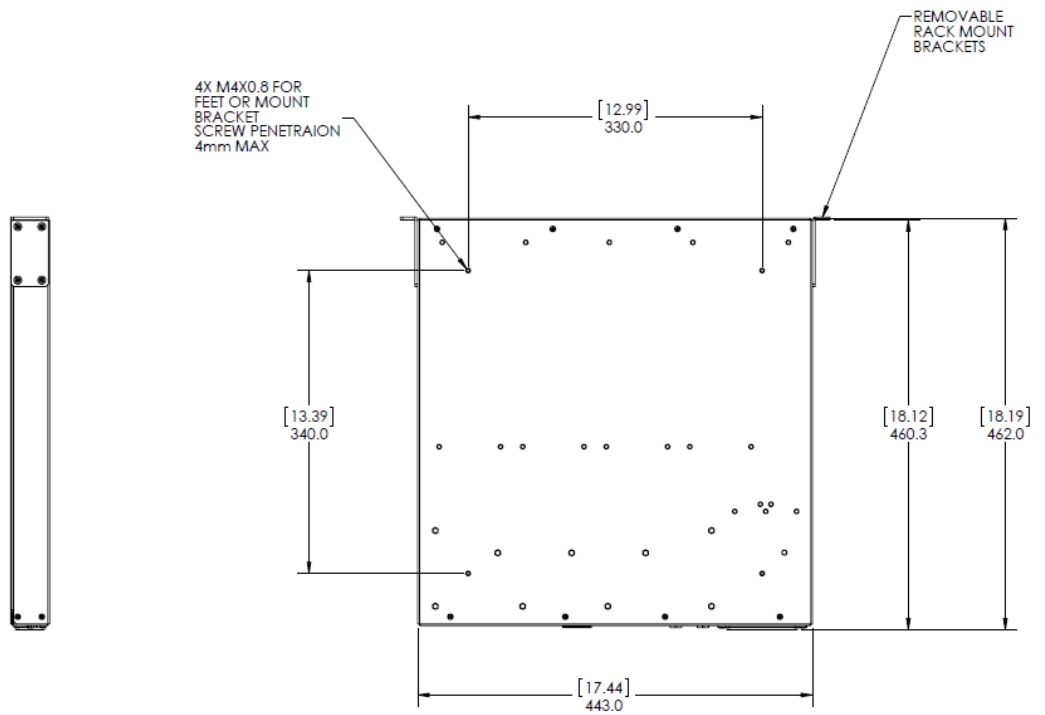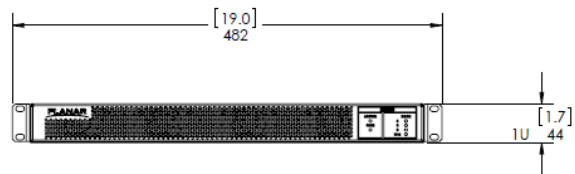
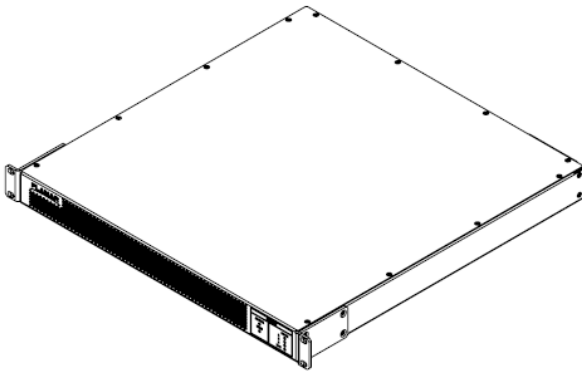


CATX Cable

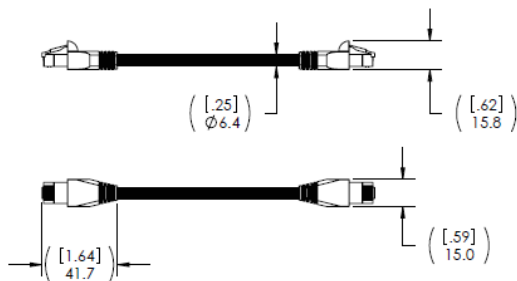


Quad Controller Module


QUAD CONTROLLER MODULE

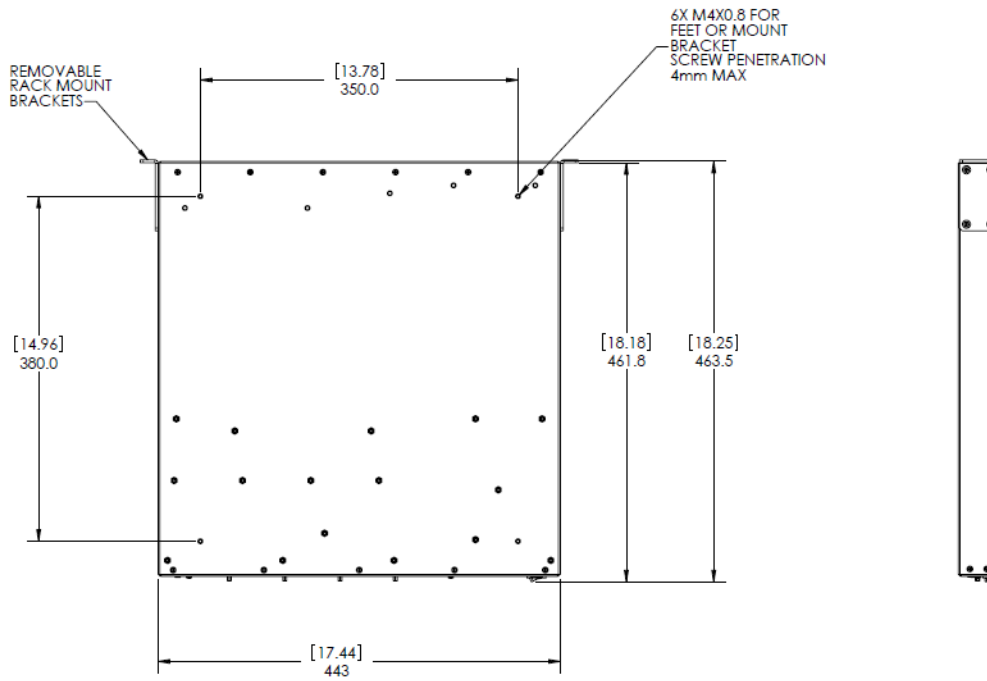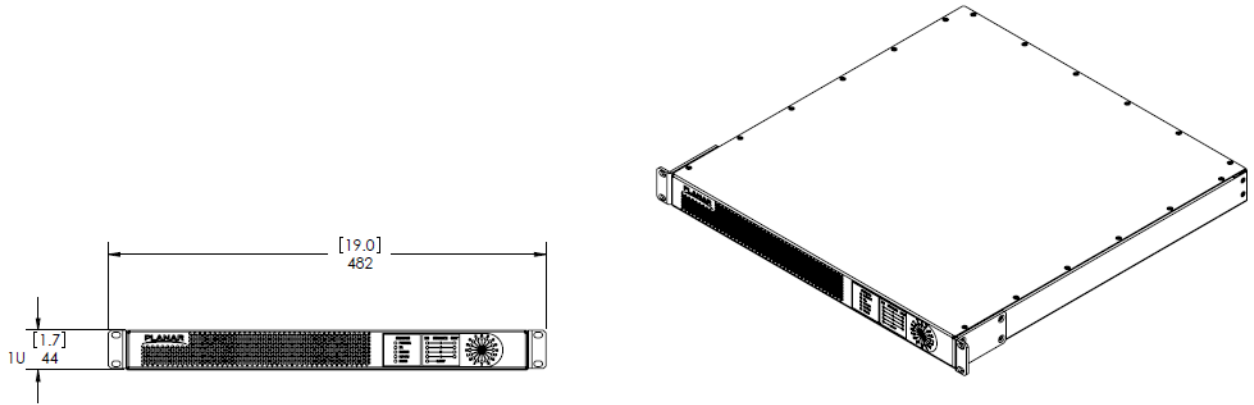

Main DC Power Cable

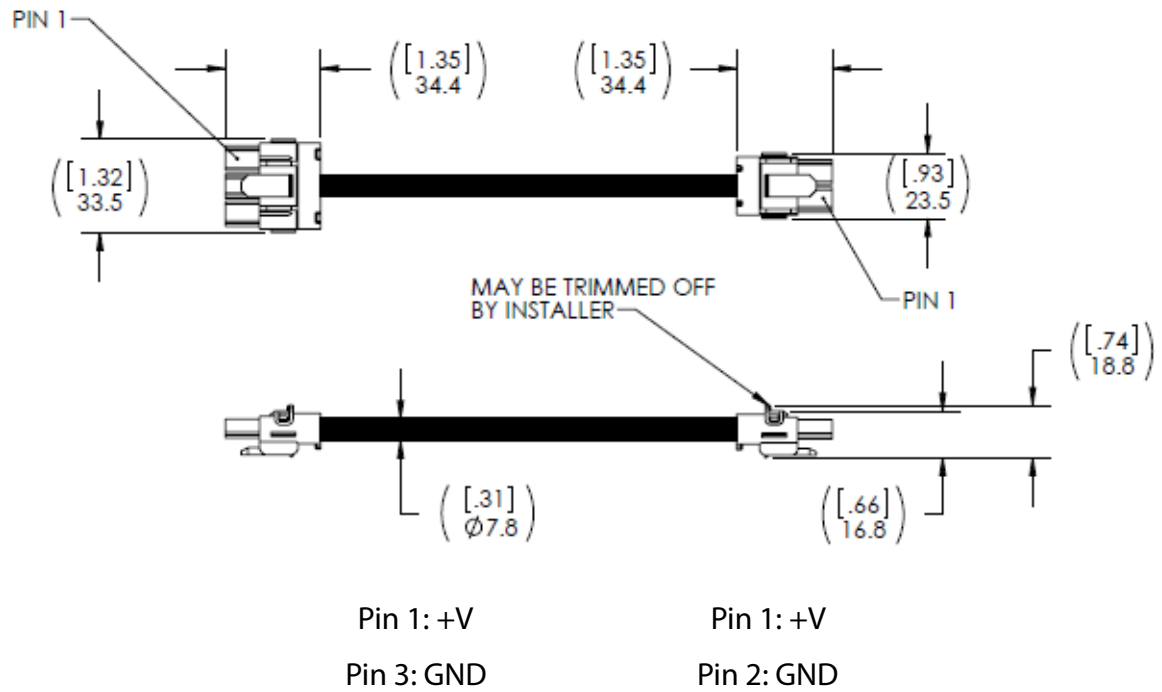

Power Supply to Quad Power Cable

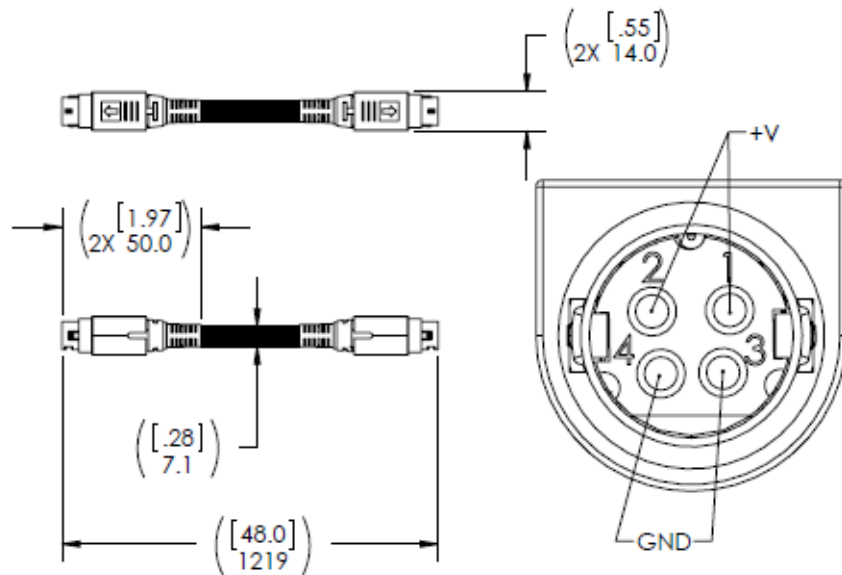

Installing Optional Accessories

These instructions show you how to install the optional stud adapter bracket for your Clarity Matrix LCD Video Wall.

Note: These instructions apply *only* to **Clarity Matrix with G2 Architecture** walls.

Wall Adapter Bracket

For each LCD module, the stud adapter bracket kit contains the following items:


- 2 Adapter brackets




- Four M6 nuts/washers



- 1 Install the LCD mount on the adapter brackets.

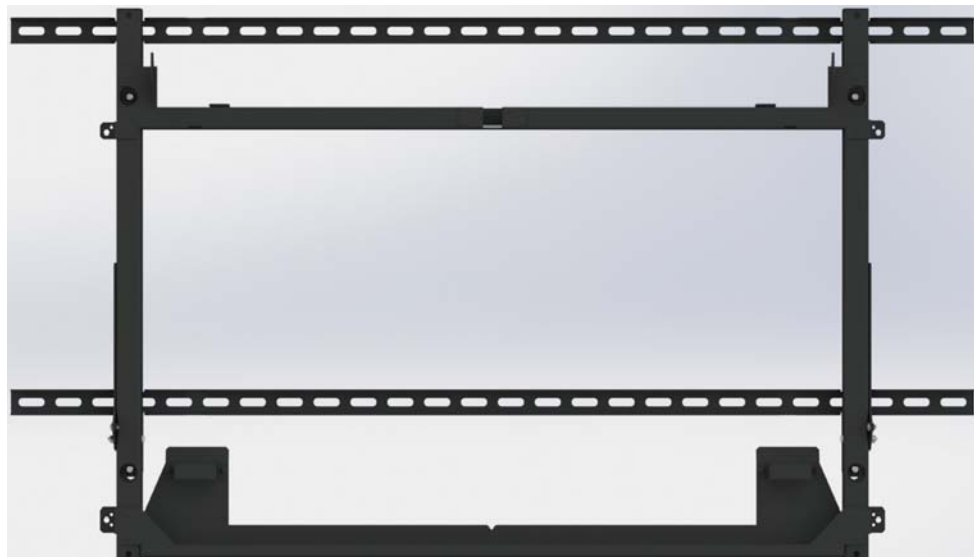

- 2 Install an M6 washer/nut in each mount point of the LCD mount.

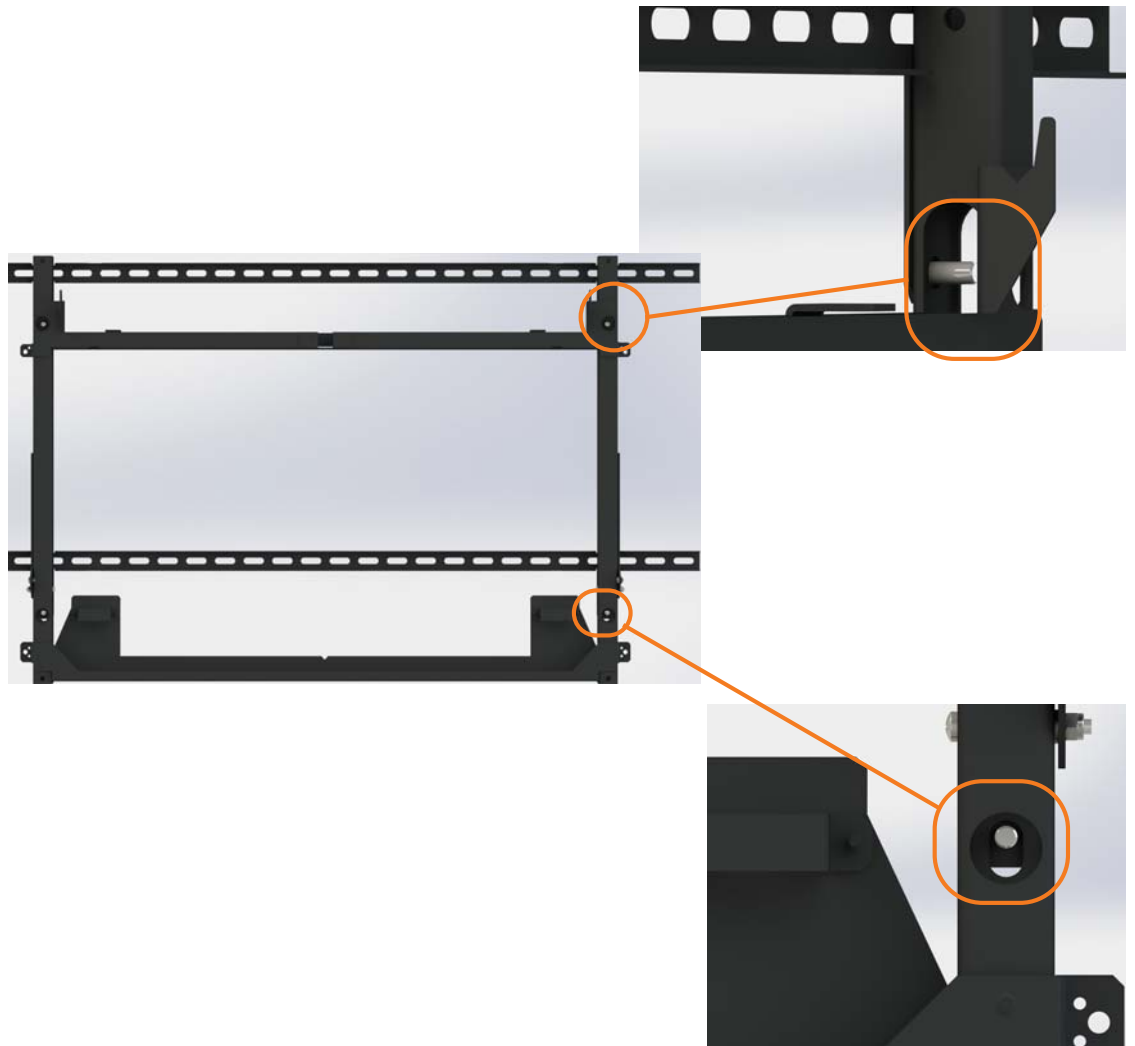

- 3 Repeat steps 1-2 for each LCD module that you want to mount to a wall.

Cosmetic Trim

For each LCD module, the cosmetic trim kit varies depending on your order:

- Left/Right, Top/Bottom Trim
- Rear trim
- M4 x 8 Phillips flathead black screws
- M4 x 25 stand-off screws
- Finish washers

Note: Trim mounting holes may be hidden under the tape around the edge of the LCD. Align trim with the edge of the LCD to find the holes.

Planar's Technical Support Website

- 1 <http://www.planar.com/support/>
- 2 Once you enter your login and password, you can access downloadable utility software, new firmware, user manuals, and service manuals.

Downloading Additional Documentation and Firmware

Some of the other documents for the Clarity Matrix, which are or will be available from the Technical Support Department website, are listed below.

Document Name	Contents
Installation Guide	Information for installers and technicians to install and configure displays.
USB Reference Manual	Technical information about the product, such as display mode information and how to use USB commands to control displays.

Downloading Utility Software

- 1 <http://www.planar.com/support/>
 - 1 Enter your login and password information.
 - 2 Navigate to the section that contains software updates and then look for Clarity Matrix.
 - 3 From the list of available software, click on the tool you need.

Regulatory Information

Manufacturer's Name: Planar Systems, Inc.
Manufacturer's Address: 1195 NW Compton Drive
Beaverton, OR 97006

Declares that the product: Clarity Matrix LCD Video Wall System with G2 Architecture
Conforms with the provisions of:

Council Directive 2014/30/EU on Electromagnetic Compatibility;

EN55032:2012 and EN55022:2010/AC:2011 Radiated and Conducted Emissions from IT Equipment

EN55024:2010 Immunity of IT Equipment

Including: EN61000-4-2 Electrostatic Discharge
EN61000-4-3 Radiated Immunity
EN61000-4-4 Electrical Fast Transients
EN61000-4-5 Line Surge
EN61000-4-6 RF Conducted Susceptibility
EN61000-4-8 Magnetic Field Immunity
EN61000-4-11 Voltage Dips and Interrupts

And: EN61000-3-2 Harmonic Current Emissions
EN61000-3-3 Voltage fluctuations and Flicker

Council Directive 2014/35/EU on Low Voltage Equipment Safety:

EN60950-1:+A2:2013 Safety of IT Equipment

The Technical Construction File required by this Directive is maintained at the corporate headquarters of Planar Systems, Inc., 1195 NW Compton Drive, Beaverton, OR 97006.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Industry Canada (ICES-003): This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Any changes or modifications to the display not expressly approved by Planar could void the user's authority to operate this equipment.

Index

Operation Numbers

1 to 1 pixels, 109
10 bits per color, allowing, 100

A

accessories

- accessory box contents, 34
- accessory kit contents, 36
- checking, 30
- customer-supplied, 38
- electronics box contents, 32
- LCD module box contents, 33
- optional, 38

adapter

- bracket, 276
- bracket for wall studs, 44

address adjustment tool, 37

addresses, system, 81

adjusting

- color balance, 92
- color temperature, 92
- walls during installation, 59

adjusting walls, tips for, 59

adjustment

- x-axis, 68
- y-axis, 67
- z-axis, 67

alignment tool, 37

allow 10 bits per color, 100

allow frame lock, 100

ambient light sensor, 113

ambient light sensor, mounting, 79

ambient operating temperature, 196

ambient threshold, 112

arrows in menus, 86

aspect ratio, 189, 190

- definition of, 107
- landscape, 191, 192
- menu, 107
- portrait, 189, 190, 191, 192

auto backlight on, 112

automatic discovery of LCDs, 91

automatic shutoff, scheduling, 104

average use per day, 129

avoiding temporary image retention, 5

B

backlight

- auto on, 112
- control menu, 93, 111
- high temperature warning, 112
- hours, 191, 192
- intensity, 112
- time, 129
- turn off with no source, 112
- usage hours, 129

backlight, hours, 189, 190

barometric pressure, 197

baseline display, 95

basic

- configuration, 85
- connections example, 14

before you begin

- installing a wall, 24
- tools/equipment list, 24

bezel compensation, 120

big picture, 118

- configuration, 143
- matrix position, 118
- setup menu, 118

big picture key, 117

black level, 93

blanking specifications, 202

bracket, stud adapter, 276

brackets

- horizontal, 34, 43
- installing of subsequent rows, 47, 52
- installing on first row, 45, 50
- mounting to a wall, 42
- vertical, 34, 43
- wall stud adapter, 44

brightness

- screen, 194
- where stored, 132

C

cable types, 13

cables

- AC power, 35
- connecting, 63
- connecting RS232, 90
- drawing of, 273
- for dual link, 163
- labels for identifying, 37
- power, 32
- power supply monitor, 32
- recommended, 13
- routing, 53, 55

checking unit status, 128

Clarity Matrix Video Wall, system architecture, 12

cleaning ERO matrix wall, 203

cleaning the LCD screen, 24

clock, setting ahead/behind one hour, 105

color balance

- adjusting, 92
- menu, 94
- multiple displays, 93
- tips, 96
- where stored, 132

color gamut, 194

color native CIE, 195

color temperature

- adjusting, 92
- understanding, 92

column, base installation, 39

complex configurations scenarios, 157

component

- heat load, 26
- power requirements, 26

configuration

- basic steps, 85
- new high resolution inputs, 163
- of a video wall, 85
- of high resolution inputs, 161
- scenarios, 141
 - clarity big picture, 143
 - individual inputs, 142
 - multiple large sub walls, 157
 - multiple sub walls, 152
 - one sub wall and individual inputs, 145
 - one sub wall per Quad Controller

- module, 149
- standard cabling, 141
- two sub wall per Quad Controller module, 150
- understanding, 140

conformity information, 280

connecting IR remote sensor, 79

connections, 80

connectors, input, switching, 134

contrast ratio, 194

contrast, where stored, 132

cooling requirements, 26

cosmetic trim, 278

customer-supplied accessories, 38

D

deleting a memory, 138

diagnostic information, 128

dimensions

- LCD module, 189, 190, 191, 192, 220
- LCD mount, 189, 190, 191, 192
- Quad Controller module, 193

display IDs, 89

drawings, 205
 cable, 273
 LX46HDS display (L), 220
 LX46HDS display (P), 223
 LX46HDS mount (L), 266
 LX46HDS mount (P), 267
 LX46HDU display (L), 235
 LX46HDU display (P), 238
 LX46HDU mount (L), 266
 LX46HDU mount (P), 267
 LX46HDU-3D display (L), 235
 LX46HDU-3D mount (L), 266
 LX46S-3D display (L), 232
 LX46S-3D mount (L), 270
 LX55HDS display (L), 226
 LX55HDS display (P), 229
 LX55HDS mount (L), 264
 LX55HDS mount (P), 265
 LX55HDU display (L), 242
 LX55HDU display (P), 245
 LX55HDU mount (L), 264
 LX55HDU mount (P), 265
 LX55HDX display (L), 249, 256
 LX55HDX display (P), 252, 259
 LX55HDX mount (L), 264
 LX55HDX mount (P), 265
 MX46HDS display (L), 206
 MX46HDS display (P), 209
 MX46HDS mount (L), 266
 MX46HDS mount (P), 267
 MX46HDU display (L), 235
 MX46HDU display (P), 238
 MX46HDU mount (L), 266
 MX46HDU mount (P), 267
 MX46HDX display (L), 256
 MX46HDX display (P), 259
 MX46HDX mount (L), 271
 MX46HDX mount (P), 272
 MX55HDS display (L), 213
 MX55HDS display (P), 216
 MX55HDS mount (L), 268
 MX55HDS mount (P), 269
 MX55HDU display (L), 242
 MX55HDU display (P), 245
 MX55HDU mount (L), 264
 MX55HDU mount (P), 265
 MX55HDX display (L), 249, 256
 MX55HDX display (P), 252, 259
 MX55HDX mount (L), 264
 MX55HDX mount (P), 265

power supply module, 273
 Quad Controller module, 274

dual link
 cabling, 163
 vs. single link, 162

E

EasyAxis, 33
 description of mounts, 14
 installing the mount, 40
 mount, 42
 weight, 191
 mounting structure, 15, 17
 equipment
 list, 24
 rack, 12
 external video processor, 117

F

factory color balance, reset to, 92
 fill both ways, 108
 fine-tune adjustment, 68, 70
 first row installation, 45
 frame
 compensation, 120
 height and width, 121
 lock, 100
 free-standing mount, 39

G

global
 menus, 87
 saving, 133
 storage, 132
 gloves for screen handling, 36
 gray test pattern, 95

H

heat load, 26
 hide source absent message, 99

high resolution inputs, 163
 cabling for dual link, 163
 configuring, 161
 dual link vs. single link, 162
 hardware limitations, 161
 setting up, 161
 support resolutions, 164
 vertical resolutions more than 2047 pixels, 164

high temperature warning, 112

horizontal, bracket, 34, 43

hours menu, 129
 where stored, 132

how NOT to handle the LCDs, 8

how to remove the liner, ERO units, 11

how to remove the liner, non, 10

how to safely handle LCDs, 9

hue, where stored, 132

humidity, 197

I

image position, 110

indicator lights on Quad Controller module, 83

individual inputs scenario, 142

input
 connectors, switching, 134
 high resolution, 161

Input Levels menu, 101

installation
 adjusting during installation, 59
 brackets
 first row, 45, 50
 on subsequent rows, 47, 52
 checklist, 30
 LCD modules
 first row, 61, 70
 subsequent rows, 69, 77
 mount points, 45
 mounting brackets to wall, 42
 of EasyAxis mount, 40
 of LCD modules, 8
 of video wall, 24, 39
 optional accessories, 276
 planning, 25
 routing cables, 53
 space requirements, 26

IR remote sensor, connecting, 79

IR sensor, 37

IR sensor, mounting, 79

IR sensor, mounting the, 79

J

justify settings, 110

K

keep original size, 109

L

labels for identifying cables, 37

LCD

average use per day, 129
 optical specifications, 194
 temperature, 128
 too large or too small, 59
 wipes for cleaning, 24

LCD module, 12, 15, 33

color CIE, 195
 color gamut, 194
 contents in box, 33
 contrast ratio, 194
 dimensions, 189, 190, 191, 192, 220
 gloves for handling, 36
 how NOT to handle the LCDs, 8
 how to safely handle LCDs, 9
 installing first row, 61, 70
 installing subsequent rows, 69, 77
 mounting structure, 17
 operating temperature, 196
 orientation, 191, 192
 screen brightness, 194
 service mode, 63
 servicing, 186, 187
 specifications, 189, 190, 191, 192
 uniformity, 194
 viewing angle, 194

LCD mount, 15, 33, 42

dimensions, 189, 190, 191, 192
 identifying center, 45
 installing, 40
 LCD too large or small, 59
 weight, 191, 192

LEDs on Quad Controller module, 83

liner, removing, ERO units, 11

Liner, removing, non-ERO units, 10

local menus, 88

- LX46HDS display (L), drawings of, 220
- LX46HDS display (P), drawings of, 223
- LX46HDS mount (L), drawing of, 266
- LX46HDS mount (P), drawing of, 267
- LX46HDU display (L), drawings of, 235
- LX46HDU display (P), drawings of, 238
- LX46HDU-3D display (L), drawings of, 235
- LX46HDU-3D mount (L), drawing of, 266
- LX46S-3D display (L), drawings of, 232
- LX46S-3D mount (L), drawing of, 270, 271, 272
- LX55HDS display (L), drawings of, 226
- LX55HDS display (P), drawings of, 229
- LX55HDS mount (L), drawing of, 264
- LX55HDS mount (P), drawing of, 265
- LX55HDU display (L), drawings of, 242
- LX55HDU display (P), drawings of, 245
- LX55HDU mount (L), drawing of, 264
- LX55HDU mount (P), drawing of, 265
- LX55HDX display (L), drawings of, 249
- LX55HDX display (P), drawings of, 252
- LX55HDX mount (L), drawing of, 264
- LX55HDX mount (P), drawing of, 265

M

- manufacturer's address, 280
- master display, 85
- Matrix layout menu, 91
- matrix position, 118
- Matrix video wall
 - depth, 40
 - LCD modules, 15
- mechanical specifications, 193
- memory
 - deleting one, 138
 - slots, 135

menu

- arrows in, 86
- aspect ratio, 107
- backlight control, 111
- big picture setup, 118
- color balance, 94
- delete (memory), 138
- hours, 129
- input levels, 101
- matrix layout, 91
- miscellaneous options, 99
- on-screen menu tree, 166
- orientation, 99
- picture, 101
- picture position, 125
- recall, 136
- rotation, 99
- save, 134
- scale mode, 107
- serial port settings, 126
- size & position, 123
- unit status, 128
- viewport, 123
- zoom, 122

menu tree

- aspect ratio, 169
- big picture, 167
- delete memory, 170
- diagnostics, 171
- input levels, 169
- main menu, 166
- matrix layout, 168
- memory, 170
- picture, 169
- picture information, 169
- picture setup, 169
- program information, 166
- quad module route, 168
- quick configure, 167
- recall memory, 170
- serial port status, 171
- unit status, 171
- wall configuration, 167

menu types

- global, 87
- local, 88
- navigational, 87
- status, 87

menus, 86

- minimum sync specifications, 202

miscellaneous options menu, where stored, 132

mount

brackets to a wall, 42

IR sensor, 79

points on a wall, 45

reconfigure for portrait, 48

mounting ambient light sensor, 79

mullion compensation, 120

multiple sub walls scenario, 152

MX46HDS display (L), drawings of, 206

MX46HDS display (P), drawings of, 209

MX46HDS mount (L), drawing of, 266

MX46HDS mount (P), drawing of, 267

MX46HDU display (L), drawings of, 235

MX46HDU display (P), drawings of, 238

MX46HDU mount (L), drawing of, 266

MX46HDU mount (P), drawing of, 267

MX46HDX display (L), drawings of, 256

MX46HDX display (P), drawings of, 259

MX46HDX mount (L), drawing of, 271

MX46HDX mount (P), drawing of, 272

MX55HDS display (L), drawings of, 213

MX55HDS display (P), drawings of, 216

MX55HDS mount (L), drawing of, 268

MX55HDS mount (P), drawing of, 269

MX55HDU display (L), drawings of, 242

MX55HDU display (P), drawings of, 245

MX55HDU mount (L), drawing of, 264

MX55HDU mount (P), drawing of, 265

MX55HDX display (L), drawings of, 249

MX55HDX display (P), drawings of, 252

MX55HDX mount (L), drawing of, 264

MX55HDX mount (P), drawing of, 265

on-screen menus, 86

operating temperature, 196

LCD module, 196

power supply module, 196

Quad Controller module, 196

operating time of LCD, 130

optical specifications, 194

optional accessories, 38

installing, 276

optional stud adapter bracket, 276

orientation of LCD module, 191, 192

orientation of menus, 99

overwriting a memory, 135

P

parameters, saved, 133

Picture menu, 101

picture position, 125

placing off-board equipment, 57

planning your installation, 25

position, where stored, 132

power cable, 32

power requirements, 26

power supply module, 12, 22, 32

drawing of, 273

LED indicators, 22

operating temperature, 196

placing, 57

specifications, 193

power supply monitor cable, 32

power supply, identifying module type, 23

pressure, barometric, 197

N

native

color, 195

resolution, 196

native color balance, reset to, 92

navigational menus, 87

normal use thermal guidelines, 6

O

off-board equipment, 21

off-board equipment, placing, 57

one sub wall and individual inputs, 145

Q

Quad Controller module, 12, 21, 32
 address adjustment tool, 37
 digital video inputs, 159
 dimensions, 193
 drawing of, 274
 operating temperature, 196
 placing, 57
 route menu, 160
 route menu, understanding, 159
 RS485 connections, 79
 specifications, 193
 status LEDs, 83
 temperature, 128
 understanding, 160
 weight, 193

R

rear clearance requirements, 189, 190, 191, 192
 recall, 134
 recommended usage, 5
 regulatory information, 280
 remote control, 86
 reset to factory, 92
 reset to native, 92
 resetting color balance, 92
 resolution
 of LCD module, 196
 supported high resolutions, 164
 vertical more than 2047 pixels, 164
 rotate menu, 99
 rotation menu, 99
 routing
 cables, 53, 55
 sources, 141
 RS232
 communication, 90
 connecting cables, 90
 connector, 193
 RS485
 connector, 193
 Quad Controller connections, 79

S

safety, 2

saturation, where stored, 132
 save, 134
 saved parameters, 133
 saving your work, 134
 scale mode settings, 107, 108
 scheduling events, 104
 screen brightness, 194
 sensor, ambient light, mounting, 79
 sensor, IR remote, connecting, 79
 serial port
 diagnostic values, 127
 settings, 126
 service mode of LCD module, 63
 service plans, ii
 servicing LCD modules, 186, 187
 setting clock ahead/behind one hour, 105
 sharpness, 110
 sharpness, where stored, 132
 signal compatibility, 198
 single link vs. dual link, 162
 size, where stored, 132
 slave displays, 85
 slot memory, 135
 source absent message, hiding the, 99
 source routing, 141
 space requirements for installation, 26
 specifications
 environmental, 196
 input minimum sync and blanking, 202
 LCD module, 189, 190, 191, 192
 LCD optical, 194
 mechanical, 193
 power supply module, 193
 Quad Controller module, 193
 signal compatibility, 198
 standard
 cabling scenarios, 141
 cabling with restrictions scenarios, 149, 150, 152
 wall installation, 39
 Status LEDs on Quad Controller, 83
 status menus, 87
 stud adapter bracket, 276
 switching input connectors, 134
 system
 architecture, 12
 time, 129
 usage
 hours per day, 129
 number of days over 20 hours, 130
 System Addresses, 81

T

temperature
 of LCD, 128
 of Quad Controller module, 129
 operating, 196
 requirements for normal use, 6
 warning, 112

temporary image retention, 5, 111

test pattern
 gray, 95
 white, 94

thermal guidelines, 6

tiling the video wall, 117

tips for wall installation, 59

TIR, temporary image retention, 111

tools/equipment list, 24

trim for outside of video wall, 278

troubleshooting, 178

turning the display(s) on/off, 104

U

understanding
 color temperature, 92
 quad module route menu, 159
 wall configuration, 140

uniformity of LCD module, 194

unit
 column and row, 119
 status menu, 128

unpacking accessories, 30

usage information, 5

V

ventilation requirements, 26

vertical bracket, 34, 43

video
 controls, 93
 inputs digital, 159

viewing angle of LCD, 194

viewport, 123

W

wall
 configuration, 140, 141
 cosmetic trim, 278
 installation, 39
 adjusting during, 59
 before you build, 39
 column base, 39
 free-standing mount, 39
 options, 39
 standard, 39
 mode, 119
 width and height, 118

warranty information, ii

weight, 191
 LCD module, 191, 192
 LCD mount, 191, 192
 Quad Controller module, 193

white level, 93

white test pattern, 94

X

x-axis adjustment, 68

Y

y-axis adjustment, 67

Z

z-axis adjustment, 67

zoom menus, 122